

# plugin 466

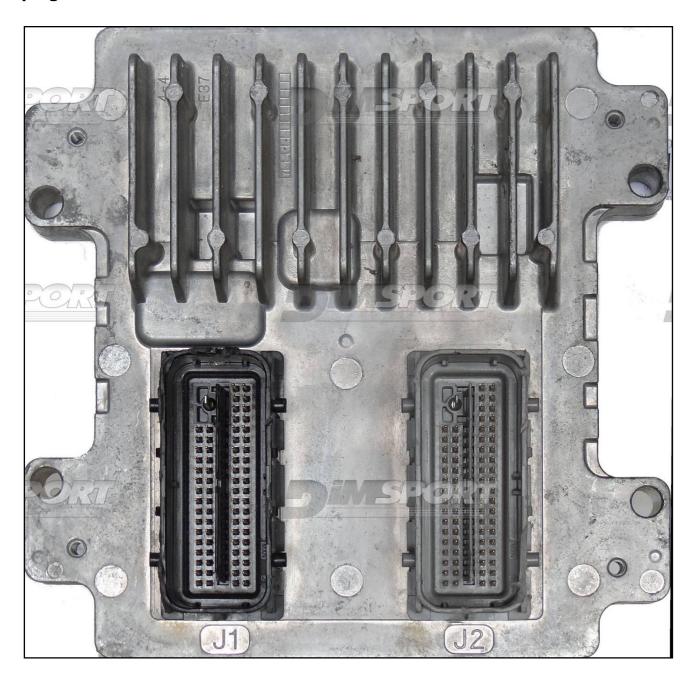


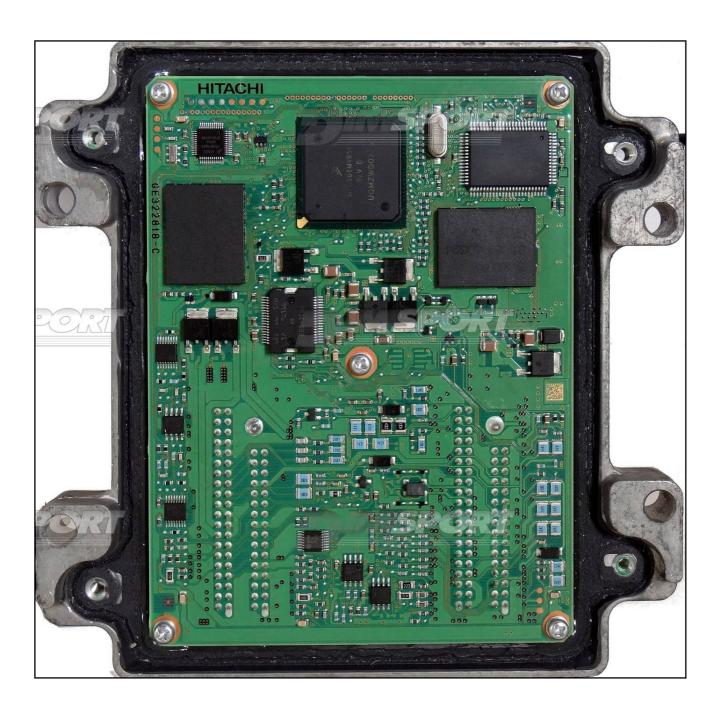


#### **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.


| COLORE FILO      | DESCRIZIONE                     |
|------------------|---------------------------------|
| WIRE COLOUR      | DESCRIPTION                     |
| ROSSO            | POSITIVO DIRETTO                |
| RED              | POWER BATTERY                   |
| ARANCIO          | POSITIVO SOTTO QUADRO           |
| ORANGE           | POWER SWITCH ON                 |
| NERO             | MASSA                           |
| BLACK            | GND                             |
| GIALLO<br>YELLOW | KLINE                           |
| VERDE<br>GREEN   | CAN LOW                         |
| BIANCO<br>WHITE  | ICAN HIGH                       |
| GRIGIO           | POL4                            |
| GREY             | BOOT                            |
| BLU              | POL5                            |
| BLUE             | CNF1                            |
|                  | TENSIONE PROG.<br>PROG. VOLTAGE |
| MARRONE<br>BROWN | RESET                           |

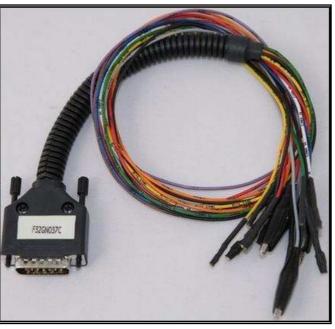

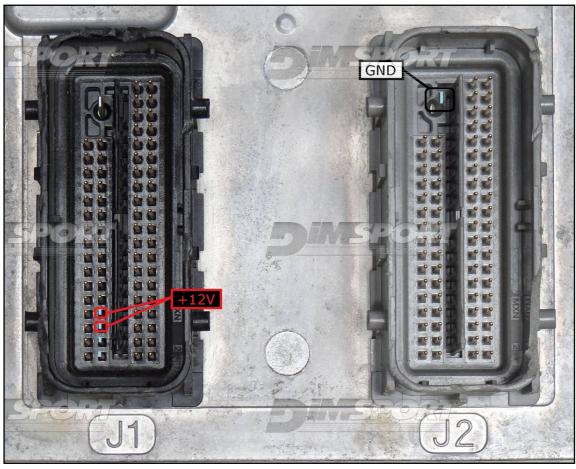

#### **FREE WIRING CONNECTION**

Connect the F34NTF51 wiring as explained here below:

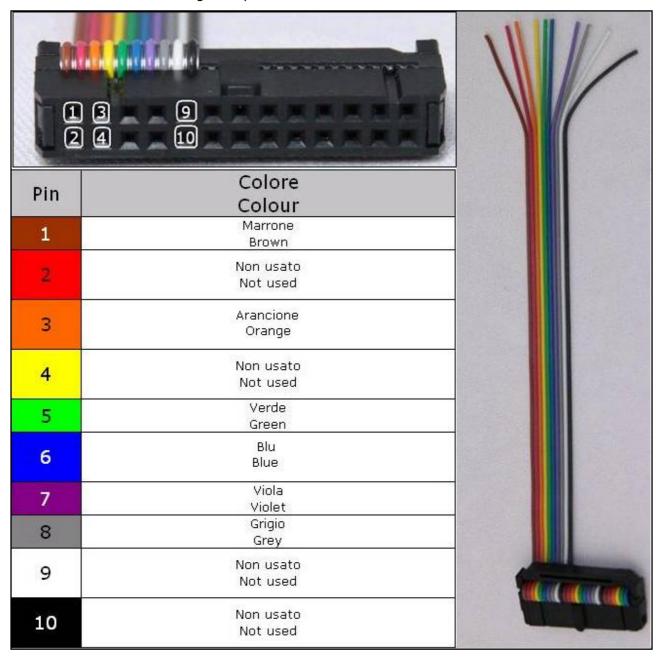

Connect the BOOT GREY wire of the F32GN037C cable as shown here below:

| DESCRIPTION |  |
|-------------|--|
| POL4        |  |
|             |  |

