


## T42 Transmission Controllers

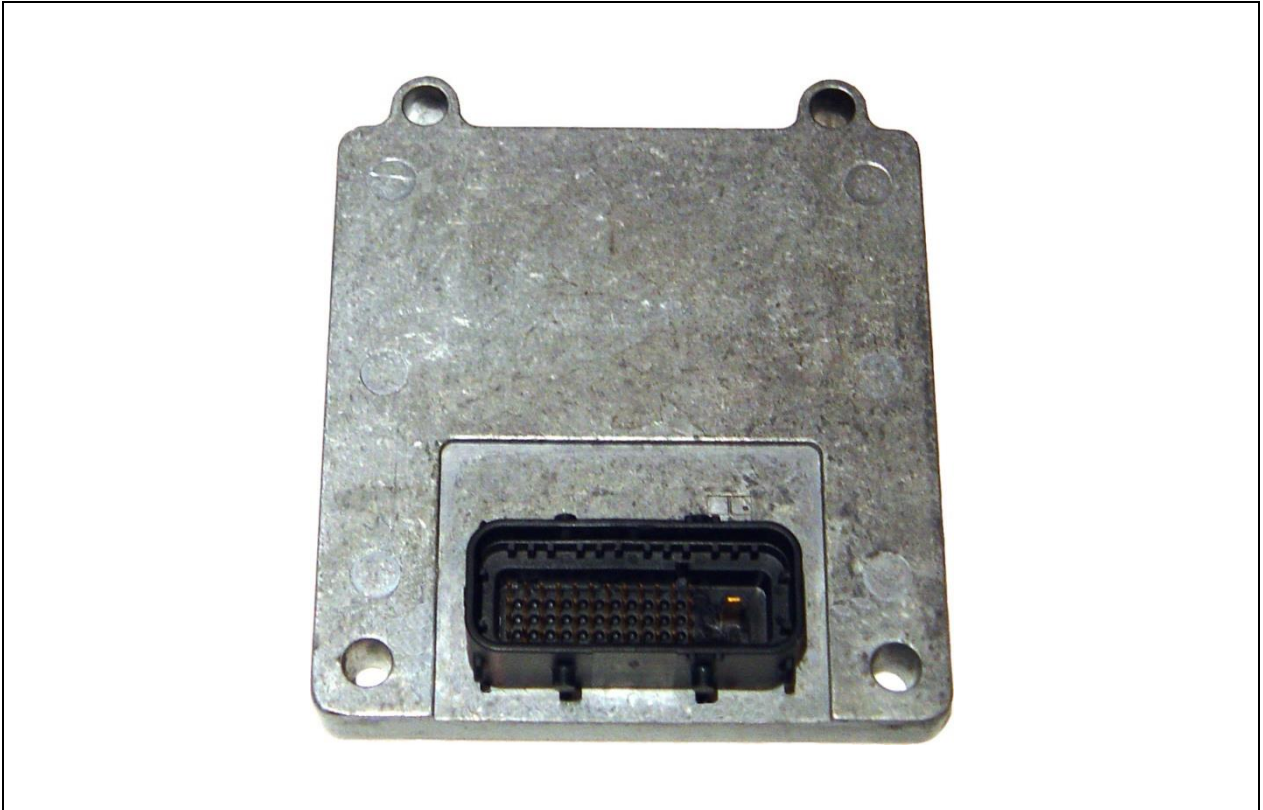

Controller	IGN SW	OBDII	V1	V2	V3	Description
49		4,5	Not Supported	4,8	2,7	Ground
32		16		1	1	12V Unswitched
11	•					12V Switched
31	•					12V Switched
38		6		2	3	CAN +
37		14		3	8	CAN -

Requires ECM to be connected to the CAN bus for correct CAN termination.