
plugin 366-811



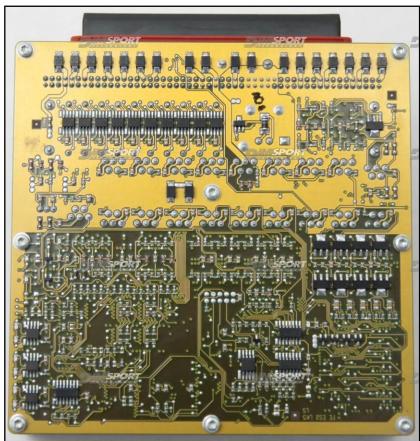




ECU CONNECTOR

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GN037C
BLU BLUE	POL5 CNF1	[674]
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	- WANDER
MARRONE BROWN	RESET	

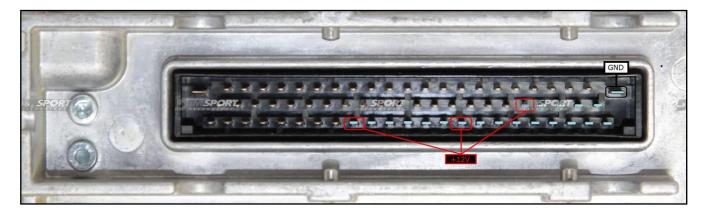

To power the ECU it is possible to use the VKEY wirings too, both red and orange wires are 12V.

BOOT CONNECTION

Connect the GREY wire of the F32GN037C/D cable as shown here below:

COLORE FILO WIRE COULOR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	

RX & TX CONNECTION

To connect the RX & TX communication lines use the F34NTF53 FLAT wiring

