
plugin **432 Iveco**

plugin **467 Case, New Holland**

plugin 567 CAT/Landini/Lindner/McCormick Perkins/Terex

plugin **640 Mitsubishi**

plugin 1070 Aebi Schmidt

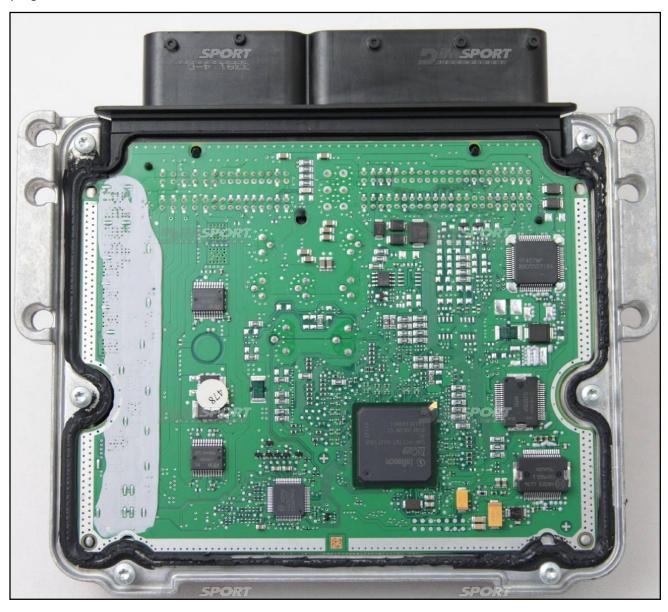


DIRECT CONNECTION

In order to connect to the ECU use the cable F32GN037C.

Make sure that the POWER led (red) on Trasdata is ON.

Do not use this connection with the metal positioning frame kit, it will be the F34DM011 adapter to power the ECU.

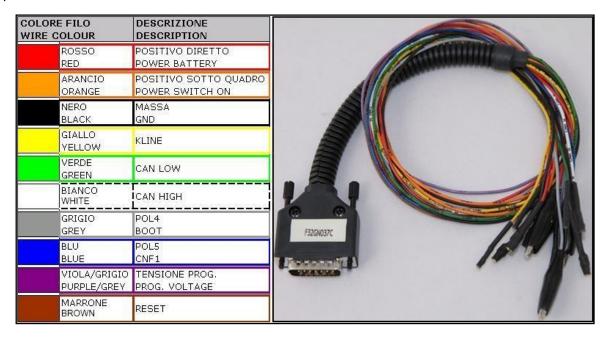


ECU CONNECTOR



BOOT CONNECTION

Connect the GREY wire of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	

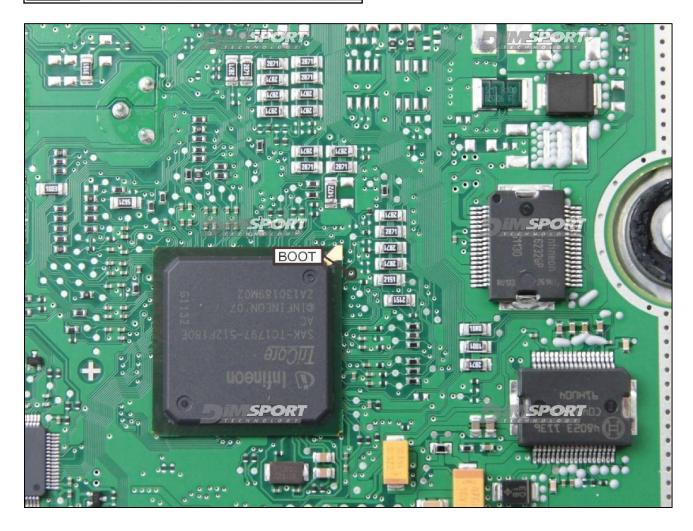

METAL POSITIONING FRAME CONNECTION

For the metal positioning frame connection is required the F34DM011 adapter. Connect the boot pin to the pad n.10 of the soldering lay-by pins then verify that the switch BOOT present on the F34DM011 is set in position ON.



A different solution is to connect the BOOT wire directly to the orange BOOT clamp on the F34DM011 adapter. Check that the yellow BOOT jumper is set in ON position. Connect then the flat cable to the Trasdata.

The following picture is merely indicative.

