
plugin 154

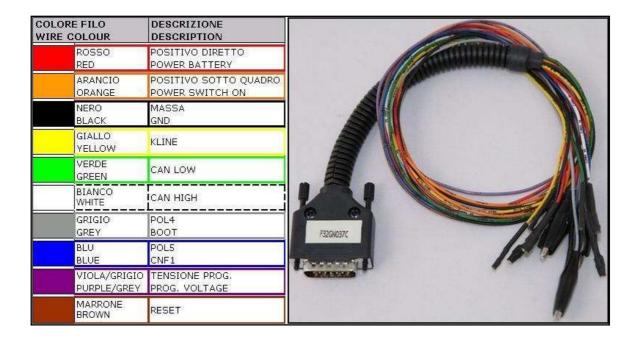


ECU CONNECTOR

For the connection with LOOSE WIRES use the cable F32GN037C connected to the ECU. Do NOT use this connection for the DIMA.

Make sure that the POWER led (red) on Trasdata is ON.



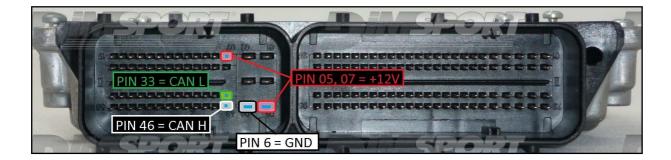


BOOT/POL4 CONNECTION


Connect the GREY wire of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
GRIGIO GREY	POL4 BOOT	

TYPE 01

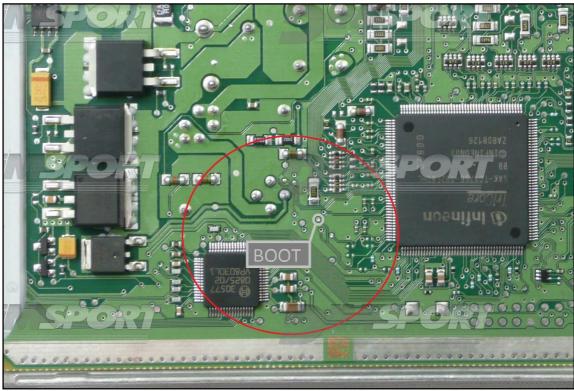


TYPE 2

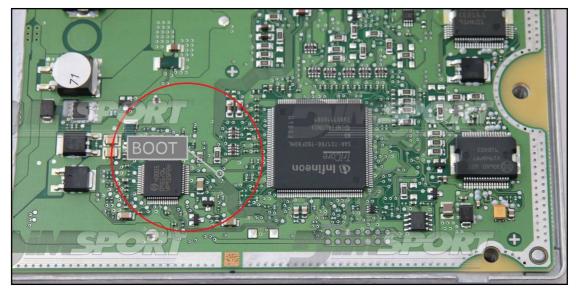

CONNESSIONE CON DIMA

Connect the boot pin to the pad n.10 of the soldering lay-by pins then verify that the switch BOOT present on the F34DM011 is set in position ON.

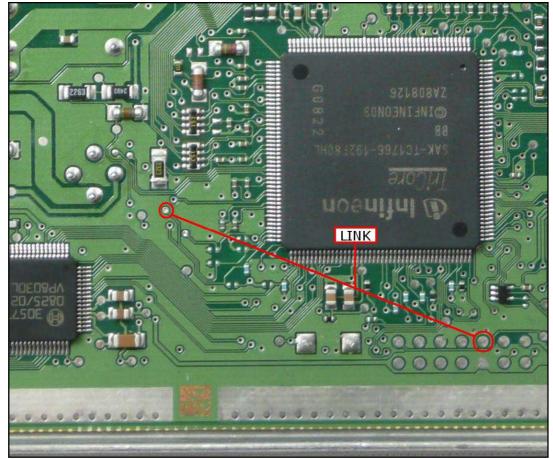

A different solution is to connect the BOOT wire directly to the orange BOOT clamp on the DIMA adapter F34DM011. Check that the yellow BOOT jumper is set in ON position. Connect the DIMA flat cable to the Trasdata.

The following picture of the DIMA adapter F34DM011 connection is merely indicative.

