plugin **737**








ECU CONNECTOR

For the connection use the cable F32GN037C connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON. Do not use this connection with the DIMA, it will be the F34DM011 to power the ECU.

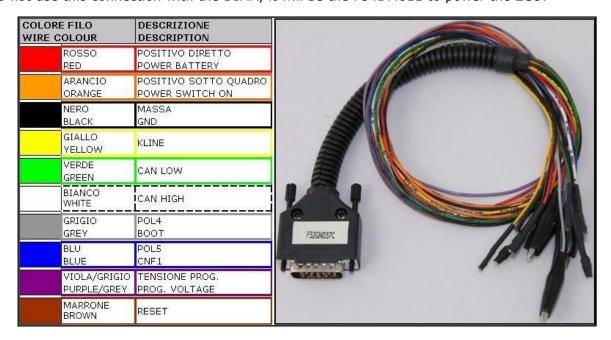



DIRECT BOOT CONNECTION

Connect the GREY wire of the cable F32GN037C as shown in the picture.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	



DIMA & DIMA BNP CONNECTION

Attention, for the DIMA connection do not use the first 2 pads shown in the following picture.



For the DIMA connection is required the F34DM011 DIMA adapter Perform the connections as shown in the previous detail at pg.4 using for the BOOT signal the specific clamp on the F34DM011 DIMA adapter (verify that the yellow BOOT switch present on the F34DM011 is set in position ON).

