plugin 146 : maps located in the EXTERNAL FLASH

plugin 166: USA version maps located in the MICROPROCES-


SOR **plugin 665**: maps located in the EXTERNAL FLASH



### **ECU CONNECTOR**


In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON Do NOT use this connection with the DIMA.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F32G/037C
BLU BLUE	POL5 CNF1	Francisco ( Street )
VIOLA/GRIGI PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	CHANGE OF THE PARTY OF THE PART
MARRONE BROWN	RESET	

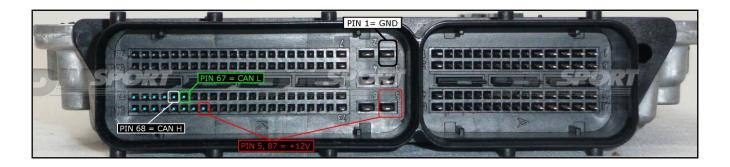


**BOOT/POL4 CONNECTION**Connect the GREY wire of the cable F32GN037C/D as described here below :

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	

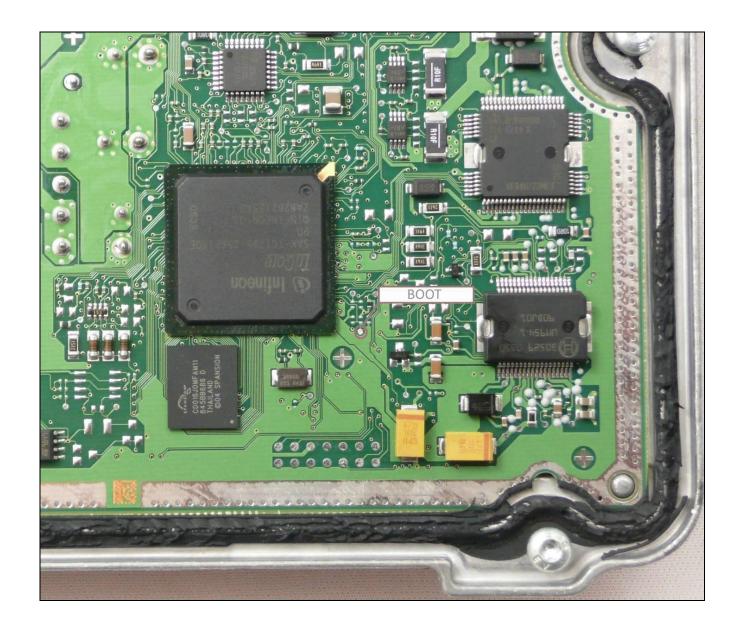

### **DIMA CONNECTION**

Connect the boot pin to the pad n.10 of the soldering lay-by pins then verify that the switch BOOT present on the F34DM011 is set in position ON.

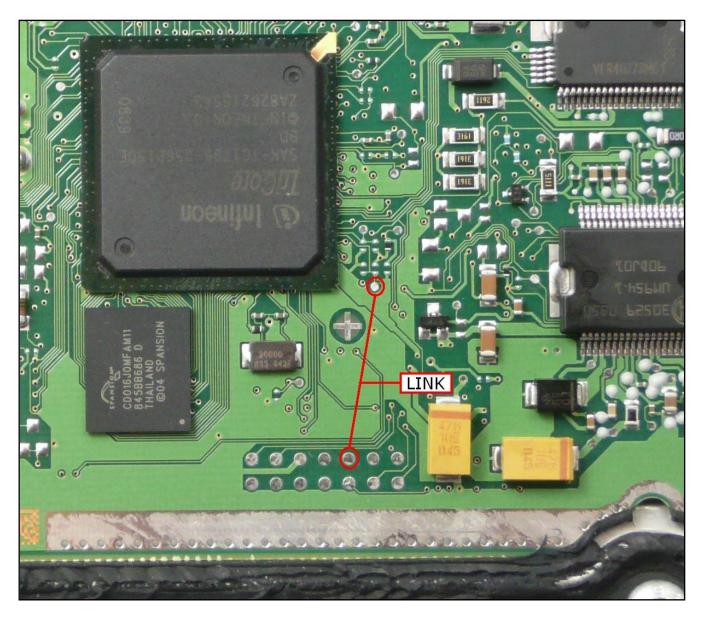

This connection picture is merely indicative.

