plugin 878




DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON. Do not use this connection with the KIT DIMA.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GN03TC
BLU BLUE	POL5 CNF1	(6/19)
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	CHANGE OF THE PARTY OF THE PART
MARRONE BROWN	RESET*	


ECU CONNECTOR

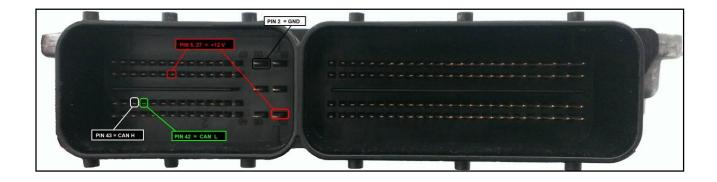

BOOT DIRECT CONNECTION


Connect the GREY wire of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	

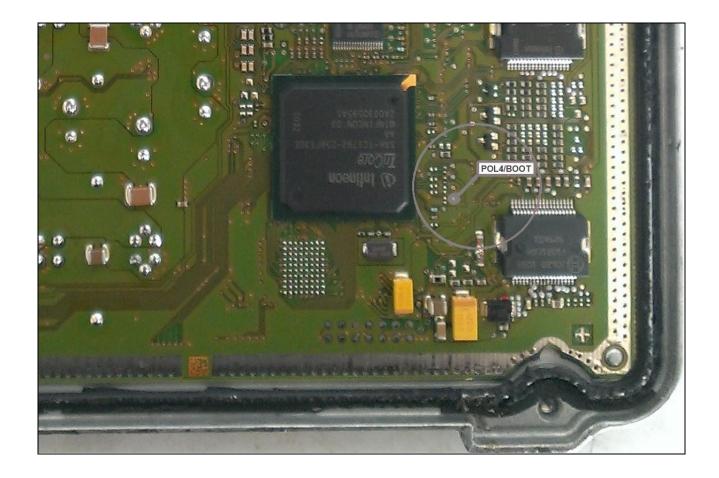

DIMA CONNECTION

For the DIMA connection is required the F34DM011 DIMA adapter. Connect the boot pin to the pad n.10 of the soldering lay-by pins then verify that the BOOT switch present on the F34DM011 is set in position ON.

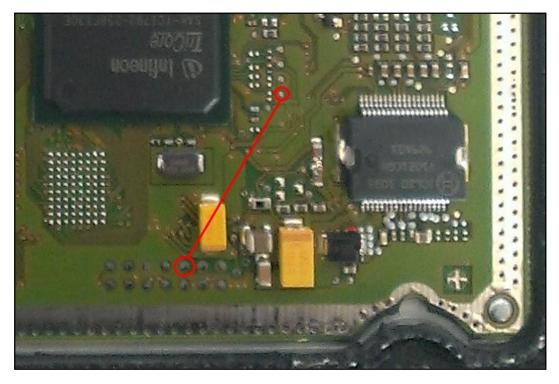

A different solution is to connect the BOOT wire directly to the orange BOOT clamp on the DIMA adapter F34DM011. Check that the yellow BOOT switch is set in ON position. Connect the DIMA flat cable to the Trasdata.

The following picture of the DIMA adapter F34DM011 connection is merely indicative.

