plugin 832

GPT CONNECTION MODE


To perform the GPT connection it is necessary to use both the ANALOG PORT and the DIGITAL PORT ${\sf PORT}$

GPT connection with loose wires

Connect the F32GN037 cable to the ANALOG PORT

Connect the F34NTA15 to the **DIGITAL PORT**, use the YELLOW and ORANGE wires ONLY for the GPT signals as displayed in the following pictures.

F34NTA15

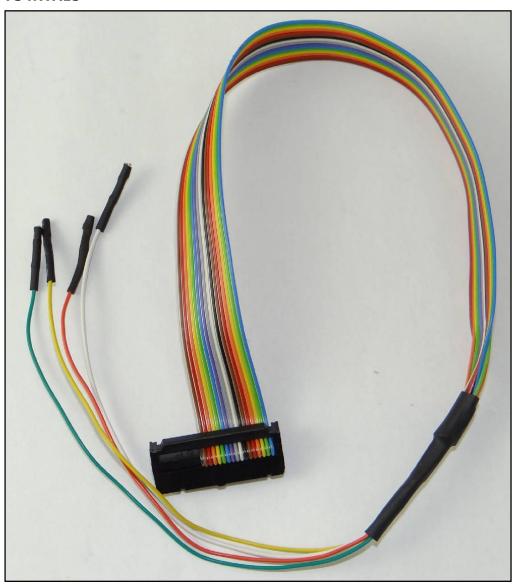






ECU CONNECTOR


For the connection with LOOSE WIRES use the cable F32GN037C connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON.

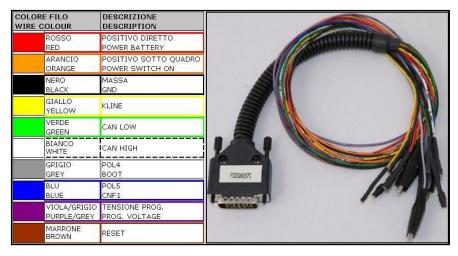

GPT DIRECT CONNECTION

GPT connection is required for the first time only, after the first ECU reading it is not necessary any longer. Connect the F34NTA15 flat cable to the GPT S1 & GPT S2, CAN 2L & CAN2H pins.

PIN / Colore PIN / Coulor	DESCRIZIONE DESCRIPTION
	GPT_S2
	GPT_S1
	CAN 2H
	CAN 2L

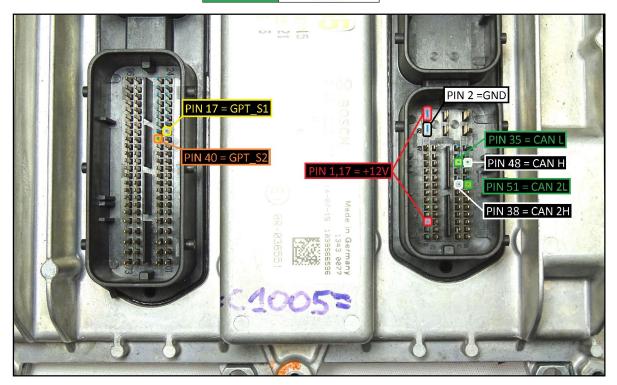

BOOT CONNECTION

Connect the GREY wire of the cable F32GN037C as shown in the picture.

RE FILO COLOUR	DESCRIZIONE DESCRIPTION	
GRIGIO GREY	POL4 BOOT	

