
plugin **452**

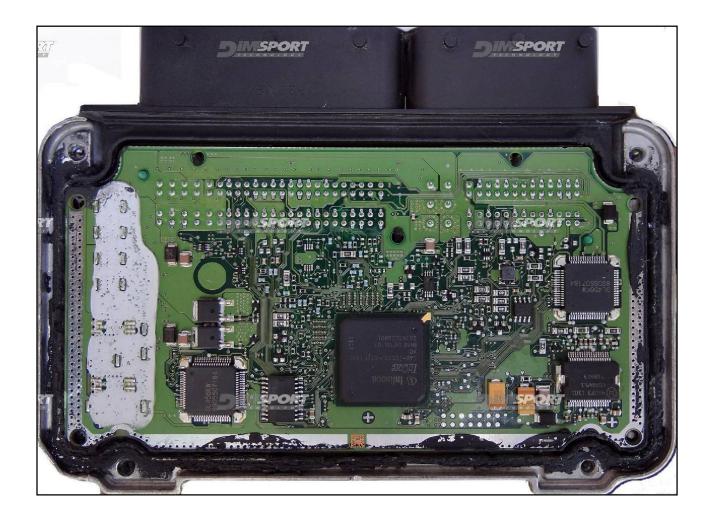




DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON. Do not use this connection with the metal positioning frame kit, it will be the F34DM011 adapter to power the ECU.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHYTE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GW037C
BLU BLUE	POL5 CNF1	
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	THE PARTY OF THE P
MARRONE GREY	RESET [®]	


ECU CONNECTOR

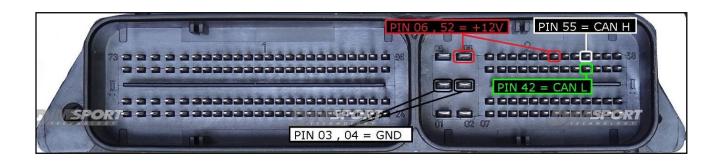

BOOT CONNECTION

Connect the GREY wire of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
GRIGIO GREY	POL4 BOOT	

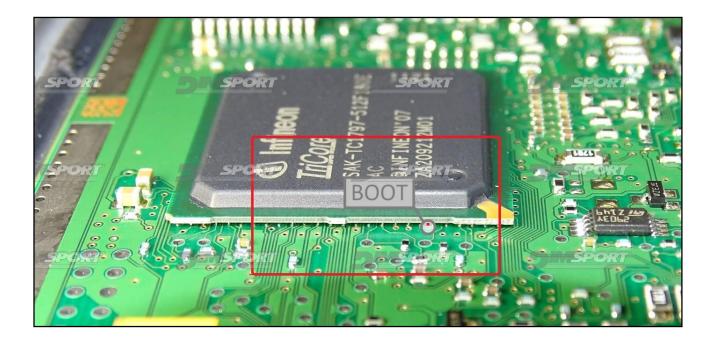

METAL POSITIONING FRAME & BNP POSITIONING FRAME CONNECTION

For the metal positioning frame connection is required the F34DM011 adapter. Perform the connections as shown in the previous detail at pg.4 using for the BOOT signal the specific clamp on the F34DM011 adapter (verify that the yellow BOOT switch present on the F34DM011 is set in position ON).

