plugin 966


GPT CONNECTION MODE

To perform the GPT connection it is necessary to use both the ANALOG PORT and the DIGITAL PORT.

GPT connection with loose wires

Connect the F32GN037 cable to the **ANALOG PORT**Connect the F34NTA15 to the **DIGITAL PORT**, use the YELLOW and ORANGE wires for the GPT signals.

F34NTA15

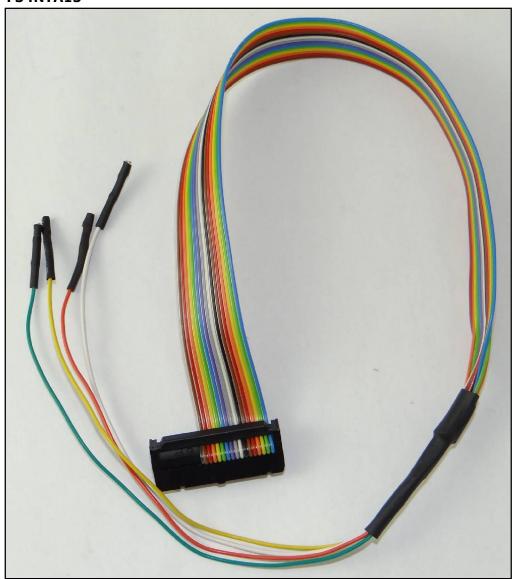






ECU CONNECTOR


For the connection use the cable F32GN037C connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON.

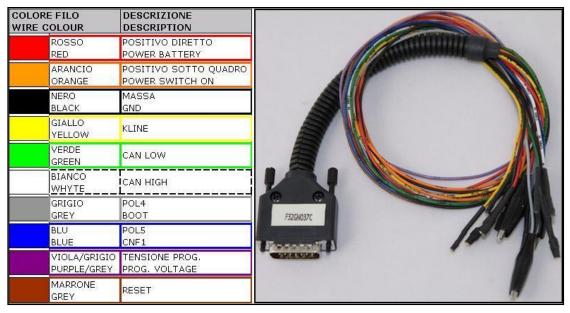

DIRECT GPT CONNECTION

GPT connection is required for the first time only, after the first ECU reading it is not necessary any longer. Connect the F34NTA15 flat cable to the GPT S1,GPT S2 pins.

PIN / Colore PIN / Coulor	DESCRIZIONE DESCRIPTION
	GPT_S2
	GPT_S1

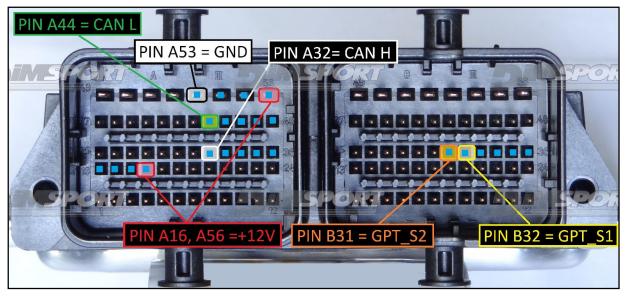

DIRECT BOOT&CNF1 CONNECTION

Connect the GREY&BLUE wires of the cable F32GN037C as shown in the picture.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	
	BLU BLUE	POL5 CNF1	

