

## BOSCH ME7.6.2 ALFA ROMEO

### plugin 026

The lay-by pins are placed in the lower part of the ECU.




## BOSCH ME7.6.2 ALFA ROMEO


### DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C.  
Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

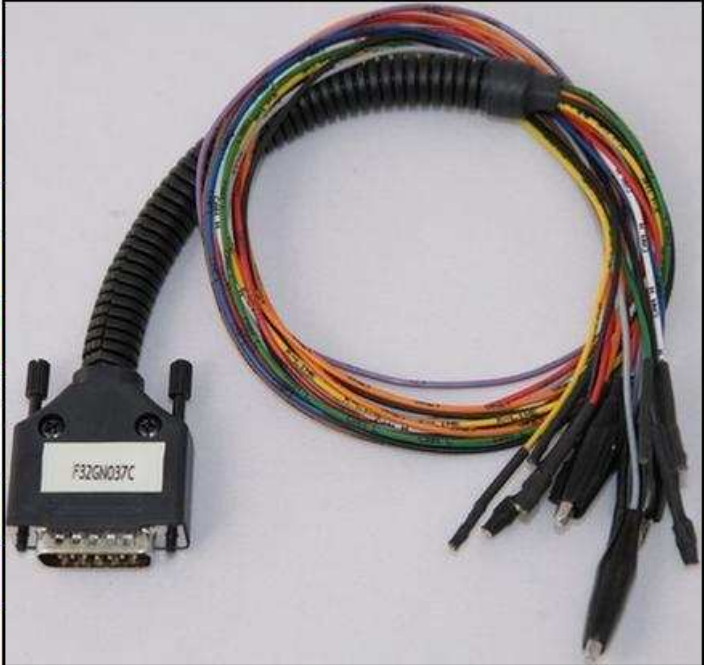

### ECU CONNECTOR

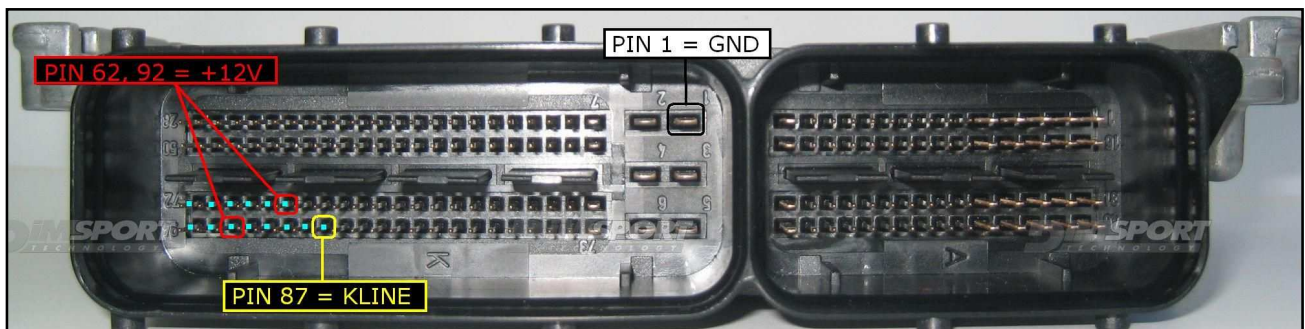

## BOSCH ME7.6.2 ALFA ROMEO

### DIRECT CONNECTION BOOT/CNF1

Connect the BLUE and GREY wires of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1



## BOSCH ME7.6.2 ALFA ROMEO

### METAL POSITIONING FRAME CONNECTION

**Warning:** the ECU is fed through the flat cable connected to the METAL POSITIONING FRAME, it is NOT necessary to feed directly the ECU through the main connector.

