

# plugin 076

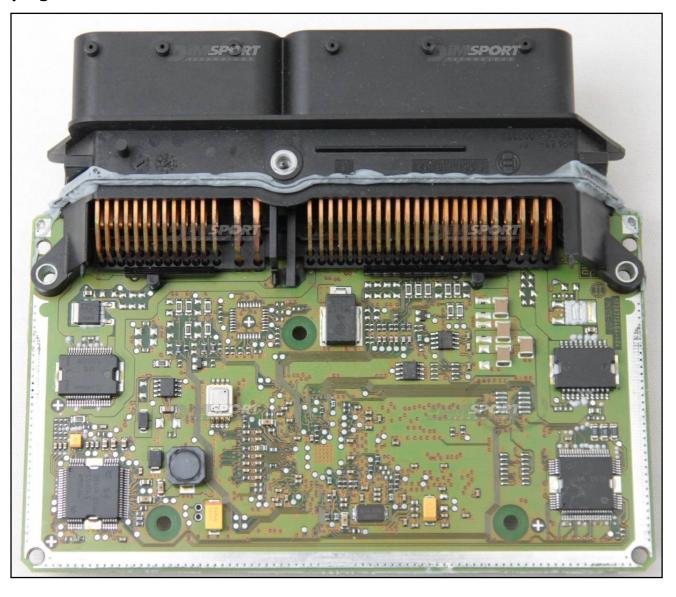


### **DIRECT CONNECTION**


In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON. You can use this connection with the DIMA too.


COLORE FILO	DESCRIZIONE
WIRE COLOUR	DESCRIPTION
ROSSO	POSITIVO DIRETTO
RED	POWER BATTERY
ARANCIO	POSITIVO SOTTO QUADRO
ORANGE	POWER SWITCH ON
NERO	MASSA
BLACK	GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO	POL4
GREY	BOOT
BLU	POL5
BLUE	CNF1
	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

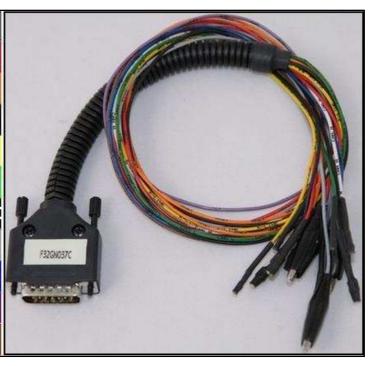

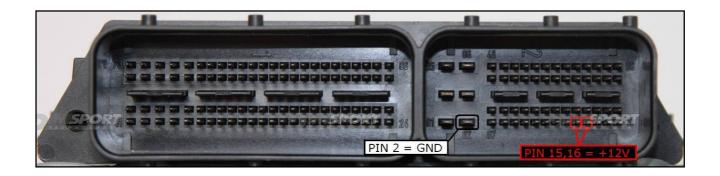

**F34NTA06 adapter connection**The triangle symbol on the adapter board must not be considered a valid reference.

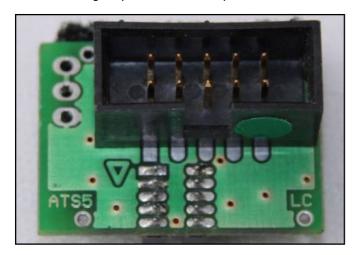

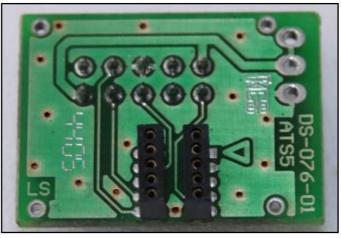



## F34DM003+F34DM005 DIMA CONNECTION

