plugin 823 BOSCH MED17.3.5 IROM TC1793 GPT FCA

### **GPT CONNECTION MODE**

To perform the GPT connection it is necessary to use both the ANALOG PORT and the DIGITAL PORT.

#### **GPT** connection with loose wires

Connect the F32GN037 cable to the ANALOG PORT


Connect the F34NTA15 to the **DIGITAL PORT**, use the YELLOW and ORANGE wires ONLY for the GPT signals as displayed in the following pictures.

GPT connection with DIMA

Connect the F32GN038 cable to the ANALOG PORT

Connect the F34NTA15 to the **DIGITAL PORT**, use the YELLOW and ORANGE wires ONLY for the GPT signals as displayed in the following pictures.

#### F34NTA15

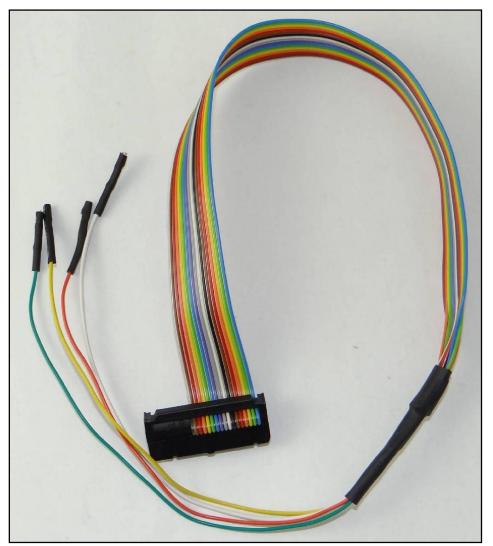

Warning: for the BOOT connection it is required the use of the micro-clamps supplied in the kit C34ACD012. Please read carefully the instructions here below.






For the connection use the cable F32GN037C connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON. Do not use this connection with the DIMA, it will be the F34DM011 to power the ECU.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	F320x037C
BLU BLUE	POL5 CNF1	
	D TENSIONE PROG. / PROG. VOLTAGE	CHANNES .
MARRONE BROWN	RESET	

### **GPT DIRECT CONNECTION**

GPT connection is required for the first time only, after the first ECU reading it is not necessary any longer. Connect the F34NTA15 flat cable to the GPT S1 & GPT S2 pins.

PIN / Colore PIN / Coulor	DESCRIZIONE DESCRIPTION	
	GPT_S2	
	GPT_S1	

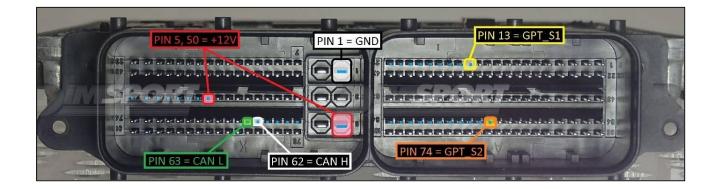


### DIRECT BOOT CONNECTION

Connect the GREY wire of the cable F32GN037C as shown in the picture.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	

For a correct connection on the BOOT pin/ on the microprocessor pads you MUST/we suggest to use a/the specific micro clamps supplied in the kit C34ACD012.


Warning: do not use other types of micro clamps, only these are completely insulated, otherwise the risk is to damage the microprocessor.

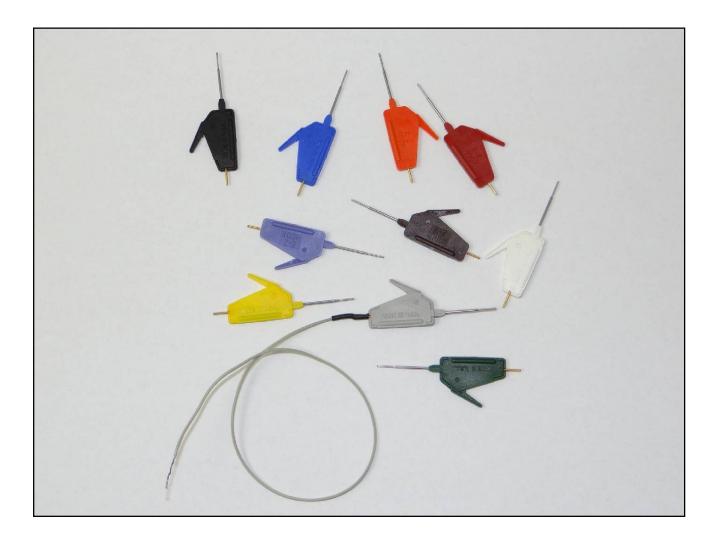

#### 189 1192 . 6813 6813 . . . . . . . . . . . **JUUCIE** . noenitn . A HERRICHTER AND A STATE AND A . . . . . 1008 HI - 8E LCOZ 🚺 🖉 LCOZ 1638115581 66 00000.00


You need to clamp the sixth ball only, please check here below how to identify it.

For a safe procedure the Trasdata flat cable must be disconnected from the DIGITAL PORT. The ball to clamp is the 6th one from the right corner of the micro.

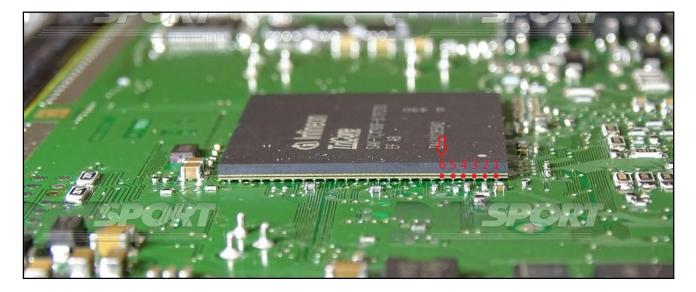



The following pictures are merely indicative.

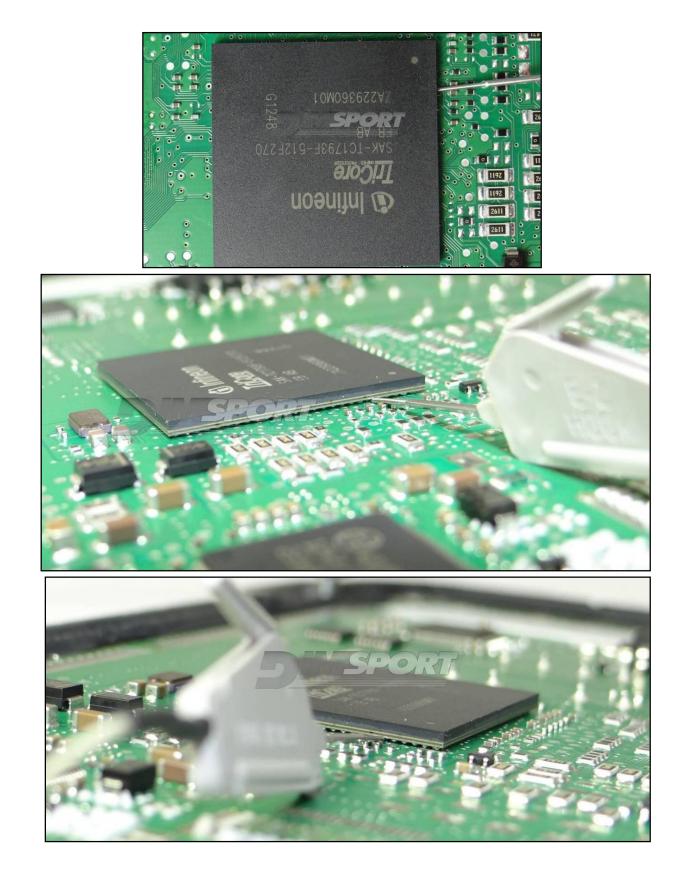

#### DIMA CONNECTION

For the DIMA connection is required the F34DM011 DIMA adapter + the F32GN038 flat cable. Connect the F32GN038 FLAT cable to the ANALOG PORT and to the F34DM011 DIMA adapter. Connect the F34NTA15 flat cable to the DIGITAL PORT.

Perform the connections as shown in the previous detail at pg.6-7 using for the BOOT signal the specific clamp on the F34DM011 DIMA adapter (verify that the yellow BOOT switch present on the F34DM011 is set in position ON).

Perform then the GPT connections with the F34NTA15 flat cable as shown at pg.5.

