plugin **334**




DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.


COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F320/037C
BLU BLUE	POL5 CNF1	
VIOLA/GRIG PURPLE/GRE	IO TENSIONE PROG. Y PROG. VOLTAGE	CHANNES .
MARRONE BROWN	RESET	

ECU CONNECTOR

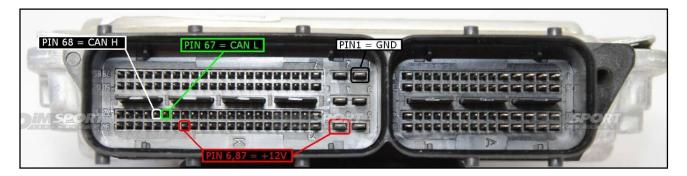

BOOT & CNF1 CONNECTION

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	
	BLU BLUE	POL5 CNF1	

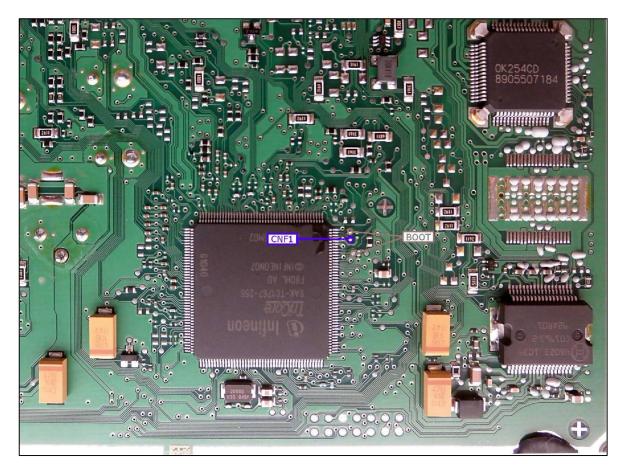

DIMA CONNECTION

Connect the 2 boot pin to the programming lay-by pin n. 10. Moreover it is necessary to solder a third wire that must be connected to the CNF1 clamp on the DIMA F34DM011.

