
plugin **1348**






DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

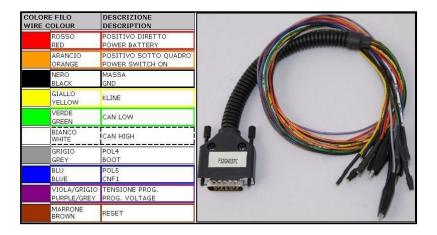

ECU CONECTOR

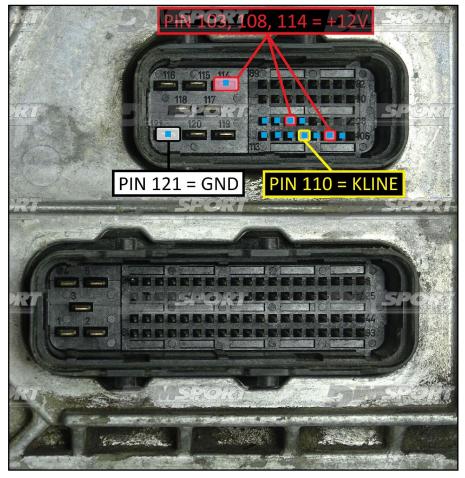

To the pin 103,108,114 you can connect both wires red and orange, they both have 12 Volt signal.

BOOT CONNECTION

Connect the GREY wire of the cable F32GN037C as described here below :

| COLORE FILO WIRE COLOUR | | DESCRIZIONE DESCRIPTION | |
|----------------------------|----------------|----------------------------|--|
| | GRIGIO GREY | POL4 BOOT | |

