
plugin **693**On this ECU it is possible ONLY the DIRECT CONNECTION

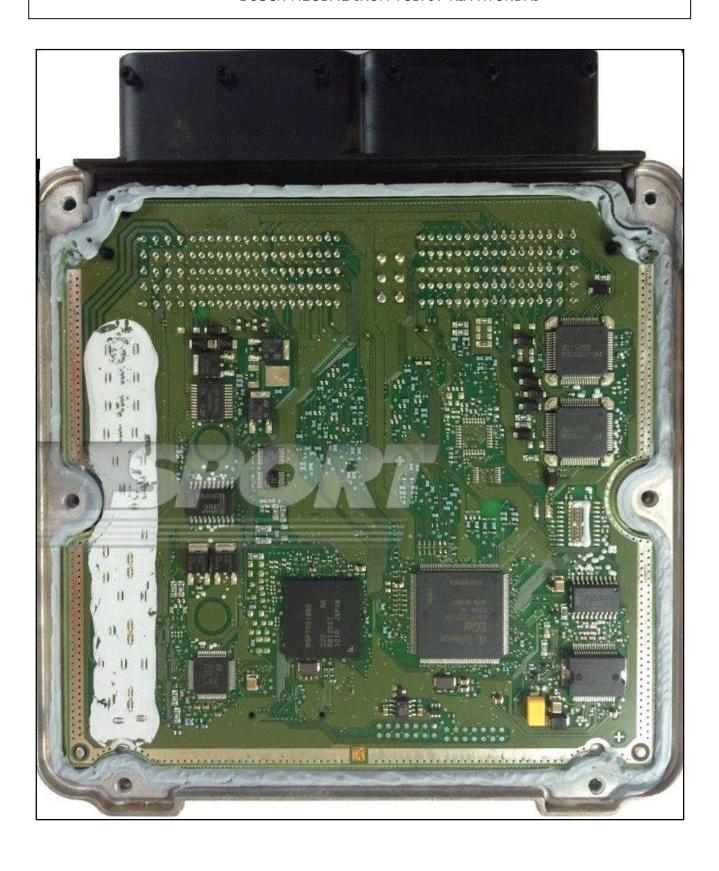




ECU CONNECTOR

For the connection with LOOSE WIRES use the cable F32GN037C connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F32G0037C
BLU BLUE	POL5 CNF1	
	TENSIONE PROG. PROG. VOLTAGE	- CHANGE
MARRONE BROWN	RESET	

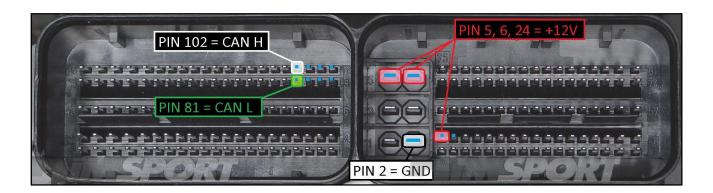

To the power feeding pins 5,6,24 (+12V) you can connect both wires red (VECU) and orange VKEY) of the F32GN037C cable, they both have 12V signal.

BOOT&CNF1 DIRECT CONNECTION

Connect the GREY and BLUE wires of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	
	BLU BLUE	POL5 CNF1	

