plugin 469

The lay-by pins are placed in the lower side of the ECU.






DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.


COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	F320/037C
BLU	POL5 CNF1	
	TENSIONE PROG. PROG. VOLTAGE	- WHATCHE
MARRONE BROWN	RESET	


ECU CONNECTOR

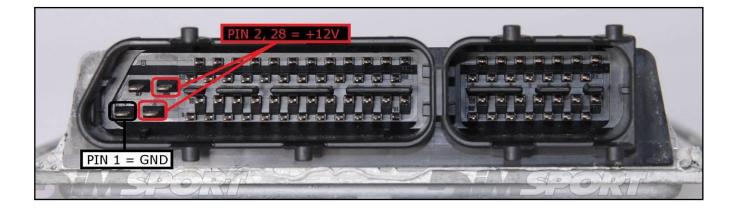

F34NTA11 ADAPTER CONNECTION



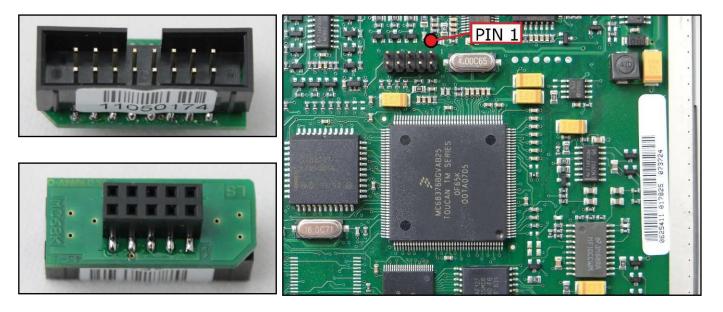

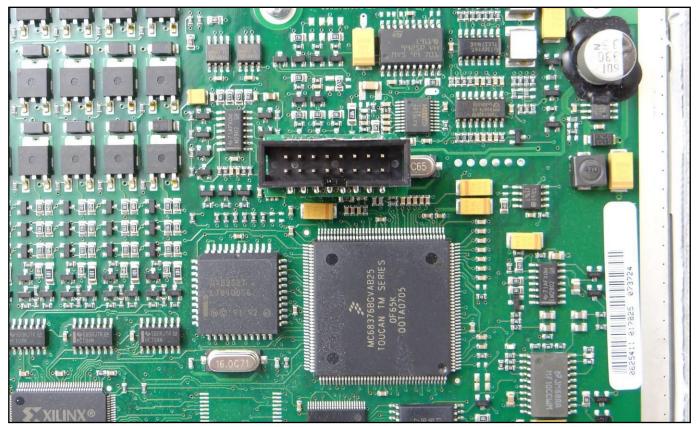

FREE WIRING CONNECTION:

Connect the cable F34NTF53 as shown here below:

Pin	Colore Coulor	
11	Non usato	
++	Not used	
12	Non usato Not used	
10	Non usato	
13	Not used	
14	Non usato	
	Not used Non usato	
15	Not used	
16	Blu	
10	Blue	
17	Viola Violet	
10	Non usato	
18	Not used	
19	Bianco	
Barris	White Nero	
20	Black	
	Marrone	
21	Brown	
22	Rosso	
	Red	
23	Non usato Not used	
24	Non usato	
24	Not used	
25	Non usato	
	Not used	The second secon
26	Non usato Not used	

