
plugin **869**

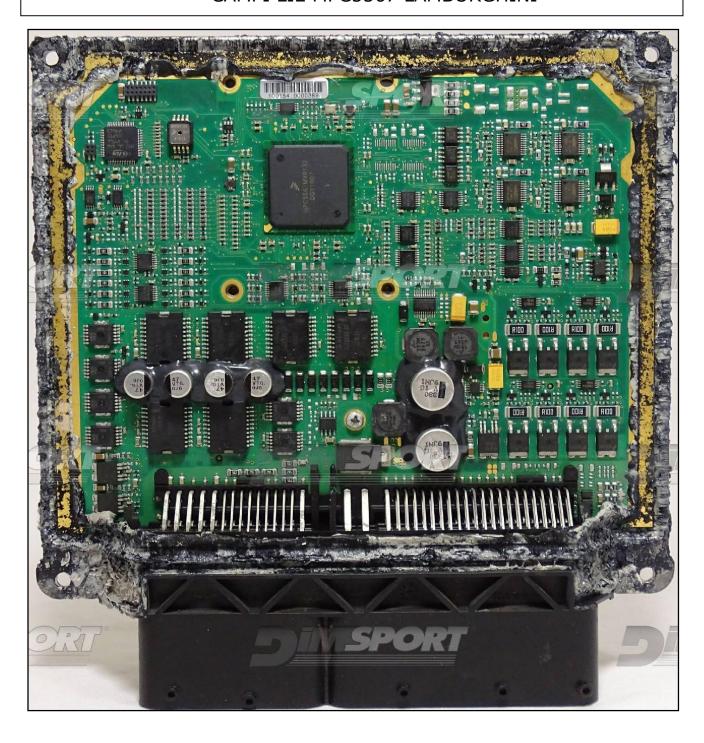






DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C.


Make sure that the POWER led (red) on Trasdata is ON.

These connections are required for all the connection approaches: loose wires or metal positioning frame adapter.

COLORE FILO	DESCRIZIONE
WIRE COLOUR	DESCRIPTION
ROSSO	POSITIVO DIRETTO
RED	POWER BATTERY
ARANCIO	POSITIVO SOTTO QUADRO
ORANGE	POWER SWITCH ON
NERO	MASSA
BLACK	GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	ICAN HIGH
GRIGIO	POL4
GREY	BOOT
BLU	POL5
BLUE	CNF1
VIOLA/GRIGIO	TENSIONE PROG.
PURPLE/GREY	PROG. VOLTAGE
MARRONE BROWN	RESET

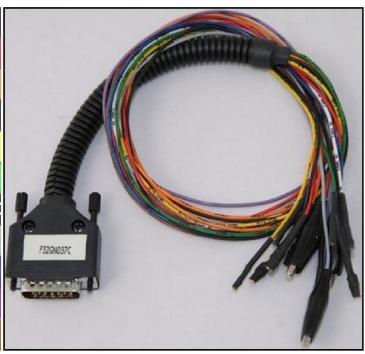


ECU CONNECTOR

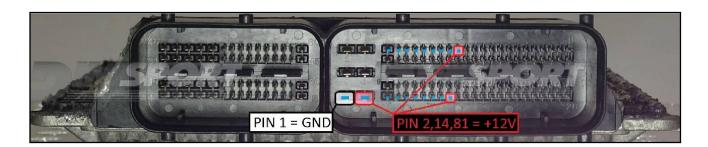

METAL POSITIONING FRAME CONNECTION

For the metal positioning frame connection is required the F34DM039 adapter.

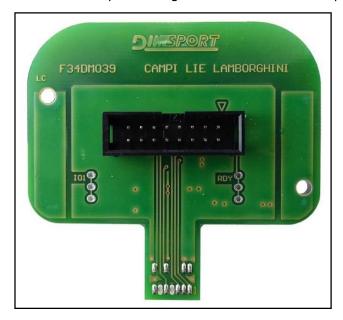



Identify pin1 on the communication pads








J-TAG LOOSE WIRES CONNECTION

Connect the F34NTF53 wiring as explained here below:

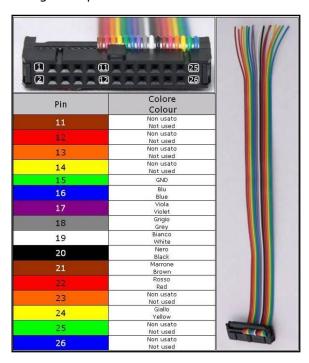

Please avoid short circuits while soldering the wires on the pads

