


CAT A5X12I1 MPC5674F PERKINS


plugin 1071

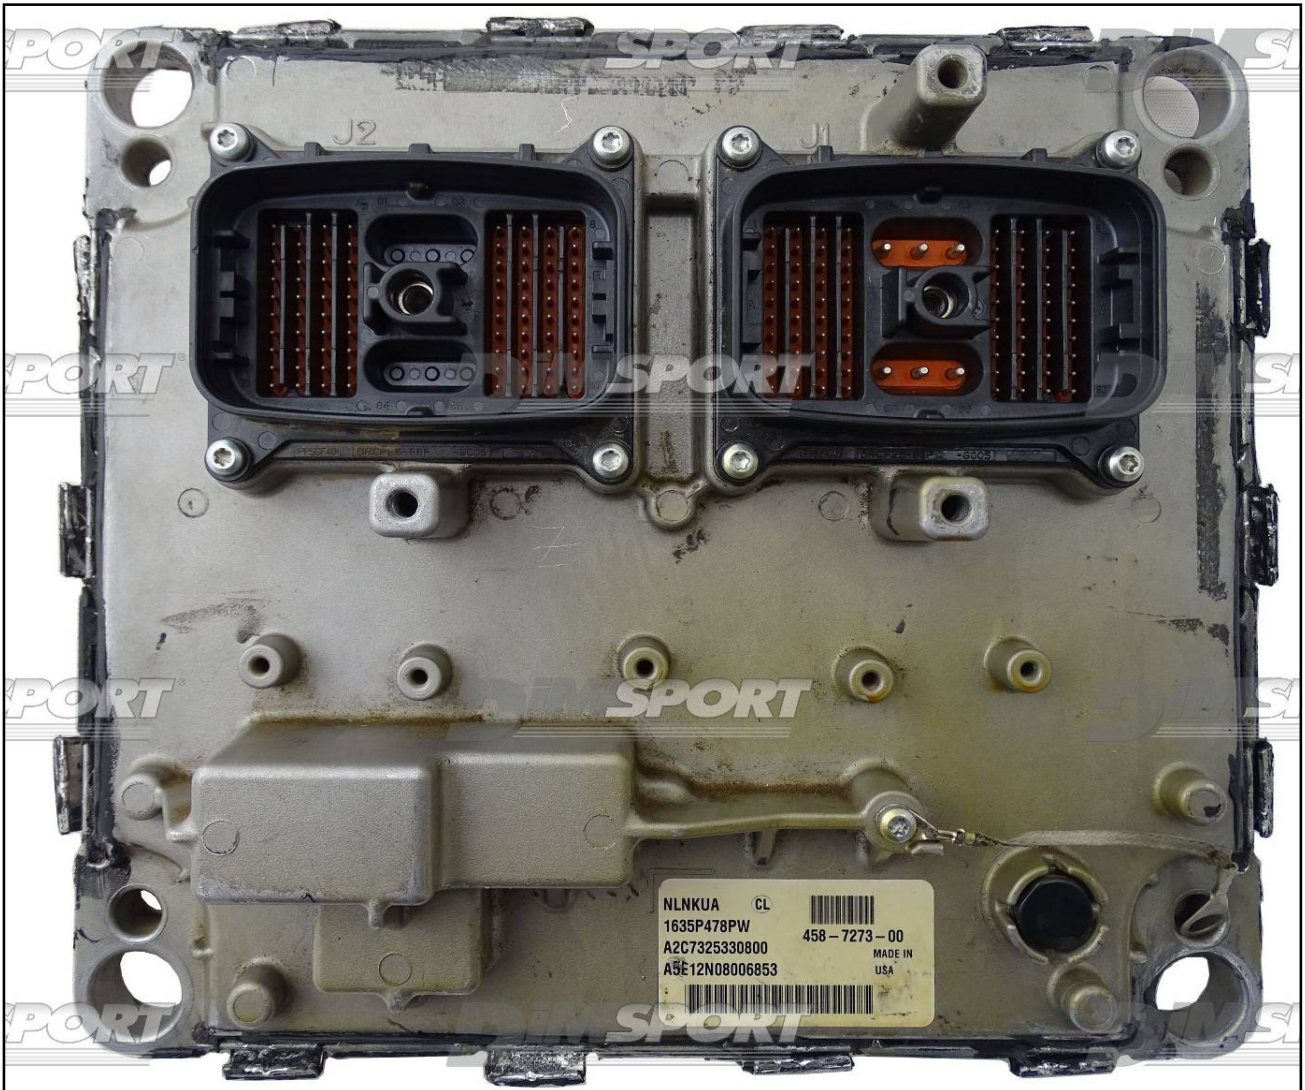

CAT A5X12I1 MPC5674F PERKINS



CAT A5X12I1 MPC5674F PERKINS

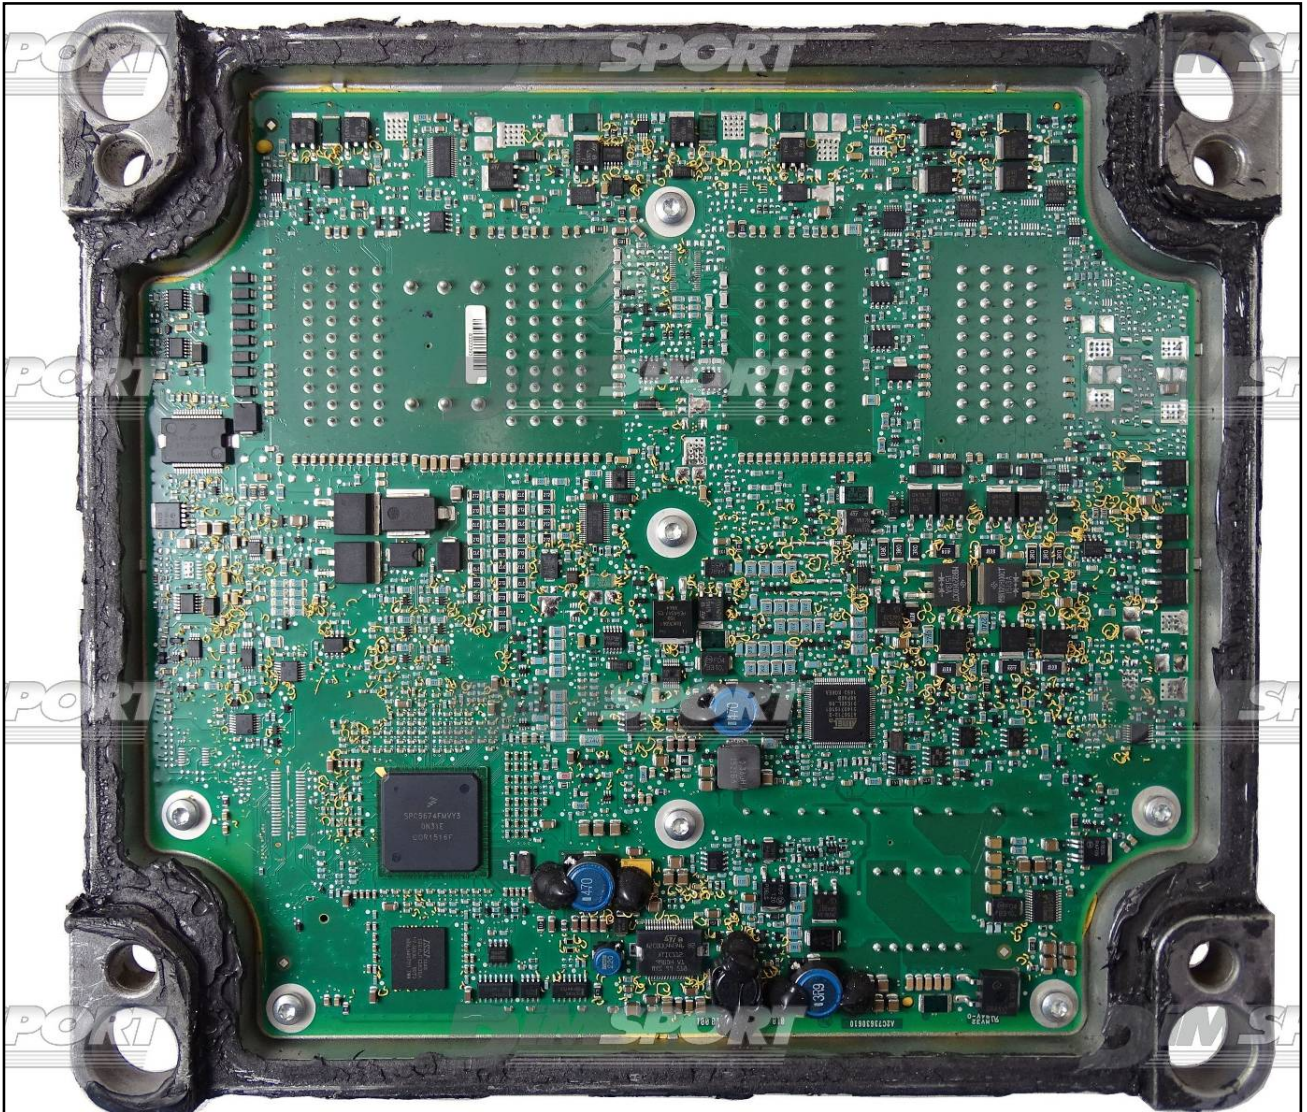


CAT A5X12I1 MPC5674F PERKINS

DIRECT CONNECTION

In order to connect to the ECU use the cable F32GN037C/D.
Make sure that the POWER led (red) on Trasdata is ON.


COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
■ ROSSO RED	POSITIVO DIRETTO POWER BATTERY
■ ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
■ NERO BLACK	MASSA GND
■ GIALLO YELLOW	KLINE
■ VERDE GREEN	CAN LOW
■ BIANCO WHITE	CAN HIGH
■ GRIGIO GREY	POL4 BOOT
■ BLU BLUE	POL5 CNF1
■ VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
■ MARRONE BROWN	RESET

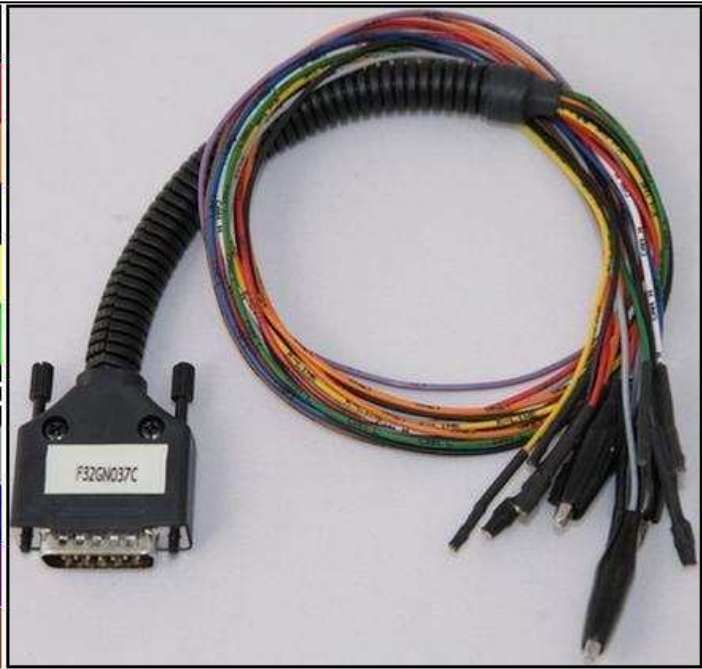

Due to the relevant power absorbed by the ECU at the beginning of the communication it is necessary to feed the ECU with an external power supply or a car battery. Connect the power cable F32GN003 to the Trasdata and then to the power source.
The ECU must be powered through the Trasdata using the F32GN0037C cable.




CAT A5X12I1 MPC5674F PERKINS

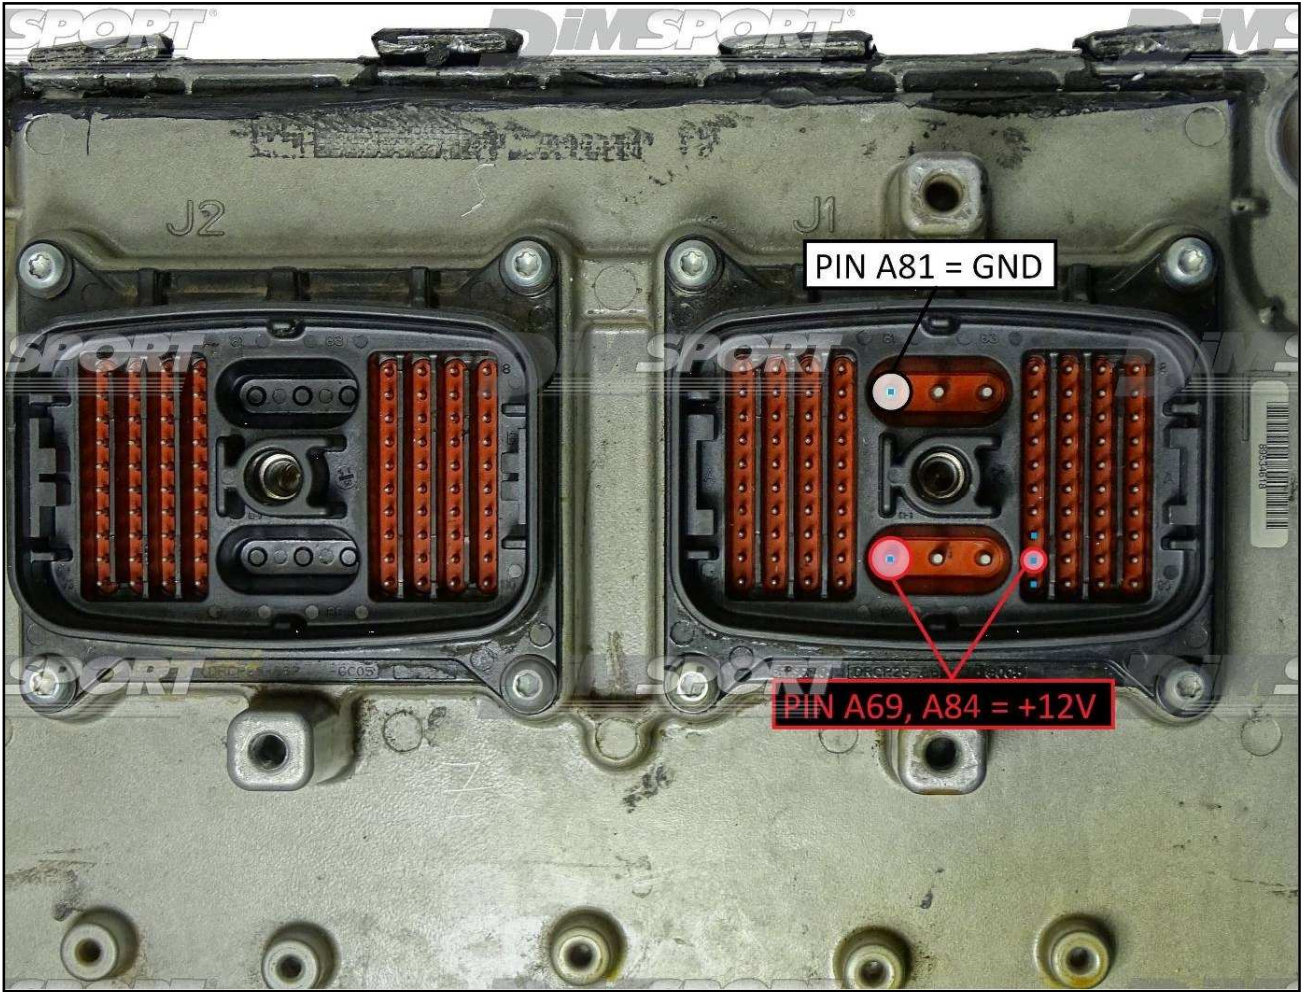


CAT A5X12I1 MPC5674F PERKINS

J-TAG LOOSE WIRINGS CONNECTION

Connect the FLAT cable F34NTF53 as shown here below:



Pin	Colore Colour
11	Non usato Not used
12	Non usato Not used
13	Non usato Not used
14	Non usato Not used
15	Non usato Not used
16	Blu Blue
17	Non usato Not used
18	Grigio Grey
19	Bianco White
20	Nero Black
21	Marrone Brown
22	Rosso Red
23	Non usato Not used
24	Giallo Yellow
25	Non usato Not used
26	Non usato Not used

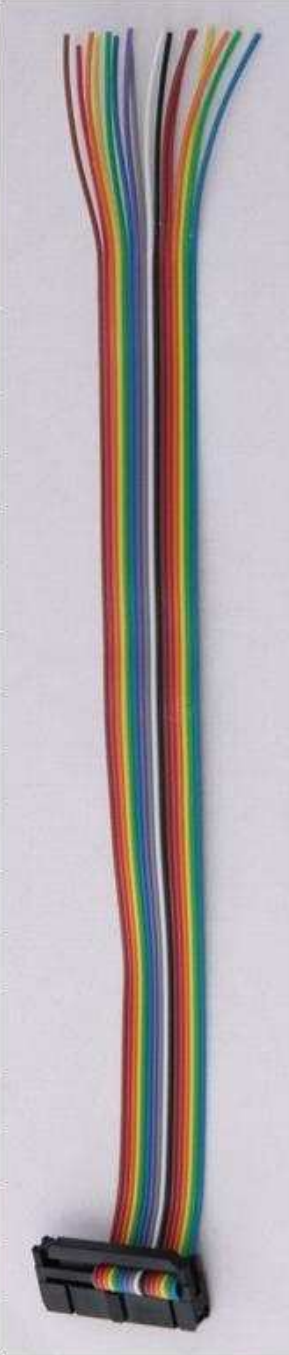

CAT A5X12I1 MPC5674F PERKINS

Solder the wires on the pads 16,18,19,20,21,22,24 avoiding any short circuits.

