Plugin 593 Continental-Siemens-VDO CM2250 JCB Plugin 632 Continental-Siemens-VDO CM2250 Generic Plugin 639 Continental-Siemens-VDO CM2250 Daimler Plugin 1028 Continental-Siemens-VDO CM2250 Peterbilt




DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
	ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
3	NERO BLACK	MASSA GND	
	GIALLO YELLOW	KLINE	
	VERDE GREEN	CAN LOW	
	BIANCO WHITE	CAN HIGH	
	GRIGIO GREY	POL4 BOOT	
	BLU BLUE	POL5 CNF1	
		TENSIONE PROG. PROG. VOLTAGE	
	MARRONE BROWN	RESET	



ECU CONNECTOR

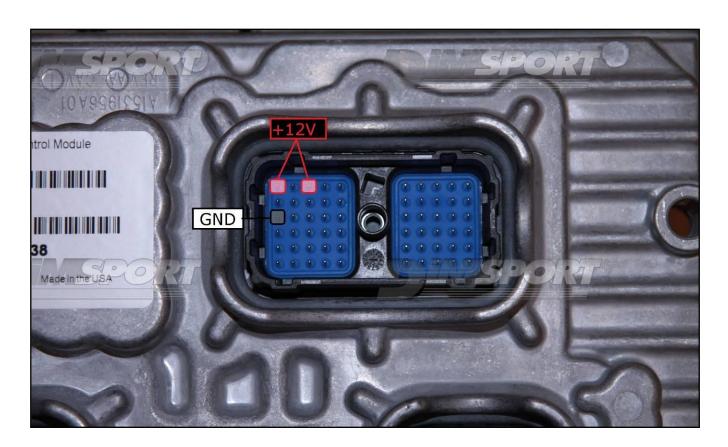

ECU JTAG DIRECT CONNECTION WITH LOOSE WIRINGS:

Connect the FLAT cable F34NTF53 as shown here below

	AND AND AND AND AND AND AND	
Pin	Colore	
1-1111:	Colour	
11	Non usato Not used	
	Not useu Non usato	
12	Not used	
13	Non usato	
SHOW	Not used Non usato	
14	Not used	
15	Non usato Not used	
16	Blu	
and the second second	Blue Viola	
17	Violet	
18	Grigio	
	Grey Bianco	
19	White	
20	Nero	
	Black Marrone	
21	Brown	
2.2	Rosso	
. 44	Red	
23	Non usato Not used	
2.4	Giallo	
24	Yellow	
25	Non usato Not used	The state of the s
A A COLOR	Not used Non usato	
26	Not used	

In order to communicate with the ECU is necessary to make a little bridge (LINK) on the quartz. Remove such LINK at the end of all the operations before setting back the ECU into the vehicle. The soldering must be very clean, do not create any short circuit among the pads.

