

CONTINENTAL EASY-U1 MPC5534 DUCATI

plugin 718

The lay-by pads are placed in the lower side of the ECU.




CONTINENTAL EASY-U1 MPC5534 DUCATI


DIRECT CONNECTION

For the connection use the cable F32GN037C/D connected to the ECU.
Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
ROSSO RED		POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE		POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK		MASSA GND
GIALLO YELLOW		KLINE
VERDE GREEN		CAN LOW
BIANCO WHITE		ICAN HIGH
GRIGIO GREY		POL4 BOOT
BLU BLUE		POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY		TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN		RESET

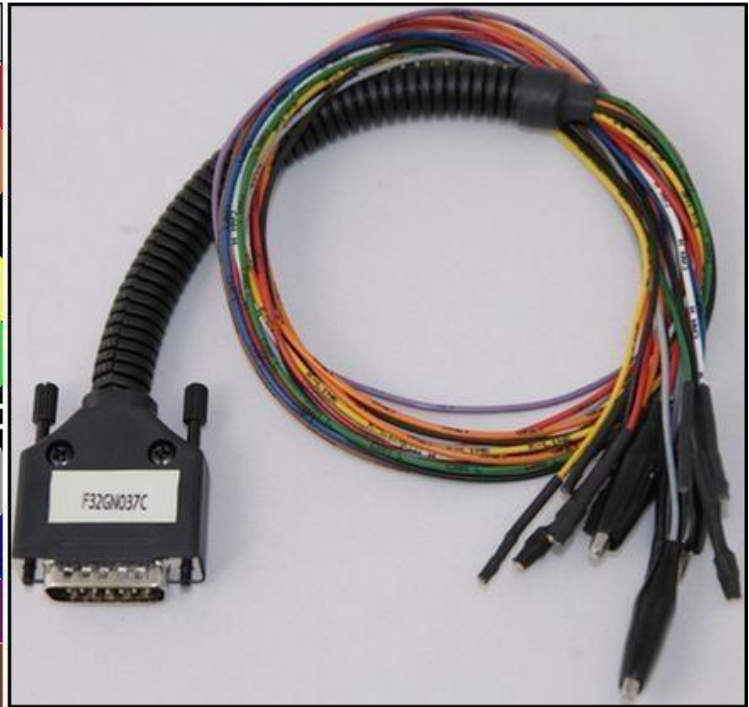

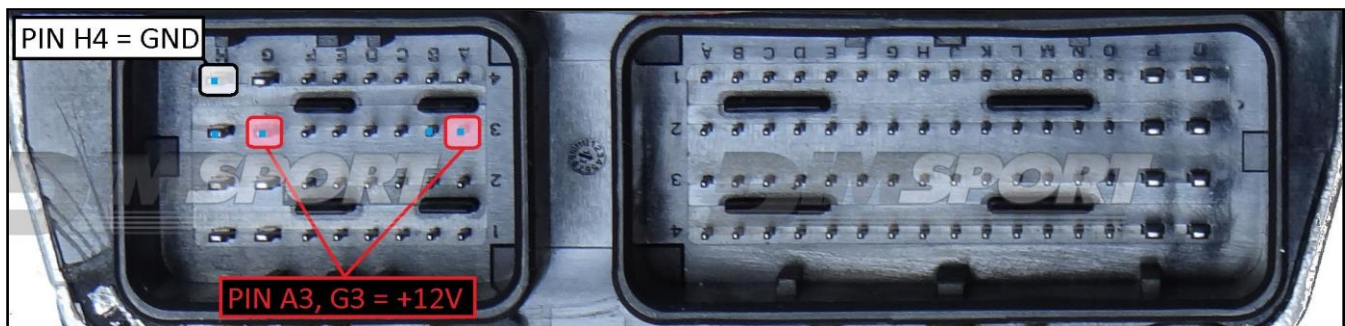

ECU CONNECTOR



CONTINENTAL EASY-U1 MPC5534 DUCATI


LOOSE WIRES J-TAG CONNECTION

Connect the wire F34NTF053 as explained here below :



Pin	Colore Colour
11	Non usato Not used
12	Non usato Not used
13	Non usato Not used
14	Non usato Not used
15	Non usato Not used
16	Blu Blue
17	Viola Violet
18	Grigio Grey
19	Bianco White
20	Nero Black
21	Marrone Brown
22	Rosso Red
23	Non usato Not used
24	Giallo Yellow
25	Verde Green
26	Non usato Not used

For a correct communication it is necessary to perform a little bridge LINK1 among the two pads as displayed here below.

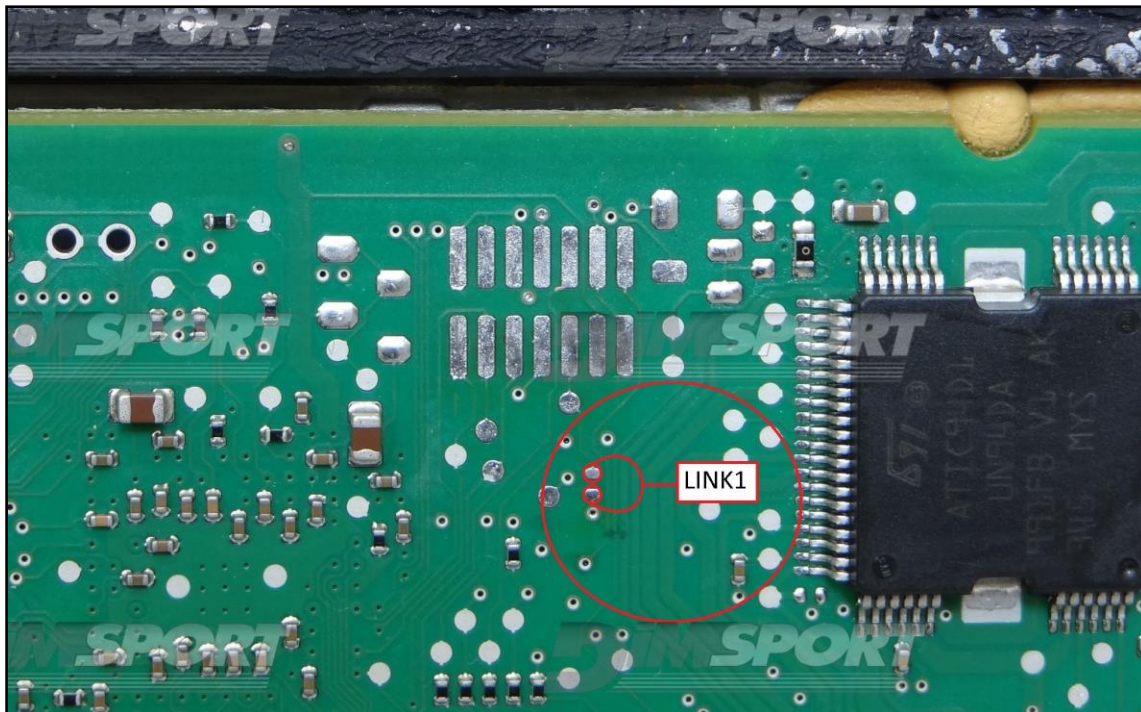

CONTINENTAL EASY-U1 MPC5534 DUCATI

Perform the connections being careful to avoid short circuits among the pads.

