

CONTINENTAL EMS2511 IROM TC1791 FORD


plugin 983



CONTINENTAL EMS2511 IROM TC1791 FORD



CONTINENTAL EMS2511 IROM TC1791 FORD


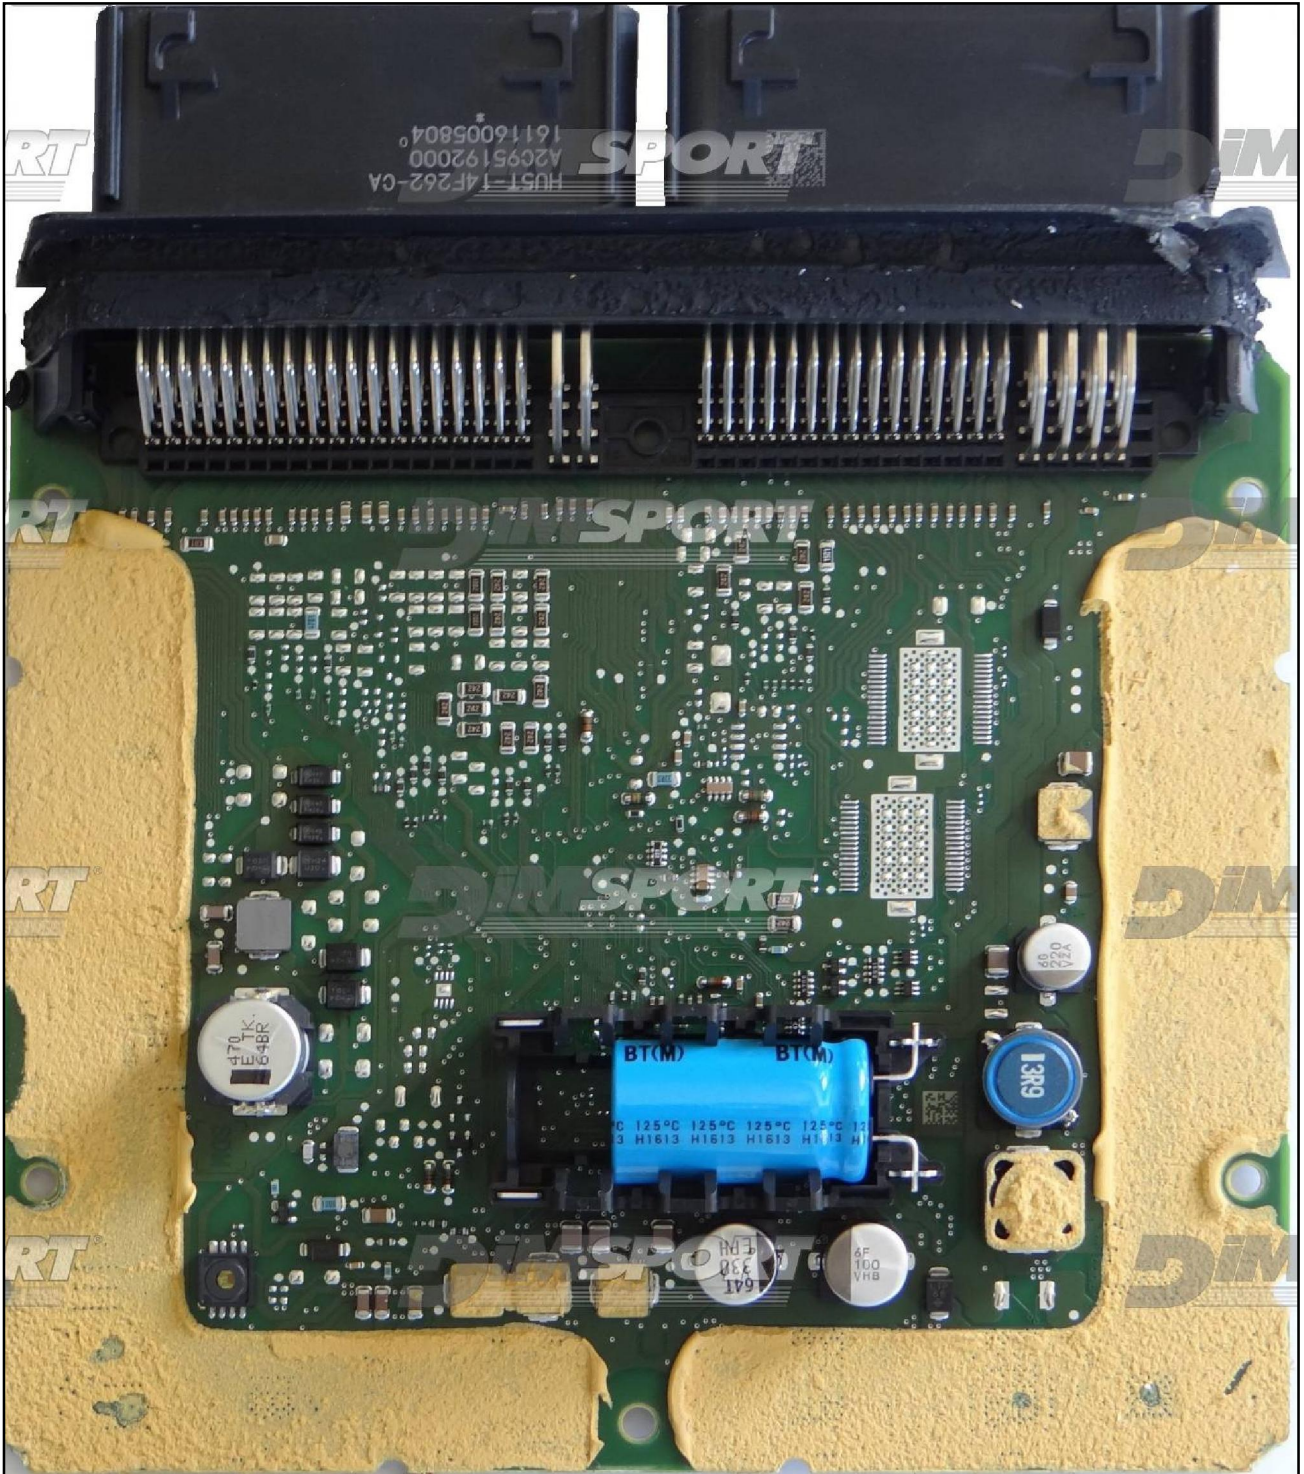


## CONTINENTAL EMS2511 IROM TC1791 FORD

### ECU CONNECTOR


In order to connect to the ECU use the CABLE F32GN037C.  
 Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET
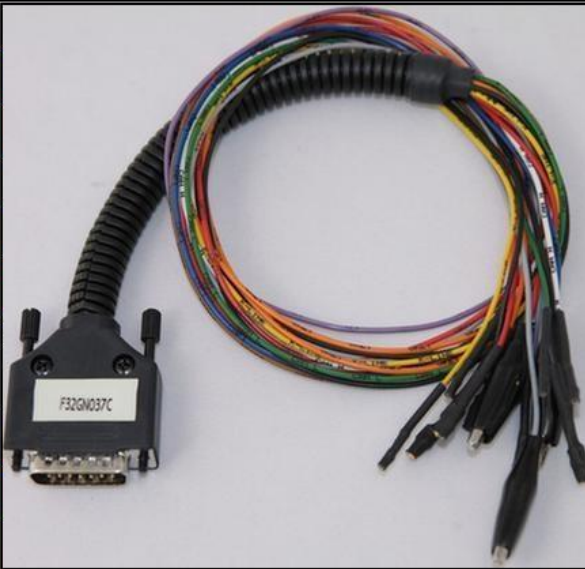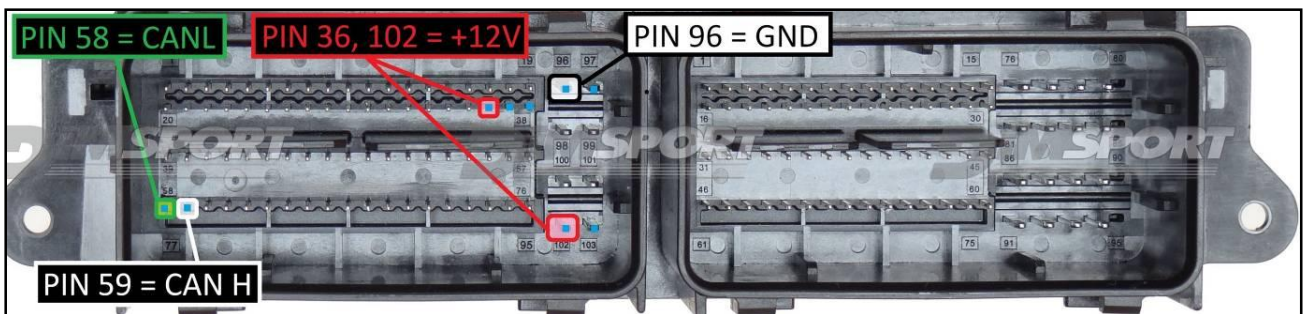
## CONTINENTAL EMS2511 IROM TC1791 FORD

For a correct communication with the ECU it is necessary to connect a 100 Ohm resistor as displayed in the following picture, on the microprocessor ECU side.  
Remove the resistor before placing the ECU back into the vehicle.

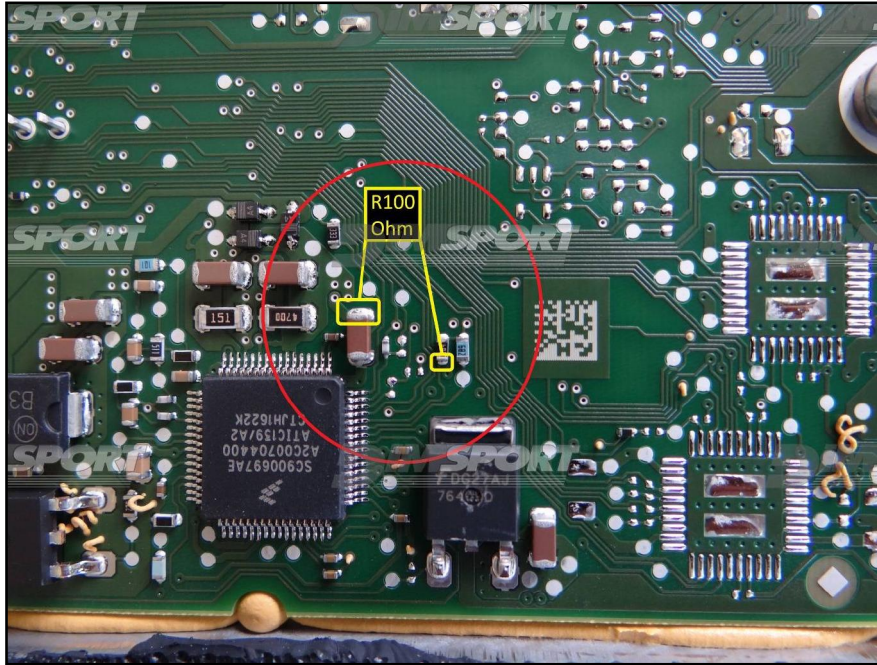

### BOOT CONNECTION

Connect the GREY wire of the cable F32GN037C as described here below

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	BOOT

BOOT pin is placed close to the condenser on the connector ECU side.

