

plugin 582 The lay-by pins are placed in the lower side of the ECU.

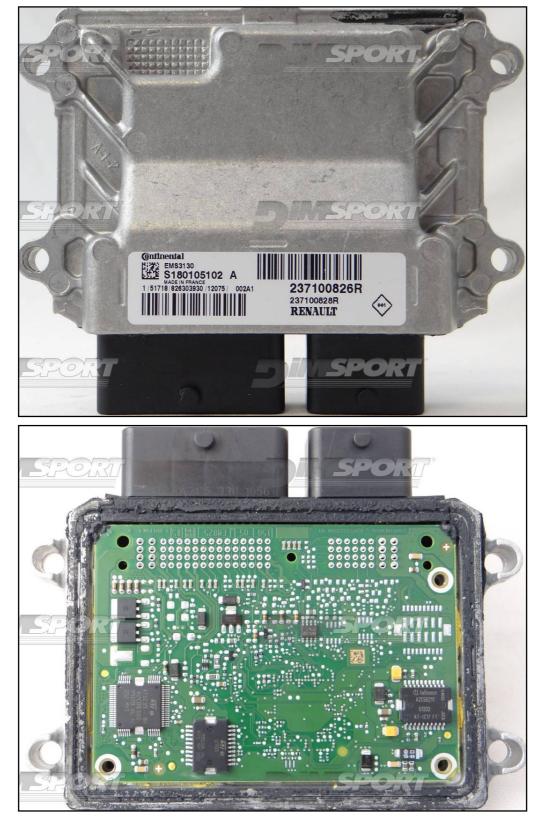

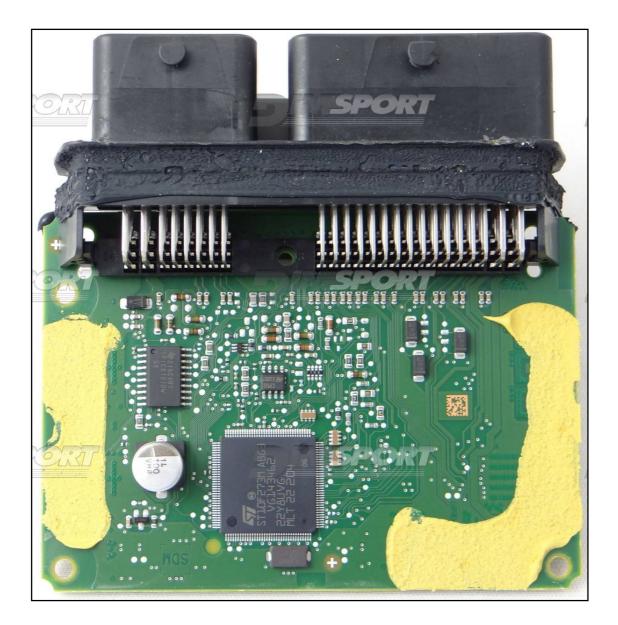


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

| COLORE FILO WIRE COLOUR | DESCRIZIONE DESCRIPTION | |
|----------------------------|------------------------------------------|----------------------|
| ROSSO RED | POSITIVO DIRETTO POWER BATTERY | |
| ARANCIO ORANGE | POSITIVO SOTTO QUADRO POWER SWITCH ON | |
| NERO BLACK | MASSA GND | |
| GIALLO | KLINE | |
| VERDE GREEN | CAN LOW | |
| BIANCO WHITE | ICAN HIGH | |
| GRIGIO GREY | POL4 BOOT | F32GH037C |
| BLU BLUE | POL5 CNF1 | Parameters / Star HA |
| | O TENSIONE PROG. Y PROG. VOLTAGE | - WHATERS |
| MARRONE BROWN | RESET | |

ECU CONNECTOR

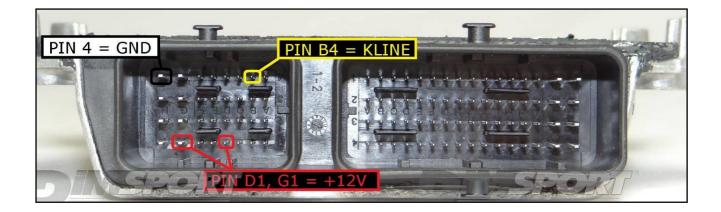

BOOT&CNF1 CONNECTION

Connect the GREY and BLUE wire of the F32GN037C cable as shown in the following picture :

| COLORE FILO WIRE COLOUR | | DESCRIZIONE DESCRIPTION | |
|----------------------------|----------------|----------------------------|--|
| | GRIGIO GREY | POL4 BOOT | |
| | BLU BLUE | POL5 CNF1 | |

