
plugin **590**

WARNING: IF the ECU has been updated with a firmware update from a SCANIA dealer it is possible that they blocked the BDM door. In this case there is no way to work on the ECU.

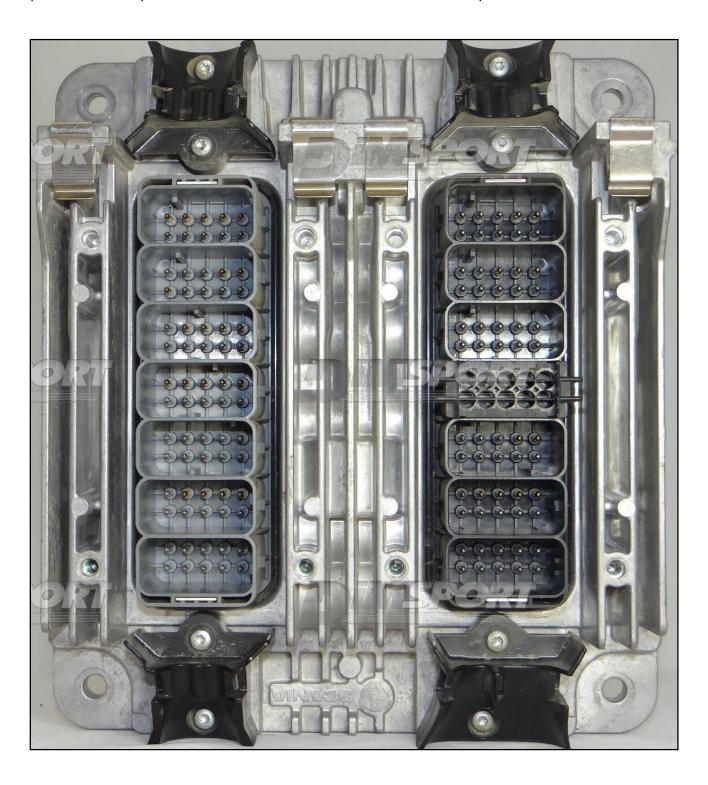

ECU CONNECTOR

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.


COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
	ROSSO RED	POSITIVO DIRETTO POWER BATTERY
	ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
r: 80	NERO BLACK	MASSA GND
	GIALLO YELLOW	KLINE
	VERDE GREEN	CAN LOW
	BIANCO WHITE	ICAN HIGH
	GRIGIO GREY	POL4 BOOT
	BLU BLUE	POL5 CNF1
		TENSIONE PROG. PROG. VOLTAGE
	MARRONE BROWN	RESET



WARNING:


Due to the relevant power absorbed by the ECU at the beginning of the communication procedures it is necessary to feed the ECU with a booster or an additional battery. The ECU must be fed through the Trasdata, connect the F32GN003 power cable to the Trasdata.



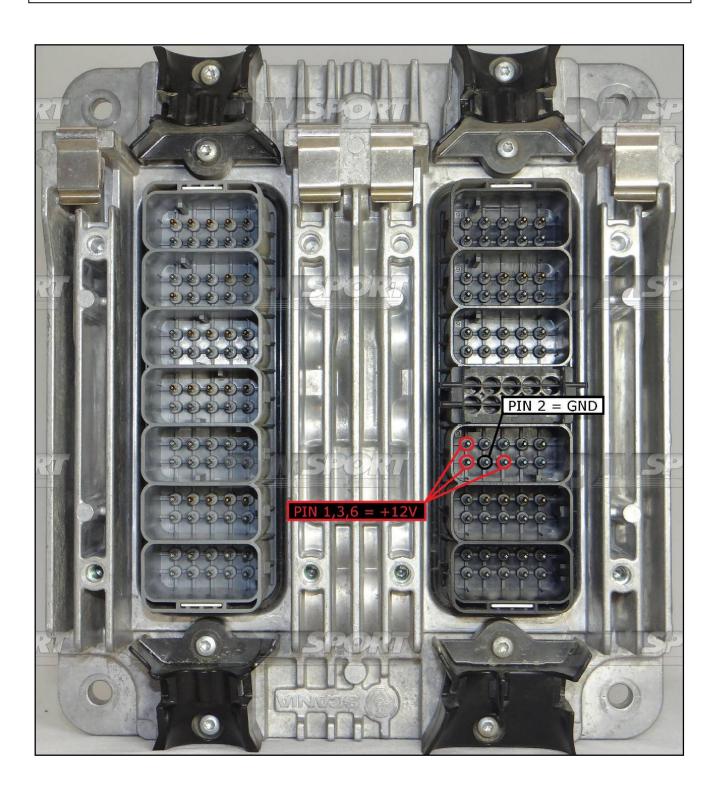

BDM LOOSE WIRE CONNECTION

Connect the flat cable F34NTF51 as shown here below

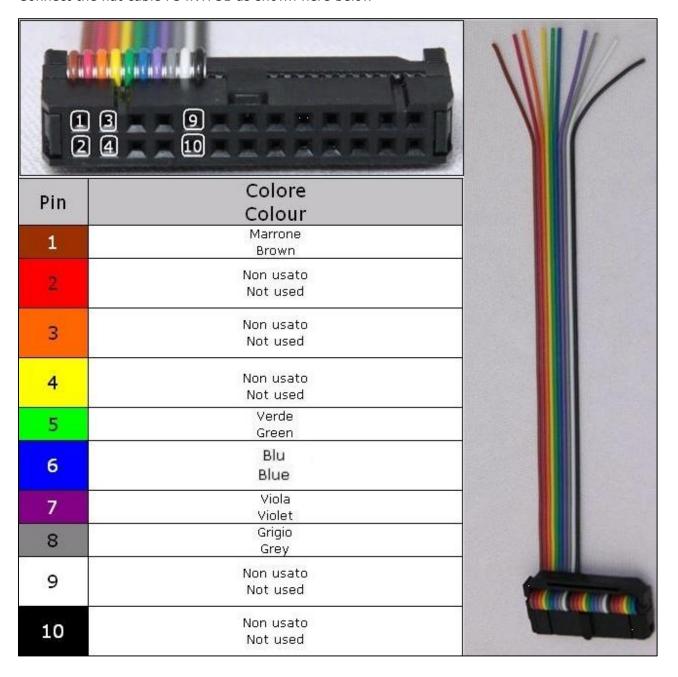

In order to connect the BDM flat cable it is necessary to remove the resin present over the board on the connection zone. To prevent any damage to the ECU perform such removing operation very gently and with care. At the end of this operation, before proceeding with the soldering, set the ecu back into the vehicle and check that the truck runs fine.

