
# plugin 987

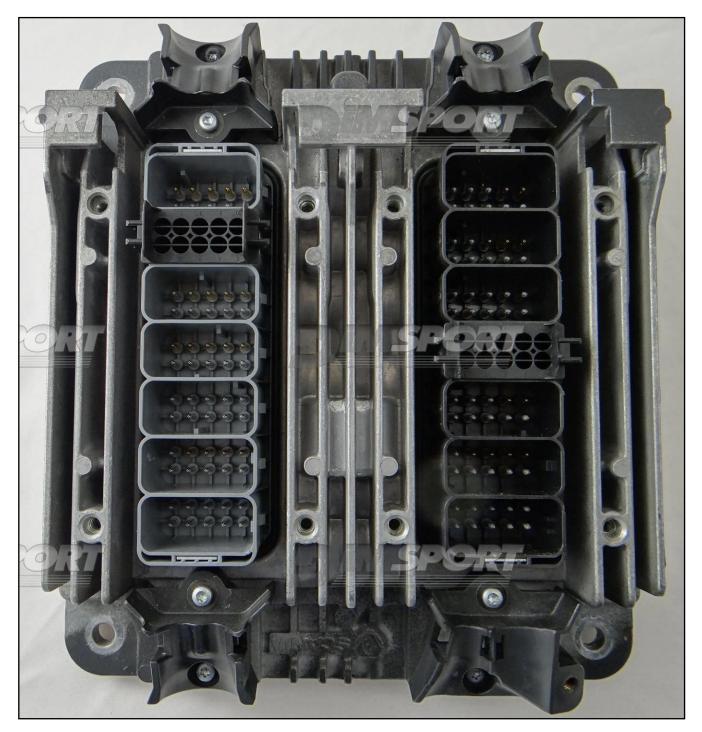



#### ECU CONNECTOR


In order to connect to the ECU use the cable F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION		
ROSSO RED	POSITIVO DIRETTO POWER BATTERY		
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	Allan	
NERO BLACK	MASSA GND		
GIALLO YELLOW	KLINE		
VERDE GREEN	CAN LOW		
BIANCO WHITE	ICAN HIGH		
GRIGIO GREY	POL4 BOOT	F32GN097C	
BLU BLUE	POL5 CNF1	Ennand A	10
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	SMANNS	
MARRONE BROWN	RESET		

Due to the relevant power absorbed by the ECU at the beginning of the communication it is necessary to feed the ECU with an external power supply or a car battery. Connect the power cable F32GN003 to the Trasdata and then to the power source.


The ECU must be powered through the Trasdata using the F32GN037C/D cable.



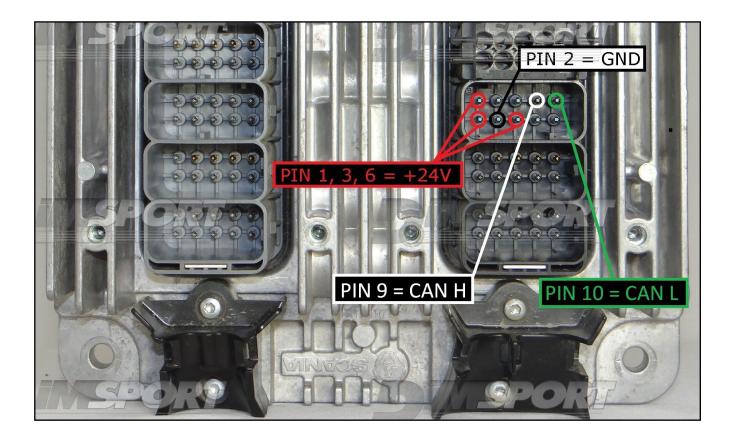

To the power feeding pins 1,3,6 (+24V) you can connect both wires red (VECU) and orange (VKEY) of the F32GN037C/D cable.

For the BAM connection it is necessary to remove the resin that covers the pads in the red marked area. Perform this operation with care and attention to avoid damage or removal of components. Once this operation is completed, it is suggested to reinstall the ECU on the vehicle and check that the vehicle is working properly.

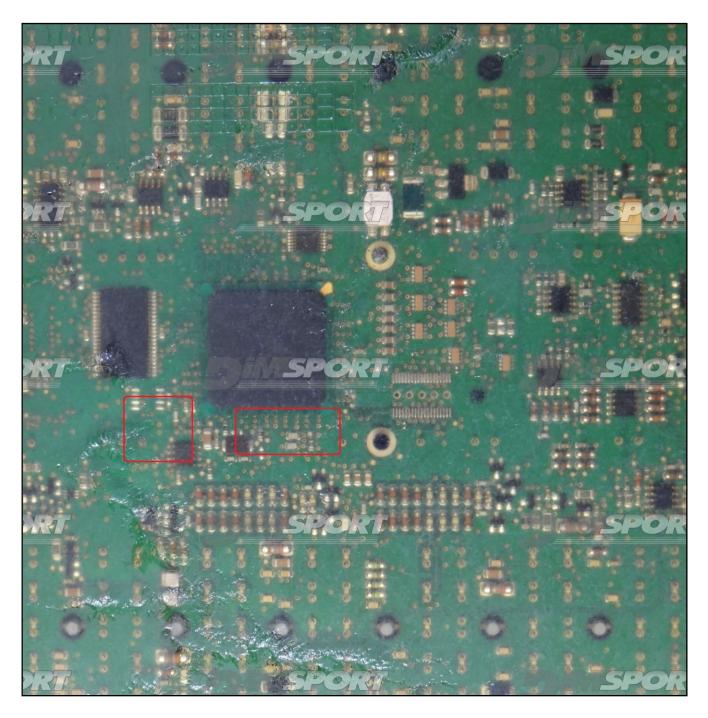

#### **BOOT&CNF1 CONNECTION**

Connect the GREY&BLUE wires of the cable F32GN037C/D as described here below:

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	
	BLU BLUE	POL5 CNF1	

