
### plugin 1010

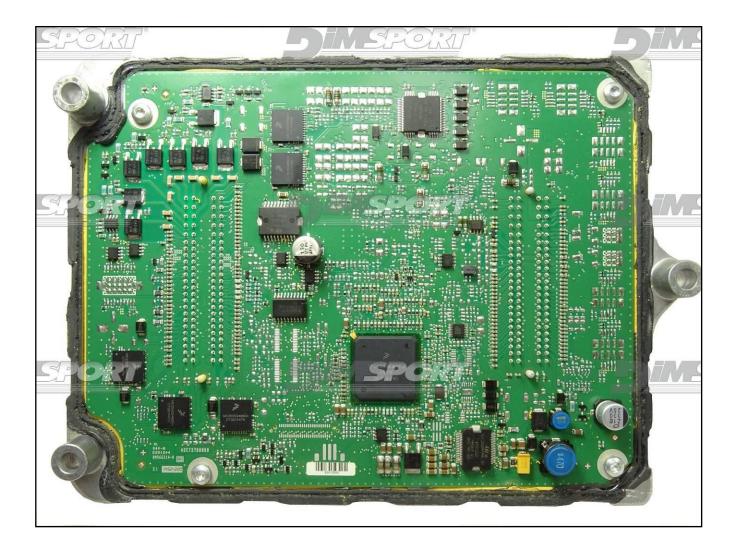







#### DIRECT CONNECTION

In order to connect to the ECU use the cable F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON

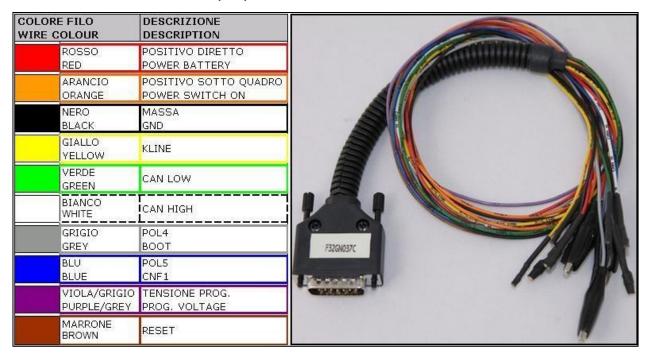

#### ECU CONNECTOR

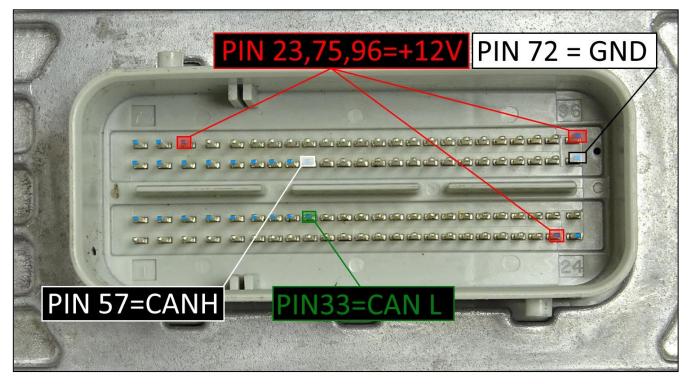

To the power feeding pins 23,75,96 (+12V) you can connect both wires red (VECU) and orange (VKEY) of the F32GN037C/D cable, they both have 12V signal.

### DIRECT CONNECTION CNF1

Connect the BLUE wire of the cable F32GN037C/D as described here below:

Constant of the last	RE FILO COLOUR	DESCRIZIONE DESCRIPTION	
	BLU BLUE	CNF1	

