
plugin 1557

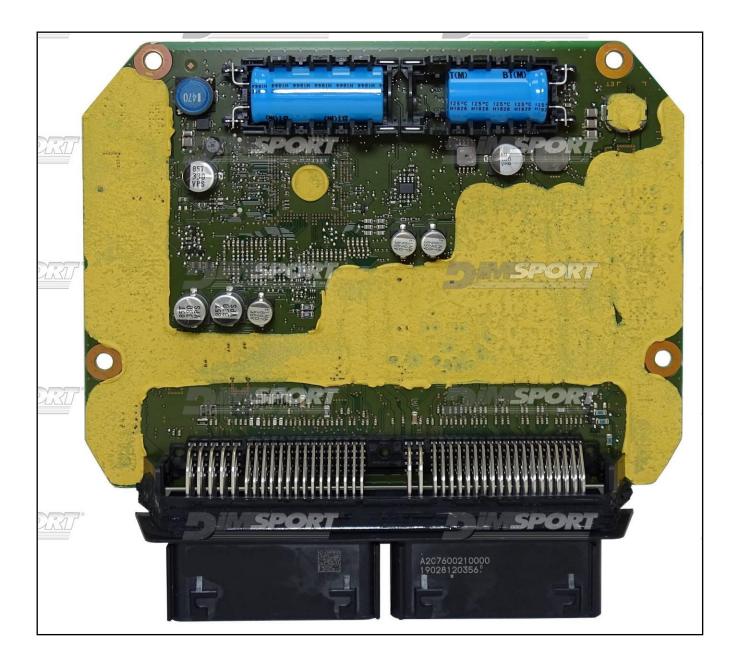







DIRECT CONNECTION

In order to connect to the ECU use the cable F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON

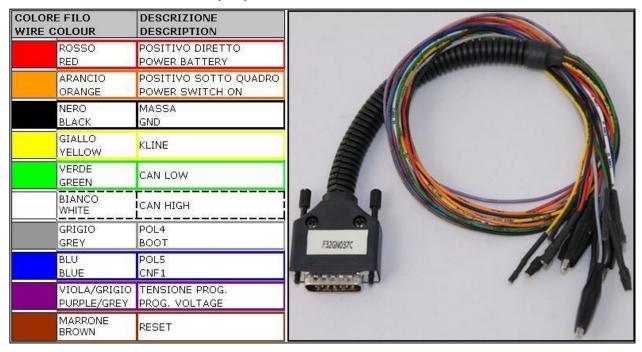

ECU CONNECTOR

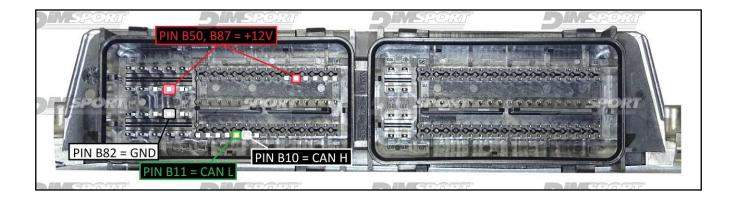

DIRECT CONNECTION CNF1

Connect the BLUE wire of the cable F32GN037C/D as described here below:

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	BLU BLUE	CNF1	

