# plugin 1563





#### **DIRECT CONNECTION**

In order to connect to the ECU use the cable F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COULOR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHYTE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GN03TC
BLU BLUE	POL5 CNF1	[6949]
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	- MANAGE
MARRONE GREY	RESET	

Due to the relevant power absorbed by the ECU at the beginning of the communication it is necessary to feed the ECU with an external power supply or a car battery. Connect the power cable F32GN003 to the Trasdata and then to the power source.

The ECU must be powered through the Trasdata using the F32GN037C/D cable.



## **ECU CONNECTOR**



## **BOOT & CNF1 DIRECT CONNECTION**

Connect the GREY and BLUE wires of the cable F32GN037C/D as shown in the picture.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	POL4 BOOT	
	BLU BLUE	POL5 CNF1	

