

# SIM2K CONTINENTAL

plugin 194,202,521

## SIM2K - 141


The lay-by pins are placed in the lower-right side of the ECU



# SIM2K CONTINENTAL

## SIM2K - 341

The lay-by pins are placed in the lower-right side of the ECU


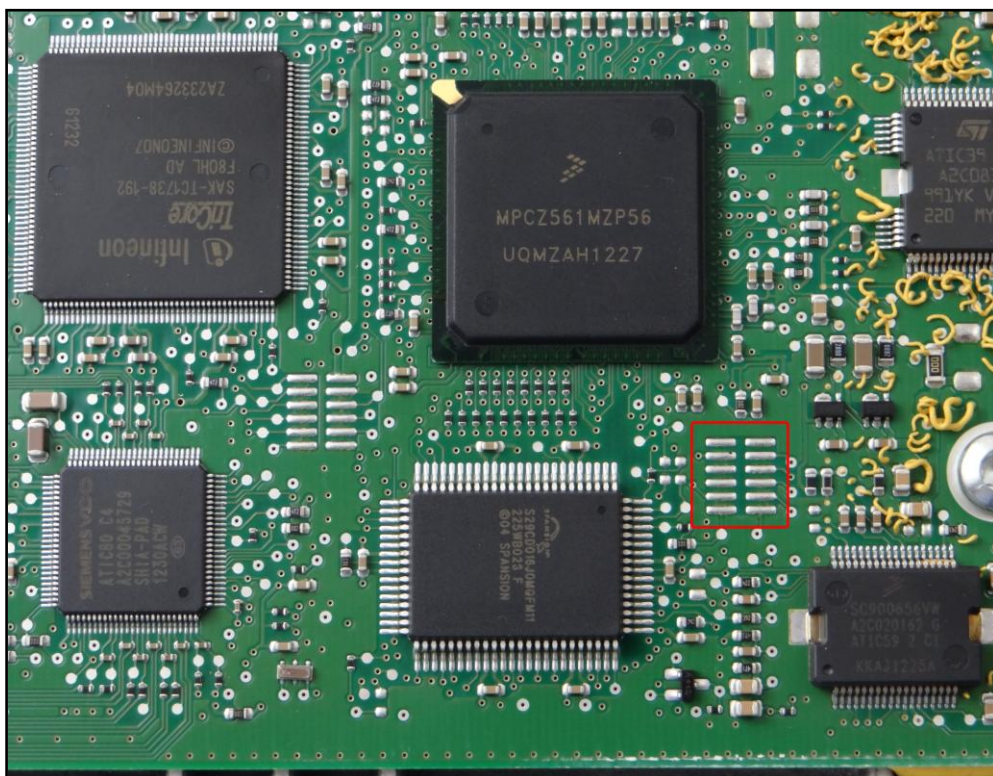


# SIM2K CONTINENTAL

## ECU CONNECTOR



In order to connect to the ECU use the CABLE F32GN037C/D.  
Make sure that the POWER led (red) on Trasdata is ON.  
Use the same power connections with the DIMA kit.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

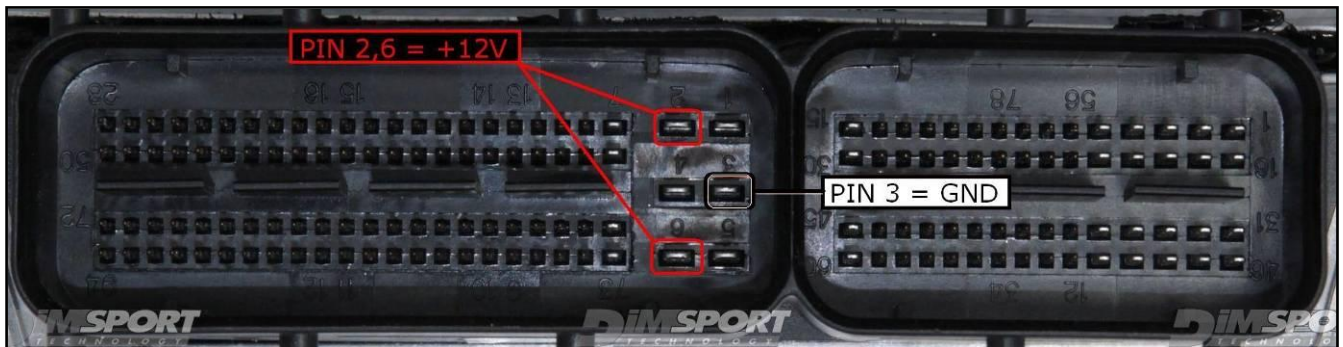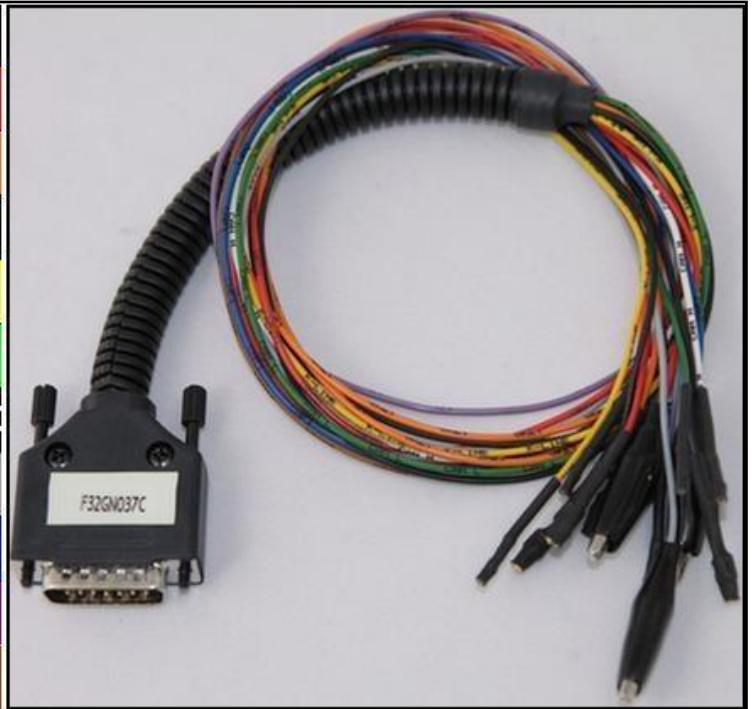

# SIM2K CONTINENTAL

## DIRECT CONNCTION with the SIEMENS F34NTA06 adapter

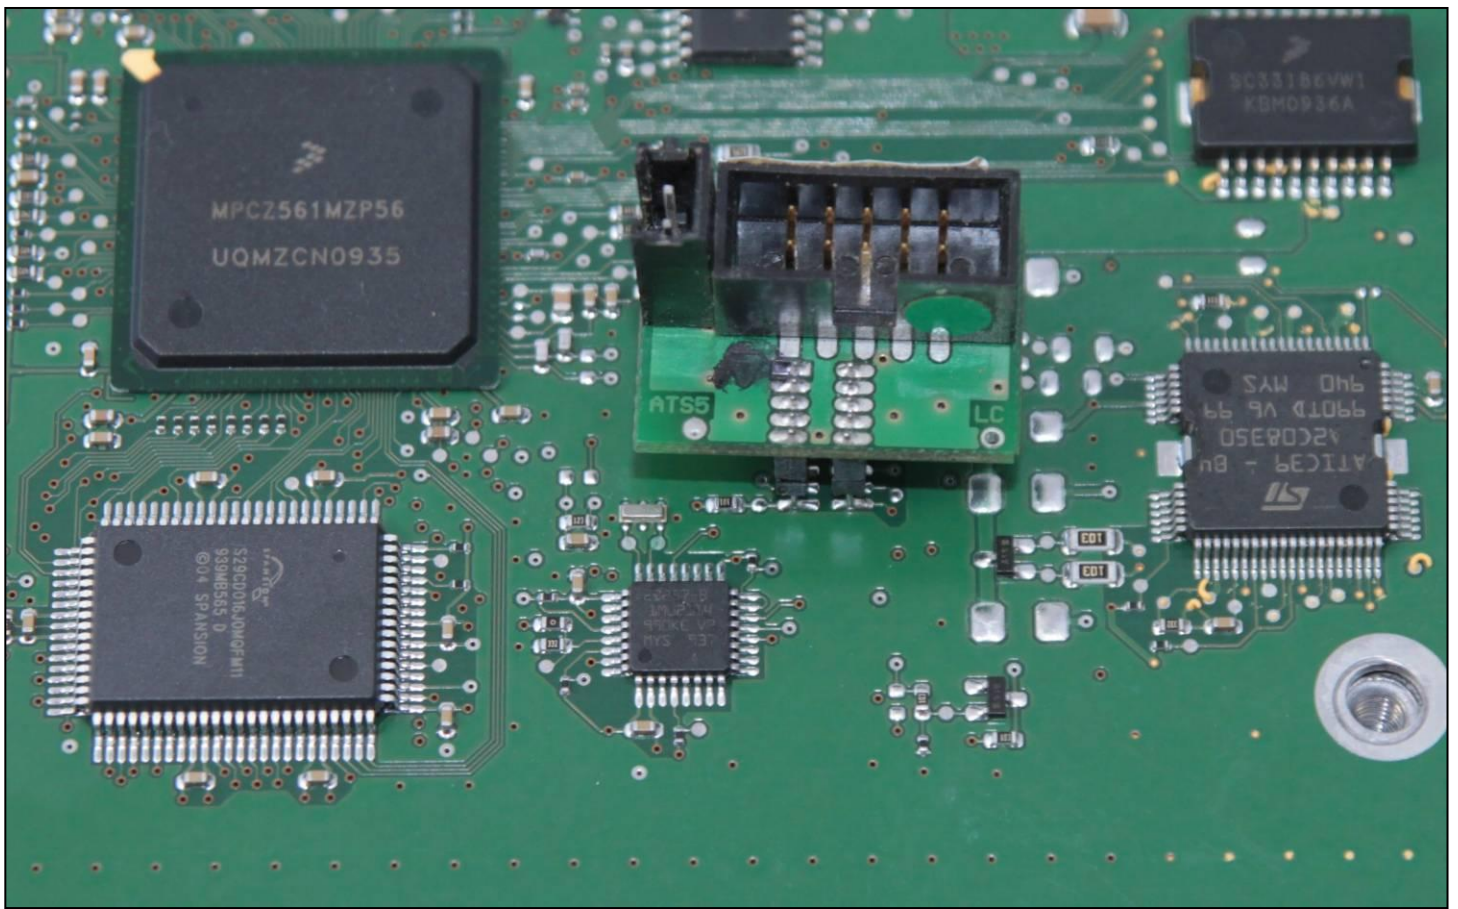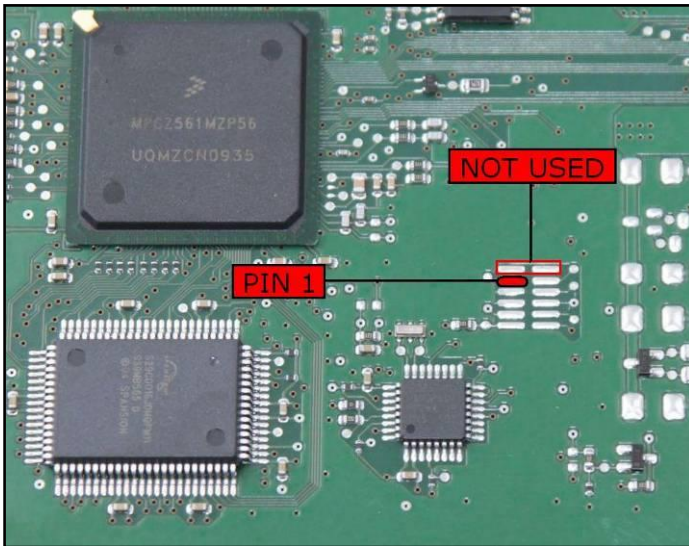

# SIM2K CONTINENTAL

## DIMA CONNECTION with the F34DM003+F34DM004 adapters

