


CONTINENTAL SIM2K 240 IROM TC1766 HYUNDAI KIA

plugin 1498

TRANSMISSION management



CONTINENTAL SIM2K 240 IROM TC1766 HYUNDAI KIA

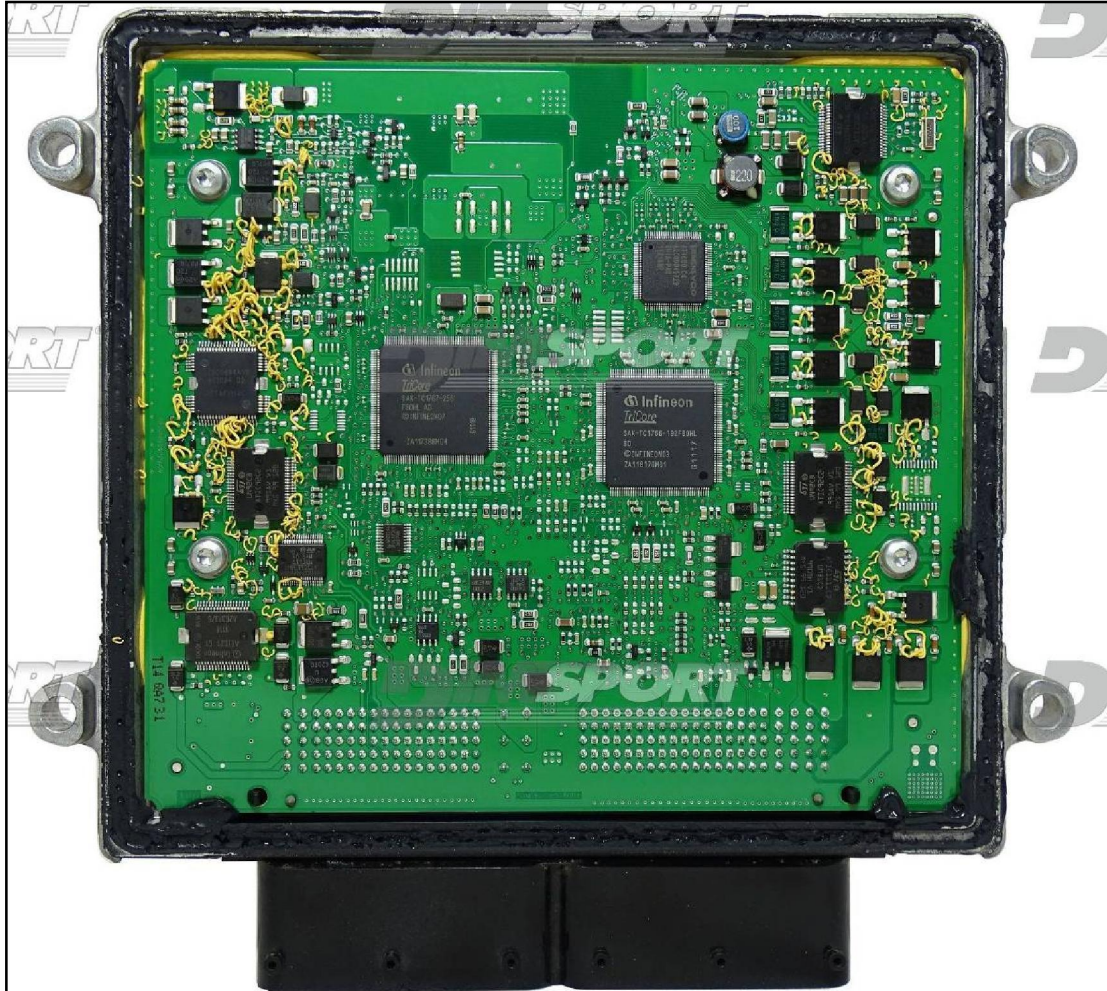


CONTINENTAL SIM2K 240 IROM TC1766 HYUNDAI KIA

DIRECT CONNECTION

In order to connect to the ECU use the cable F32GN037C.
 Make sure that the POWER led (red) on Trasdata is ON.


COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

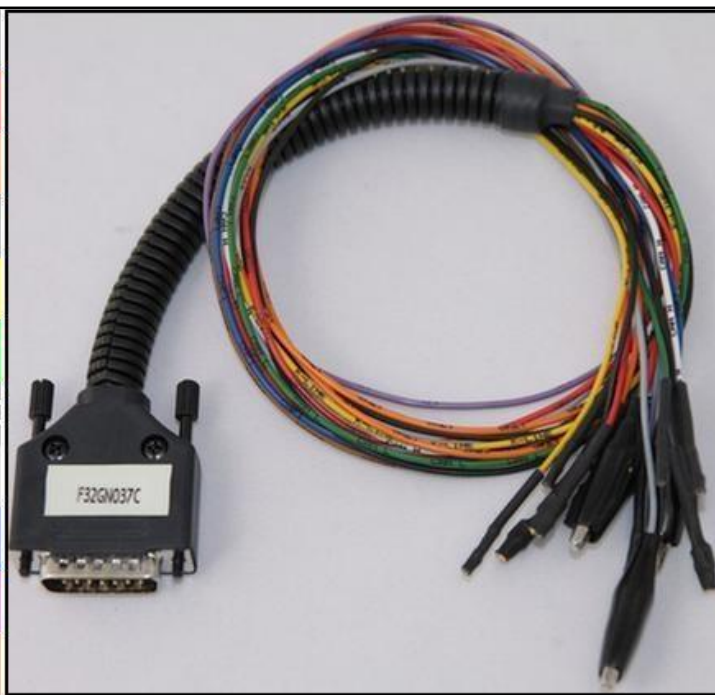

To the power feeding pins 5,41,58 (+12V) you can connect both wires red (VECU) and orange (VKEY) of the F32GN037C/D cable, they both have 12V signal.

CONTINENTAL SIM2K 240 IROM TC1766 HYUNDAI KIA

In order to read&write properly the ECU it is necessary to perform the LINK1, before placing back the ECU into the vehicle remove both LINK.

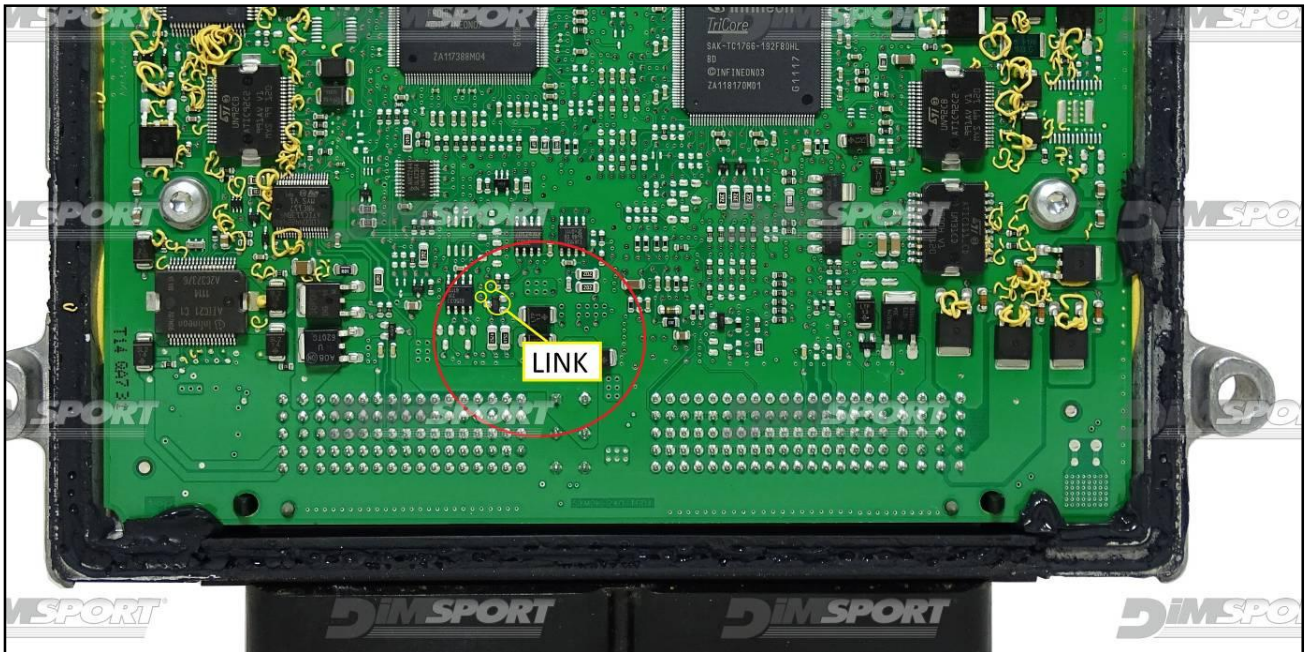

CONTINENTAL SIM2K 240 IROM TC1766 HYUNDAI KIA

DIRECT BOOT/CNF1 CONNECTION

Connect the GREY&BLUE wires of the cable F32GN037C/D as described here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	BOOT
BLU BLUE	CNF1

