# plugin **1058**

## **ENGINE** management





### **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GN037C
BLU BLUE	POL5 CNF1	1699
VIOLA/GRIGIO PURPLE/GREY		- CHANGE
MARRONE BROWN	RESET	



To the power feeding pins 5,41,58 (+12V) you can connect both wires red (VECU) and orange (VKEY) of the F32GN037C cable, they both have 12V signal.

### **BOOT CONNECTION**

Connect the GREY and BLUE wires of the cable F32GN037C/D as shown in the picture:

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	воот	
	BLU BLUE	CNF1	

