


CONTINENTAL V56.1 TC277TP IROM PSA

plugin 1668

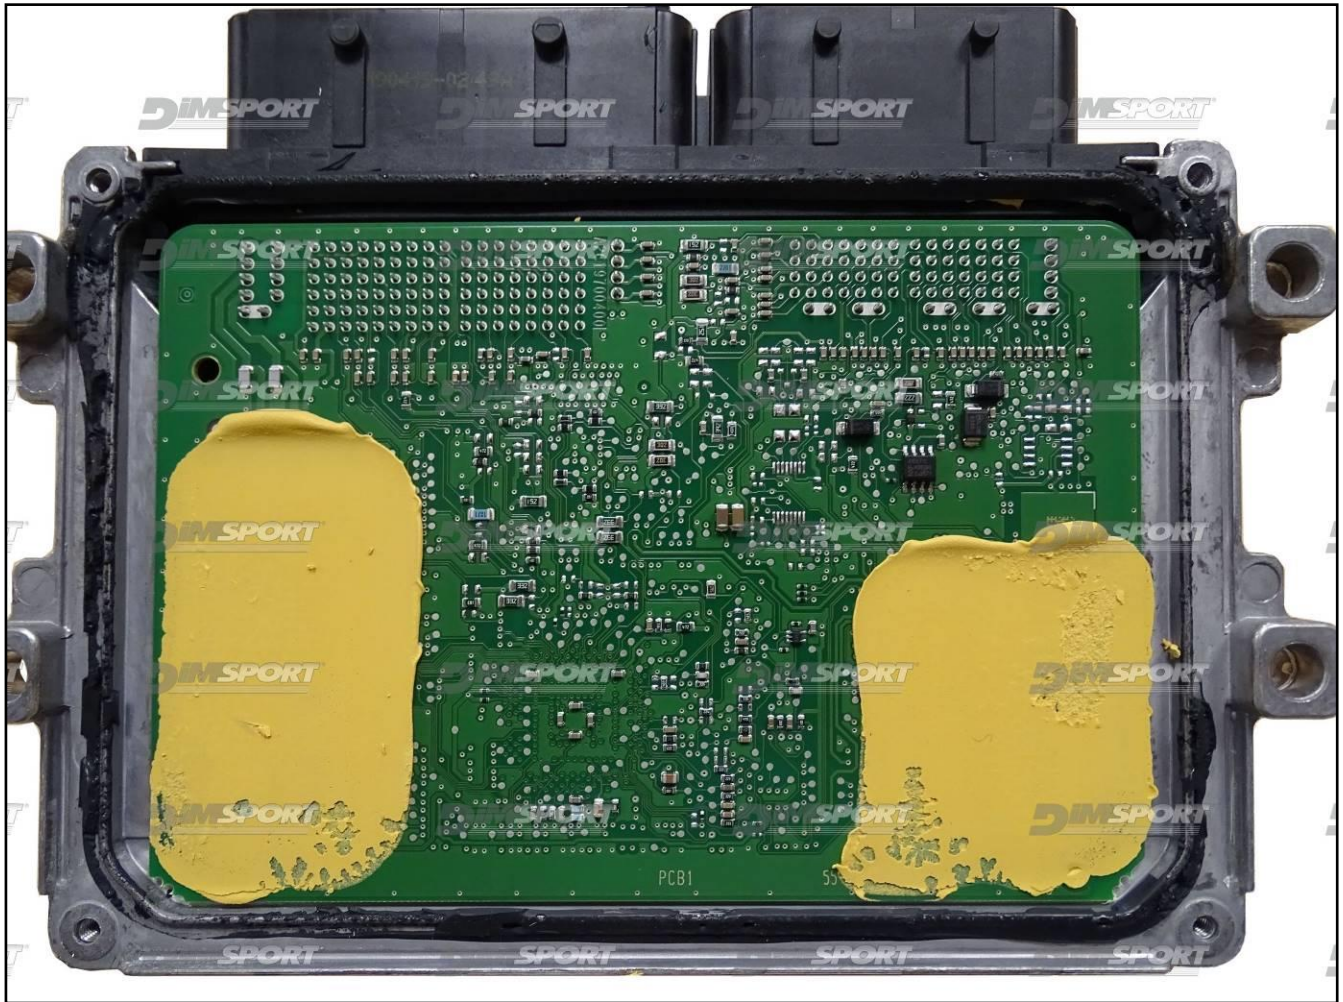

CONTINENTAL V56.1 TC277TP IROM PSA





CONTINENTAL V56.1 TC277TP IROM PSA

DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D.

Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

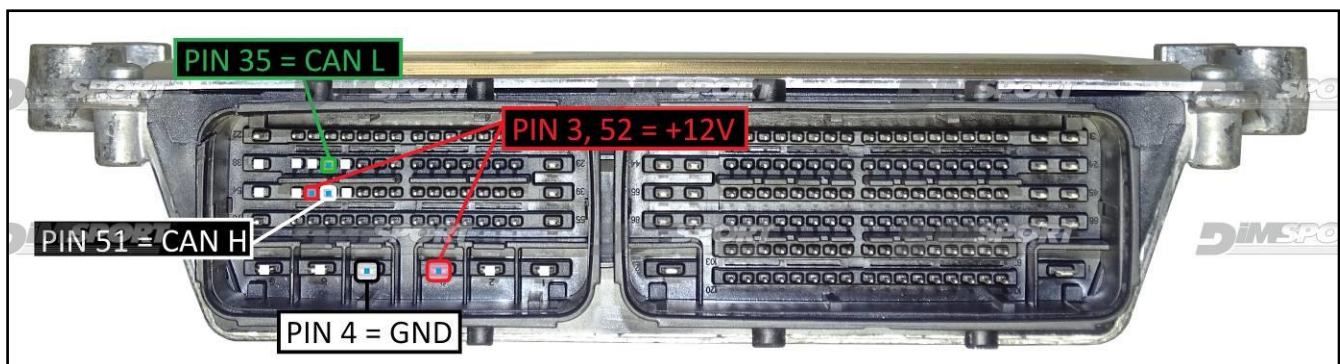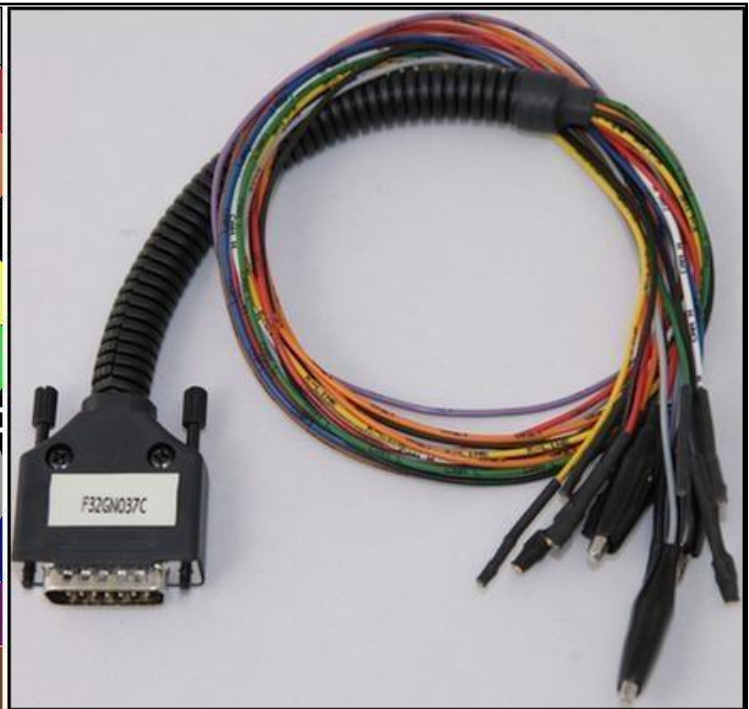


WARNING: Due to the relevant power absorbed by the ECU at the beginning of the communication it is necessary to feed the ECU with an external power supply or a car battery. Connect the power cable F32GN003 to the Trasdata and then to the power source. The ECU must be powered through the Trasdata using the F32GN037C/D cable.

CONTINENTAL V56.1 TC277TP IROM PSA

CONNESSIONE RESET & CNF1 & SEGNALE FILO 23

It is necessary to use the flat cable F34NTF53 connecting the ORANGE wire to the pad n.23 shown in the following picture.

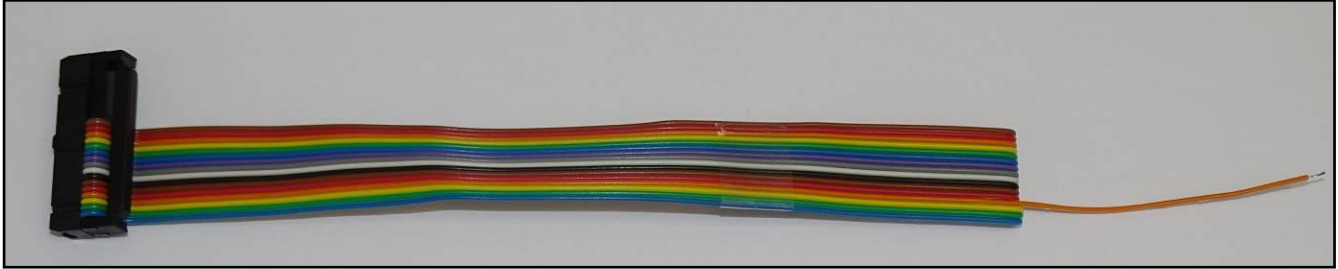

it is necessary to perform a LINK, remove it before placing back the ECU into the vehicle.

Connect the BLUE&BROWN wires of the cable F32GN037C/D as described here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
BLU BLUE	CNF1
MARRONE BROWN	RESET

