

CONTINENTAL VD46 SH72546R JTAG PSA

plugin 1049




CONTINENTAL VD46 SH72546R JTAG PSA



CONTINENTAL VD46 SH72546R JTAG PSA



CONTINENTAL VD46 SH72546R JTAG PSA

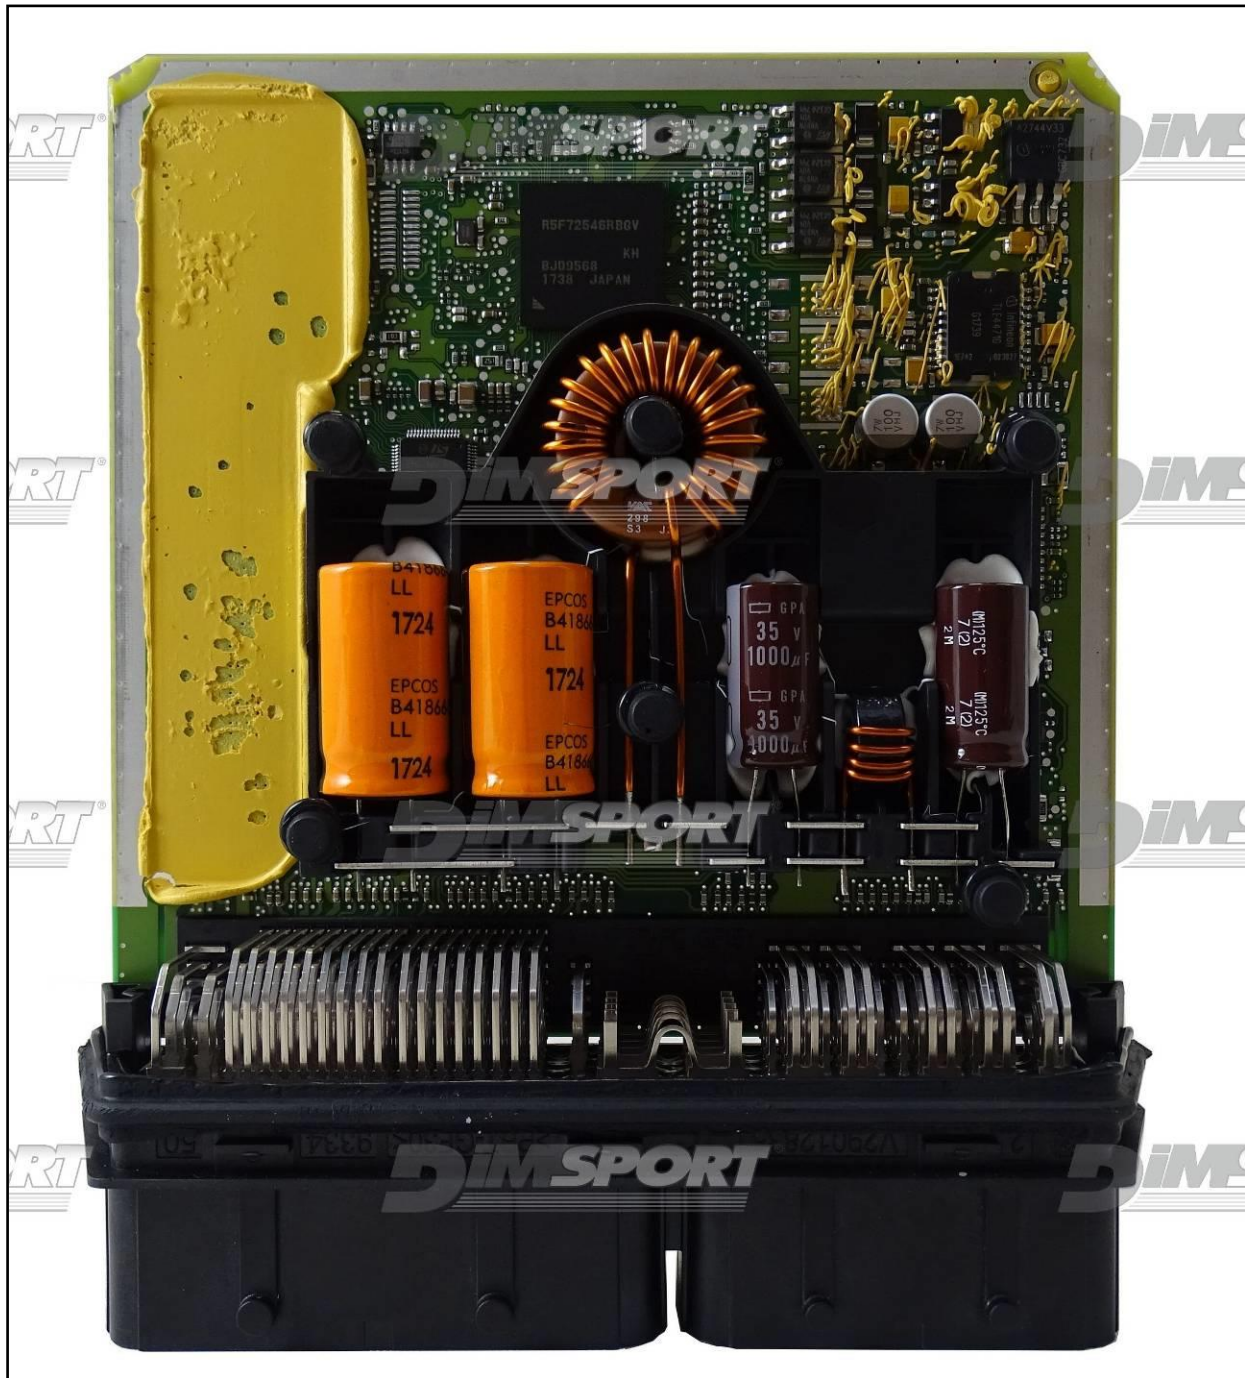


CONTINENTAL VD46 SH72546R JTAG PSA


DIRECT CONNECTION

For the connection use the cable F32GN037C/D connected to the ECU.
Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
ROSSO RED	ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	NERO BLACK	MASSA GND
GIALLO YELLOW	GIALLO YELLOW	KLINE
VERDE GREEN	VERDE GREEN	CAN LOW
BIANCO WHITE	BIANCO WHITE	CAN HIGH
GRIGIO GREY	GRIGIO GREY	POL4 BOOT
BLU BLUE	BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	MARRONE BROWN	RESET

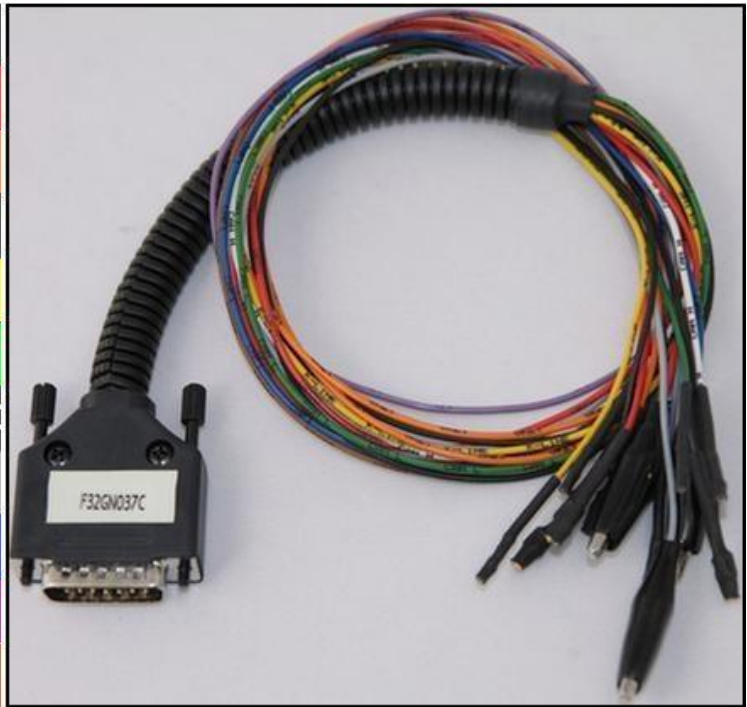


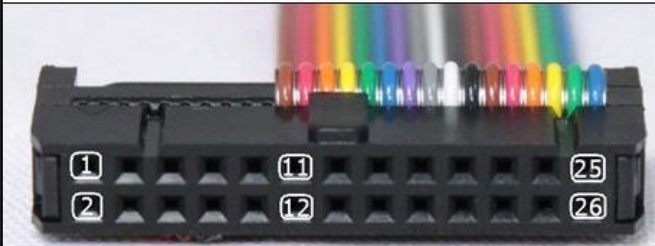
ECU CONNECTOR

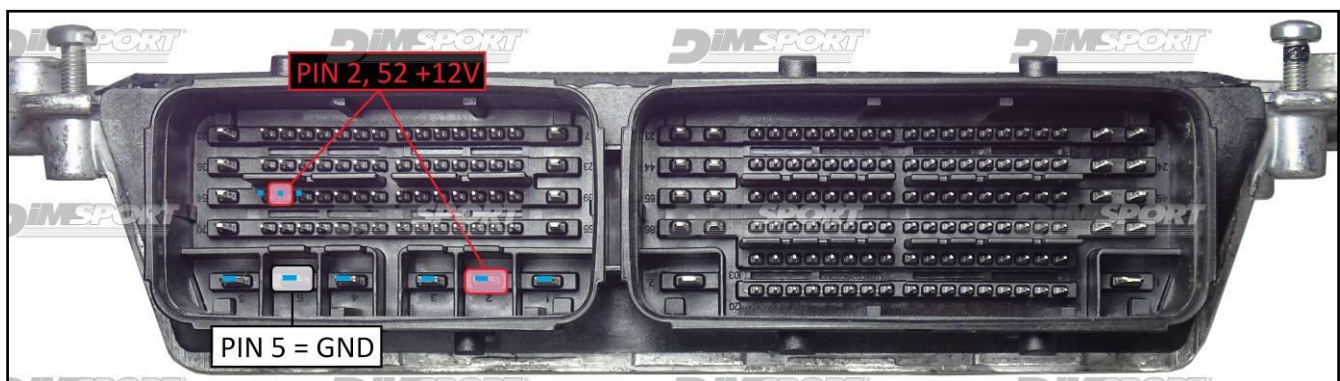

CONTINENTAL VD46 SH72546R JTAG PSA

J-TAG LOOSE WIRES CONNECTION

For the reading & writing procedures use the FLAT cable F34NTF53



Pin	Colore Colour
11	Non usato Not used
12	Non usato Not used
13	Non usato Not used
14	Non usato Not used
15	Non usato Not used
16	Blu Blue
17	Viola Violet
18	Grigio Grey
19	Bianco White
20	Nero Black
21	Marrone Brown
22	Rosso Red
23	Arancio Orange
24	Giallo Yellow
25	Verde Green
26	Non usato Not used

CONTINENTAL VD46 SH72546R JTAG PSA

Connect the wires on the pads avoiding any short circuits.
Connections are required on both sides of the ECU.

PROCESSOR SIDE



CONTINENTAL VD46 SH72546R JTAG PSA

COVER SIDE

