

CONTINENTAL VD56.1 TC297TP IROM PSA

plugin 1546



CONTINENTAL VD56.1 TC297TP IROM PSA





# CONTINENTAL VD56.1 TC297TP IROM PSA

## ECU CONNECTOR

In order to connect to the ECU use the cable F32GN037C/D.  
Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

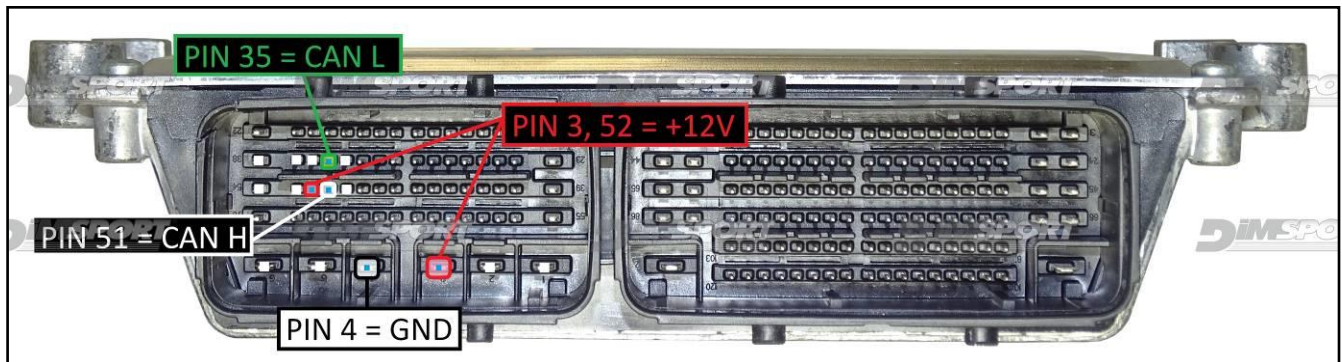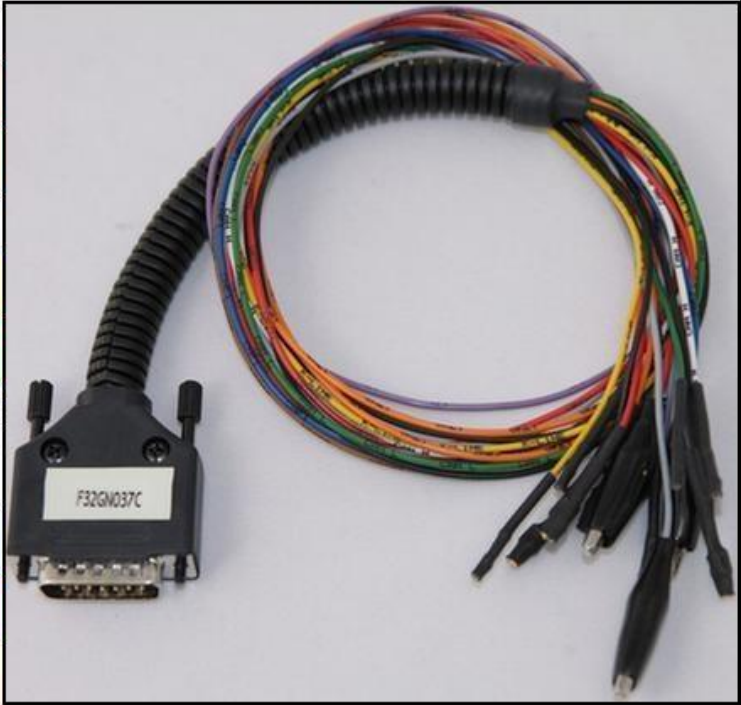


**WARNING:** due to the relevant power absorbed by the ECU at the beginning of the communication it is necessary to feed the ECU with an external power supply or a car battery. Connect the power cable F32GN003 to the Trasdata and then to the power source. The ECU must be powered through the Trasdata using the F32GN037C/D cable.

## CONTINENTAL VD56.1 TC297TP IROM PSA

### RESET & CNF1 & WIRE SIGNAL 23 CONNECTION

It is necessary to use the flat cable F34NTF53 by connecting the ORANGE wire, shown in the picture below, to the pad 23 highlighted in the next picture.

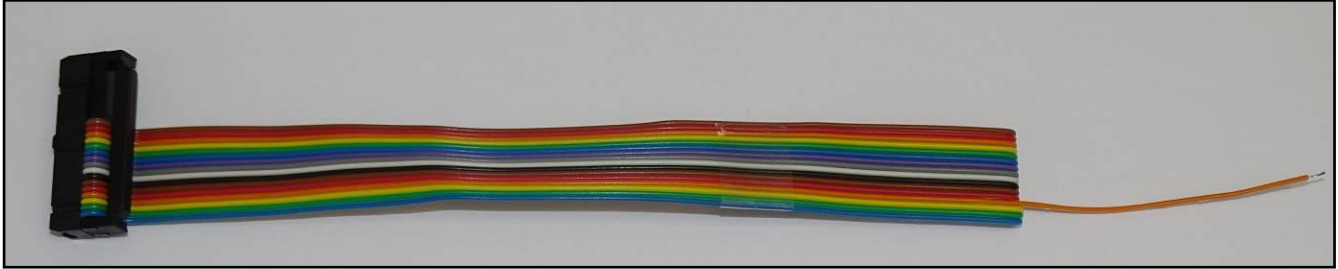


Perform the bridge (LINK) as shown in the next picture and remember to remove it before placing back the ECU into the vehicle.

Connect the BROWN & BLUE wires of the cable F32GN037C/D as described here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
BLU BLUE	CNF1
MARRONE BROWN	RESET

#### TYPE 01

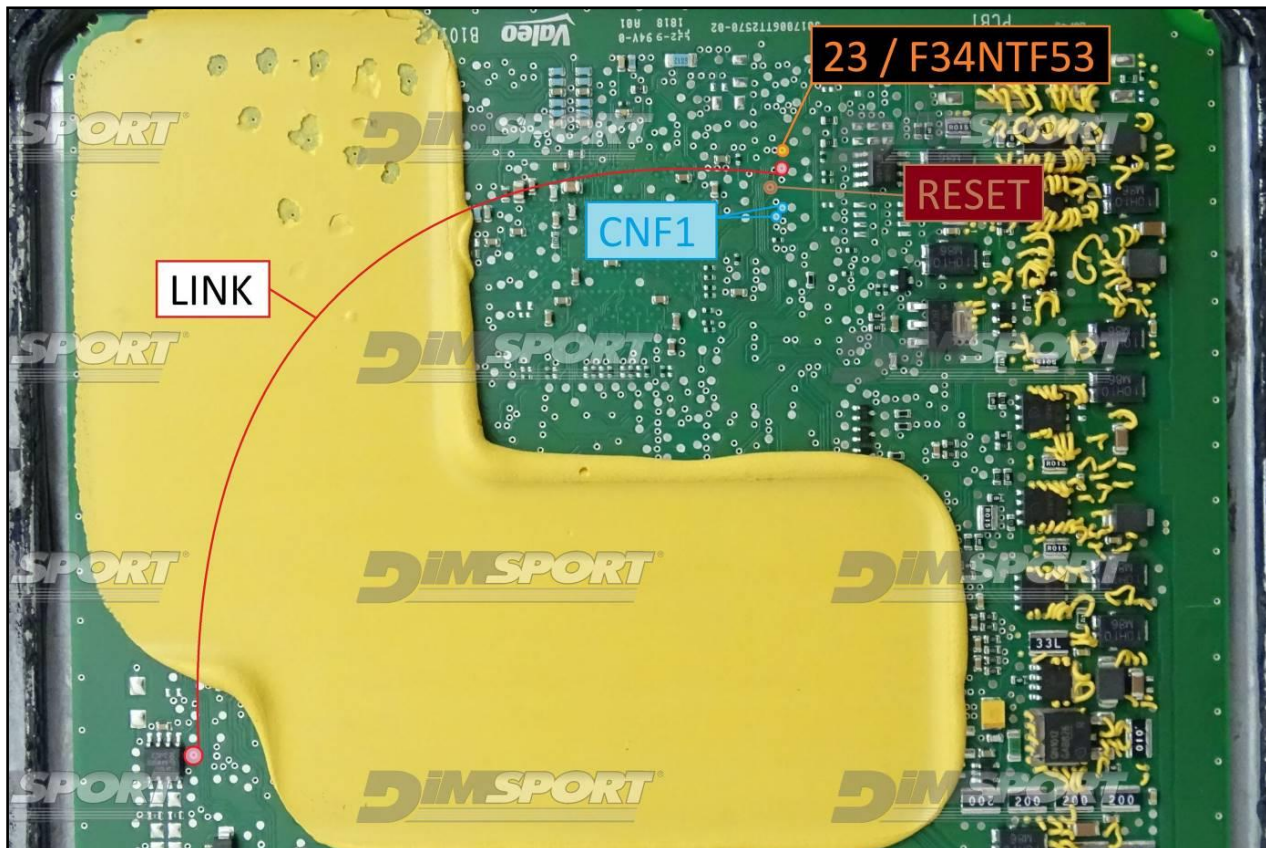

CONTINENTAL VD56.1 TC297TP IROM PSA

TYPE 02

