

plugin 948

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

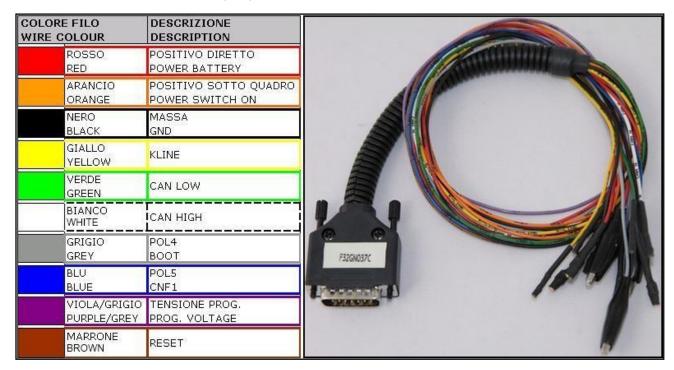

ECU CONNECTOR

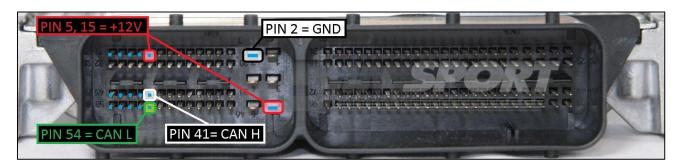

ECU equipped with $OM651\ SOLENOID\ system$







BOOT/CNF1 DIRECT CONNECTION

Connect the GREY & BLUE wires of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	воот	
	BLU BLUE	CNF1	



ECU equipped with OM651 PIEZOTEC system








BOOT/CNF1 DIRECT CONNECTION

Connect the GREY & BLUE wires of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	GRIGIO GREY	воот	
	BLU BLUE	CNF1	

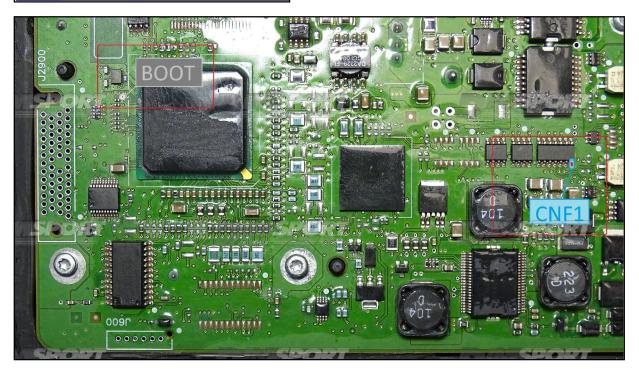

WARNING

If instead of the 14-pin component, used for CNF1 signal, it is present a 8 pins component, the CNF1 connection must NOT be carried out, it is necessary the BOOT connection ONLY.

