# plugin 112

The lay-by pins are placed in the right lower part of the ECU, as shown in the picture.





#### **ECU CONNECTOR**

In order to connect to the ECU use the CABLE F32GN037C.

Make sure that the POWER led (red) on Trasdata is ON.

These connections are required for all the connection approaches: soldering adapter and metal positioning frame adapter.

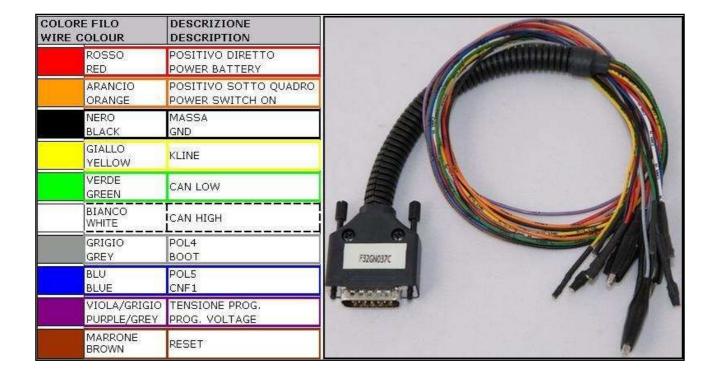

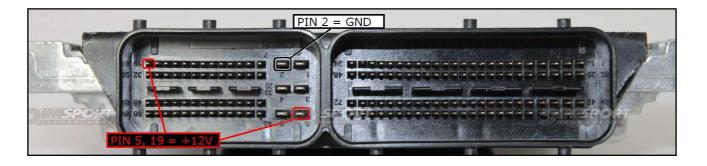



#### **DIRECT CONNECTION with F34NTA09 adapter**

Connect the F34NTA09 adapter as shown in the picture.


WARNING: F34NTA09 adapter can be identified by the code AD02 written on the PCB.



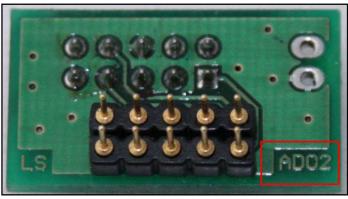

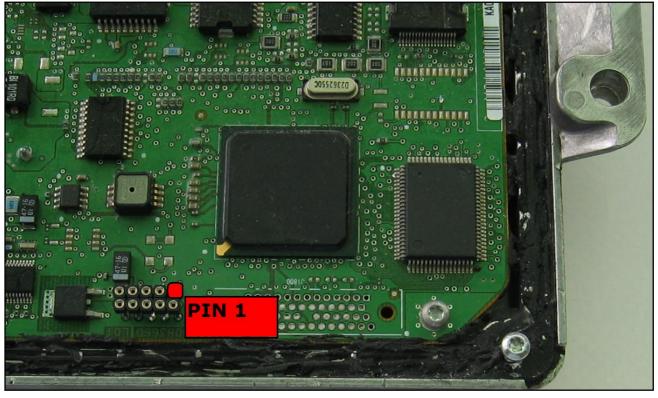

Connect the F34NTA09 adapter as shown in the following picture, the following picture is merely indicative.

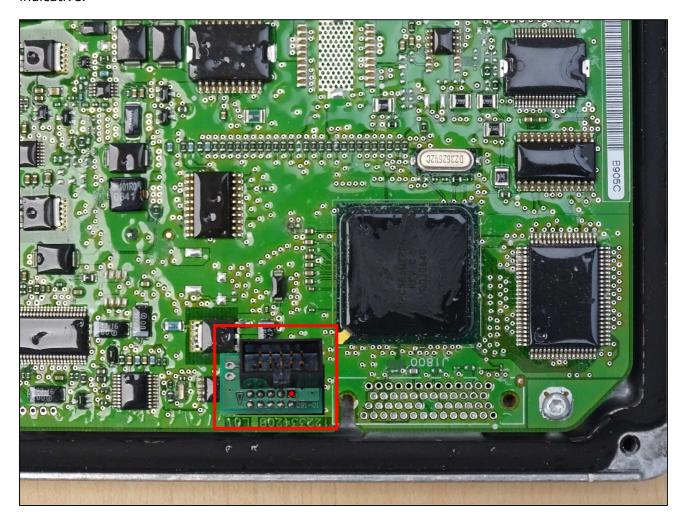

### **METAL POSITIONING FRAME CONNECTION**

For the metal positioning frame connection is required the F34DM009 adapter



