
plugin 1102

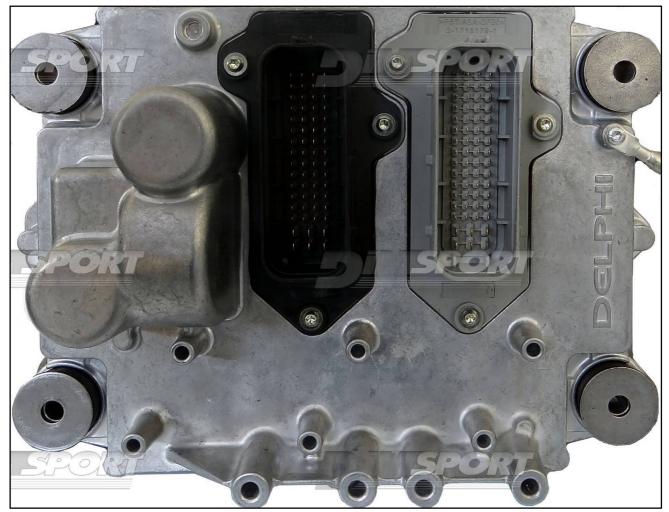





DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	F3200057C
BLU BLUE	POL5 CNF1	Beccase all I
	TENSIONE PROG. PROG. VOLTAGE	- WHATHER -
MARRONE BROWN	RESET	

ECU CONNECTOR




WARNING :

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION – ECU READING:

For the READING procedure use the FLAT cable F34NTF53

Pin	Colore Colour	
11	Non usato	
	Not used Non usato	
12	Not used	
13	Non usato	
1.2	Not used	
14	Non usato Not used	
	Not used Non usato	
15	Not used	
16	Non usato	
	Not used	
17	Non usato Not used	
10	Grigio	
18	Grey	
19	Bianco	
19	White	
20	Nero Black	
(50/ma)	DIGCK	
21	Marrone	
	Brown	
2.2	Rosso Red	
	Arancio	
23	Orange	
24	Giallo	
	Yellow Verde	
25	Green	
26	Non usato	
20	Not used	

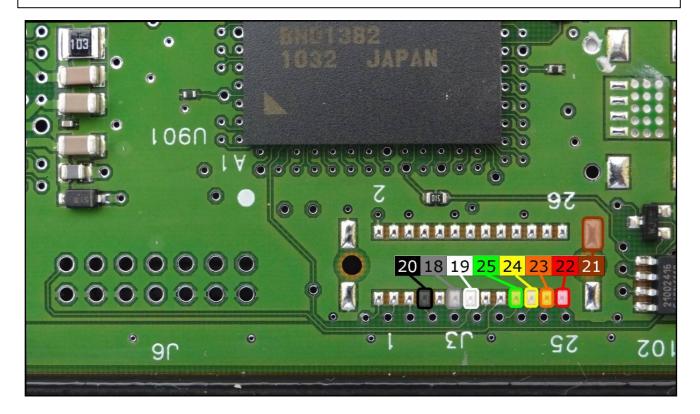

DIRECT CONNECTION – ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51

