
plugin 701-1022

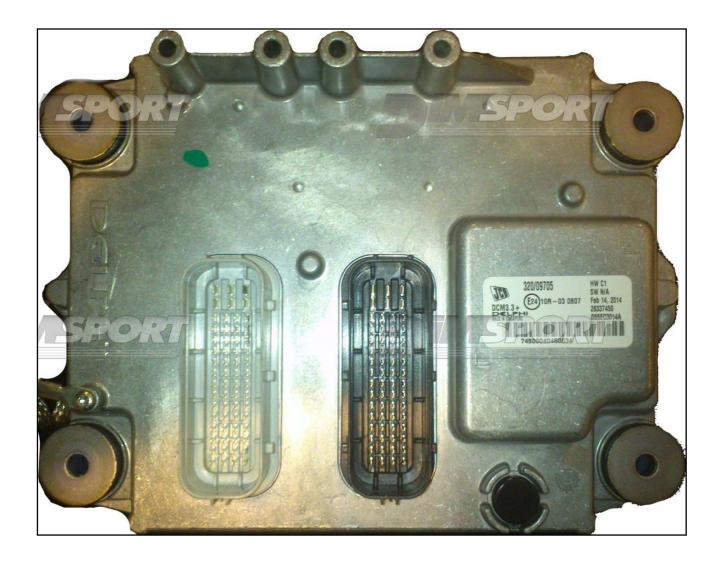




DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GN037C
BLU BLUE	POL5 CNF1	Farmer 1
VIOLA/GRIG	IO TENSIONE PROG. PROG. VOLTAGE	
MARRONE BROWN	RESET	

ECU CONNECTOR

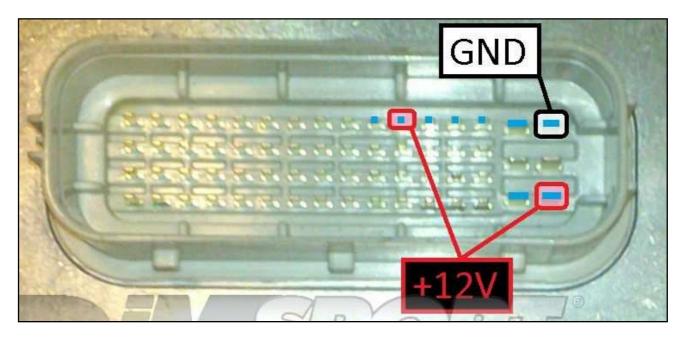


WARNING:

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION READING:

For the READING procedure use the FLAT cable F34NTF53

	1 25 2 26	
Pin	Colore	
, ,,,	Colour	
11	Non usato	
The state of the s	Not used Non usato	
1.2	Not used	
19	Non usato	
13	Not used	
14	Non usato	
2000	Not used Non usato	
15	Not used	
16	Blu	
10	Blue	
17	Viola	
	Violet Grigio	
18	Grey	
19	Bianco	
19	White	
20	Nero	
10.001.004	Black	
21	Marrone	
	Brown	
2.2	Rosso Red	
202	Arancio	
23	Orange	
24	Giallo	
Section	Yellow Verde	
2.5	Green	Marie Marie
26	Non usato	
20	Not used	

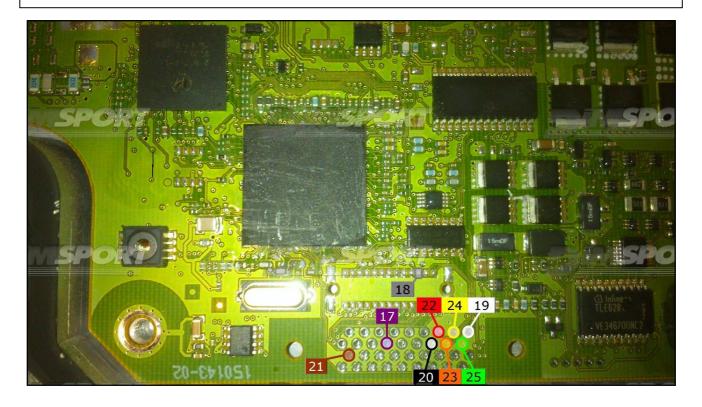

DIRECT CONNECTION WRITING:

For the WRITING procedure use the FLAT cable F34NTF51

