### PLUGIN 257

The lay-by pins are placed in the lower part of the ECU. Micro SH7058



#### **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON. Use the same power connection with the DIMA too.

COLORE FII		DESCRIZIONE DESCRIPTION	
ROS RED		POSITIVO DIRETTO POWER BATTERY	
100 A 100	ANCIO ANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NER BLA		MASSA GND	
	LLO LOW	KLINE	
VER GRE		CAN LOW	
BIAI	NCO TE	CAN HIGH	
GRI GRE		POL4 BOOT	FEDENDETC
BLU BLU		POL5 CNF1	Personal I
		TENSIONE PROG. PROG. VOLTAGE	- WHANNED
MAR	RRONE. DWN	RESET	

#### ECU CONNECTOR




#### WARNING :

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

#### **DIRECT CONNECTION – ECU READING:**

For the READING procedure use the FLAT cable F34NTF53

	1 25 12 26	
Pin	Colore	
	Colour	
11	Non usato Not used	
	Non usato	
12	Not used	
13	Non usato	
19	Not used	
14	Non usato Not used	
	Nor used Non usato	
15	Not used	
16	Blu	
+9	Blue	
17	Viola Violet	
10	Grigio	
18	Grey	
19	Bianco	
84445) 	White	
20	Nero Black	
21	Marrone Brown	
22	Rosso	
	Red Arancio	
23	Orange	
24	Giallo	
	Yellow Verde	
25	Green	
26	Non usato Not used	

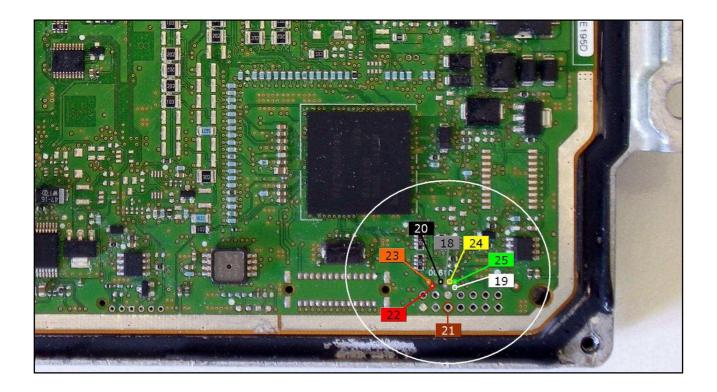

### **DIRECT CONNECTION – ECU WRITING:**

For the WRITING procedure use the FLAT cable F34NTF51

139 2410		
Pin	Colore Colour	
1	Marrone Brown	
2.	Non usato Not used	
3	Non usato Not used	
4	Giallo Yellow	
5	Verde Green	
6	Blu Blue	
7	Viola Violet	
8	Grigio Grey	
9	Bianco White	Mill Martine .
10	Nero Black	

