
plugin **244**The lay-by pins are placed in the lower part of the ECU.

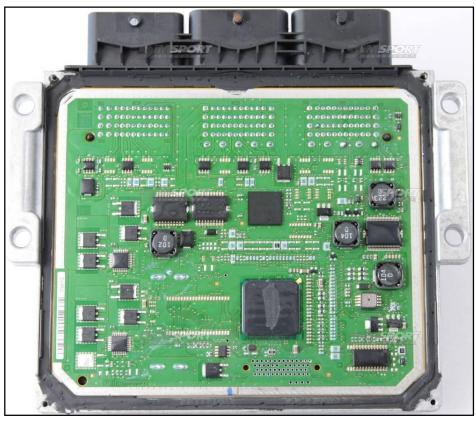

DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.


COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GV037C
BLU BLUE	POL5 CNF1	Fireman (1)
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	CHARLES
MARRONE BROWN	RESET*	


ECU CONNECTOR



J-TAG FREE WIRING CONNECTION


Connect the F34NTF53 wiring as explained here below:

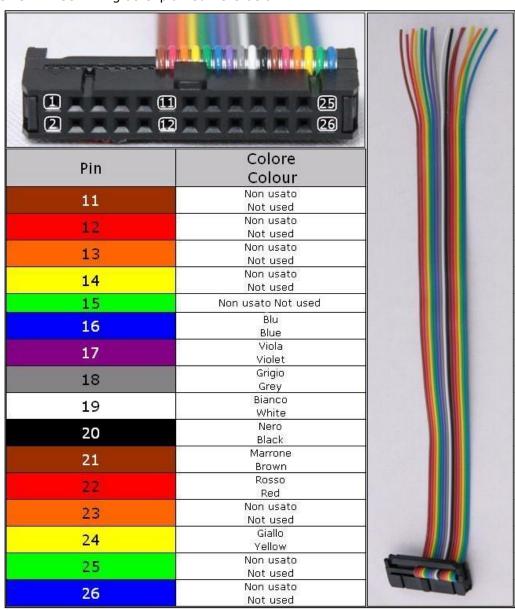

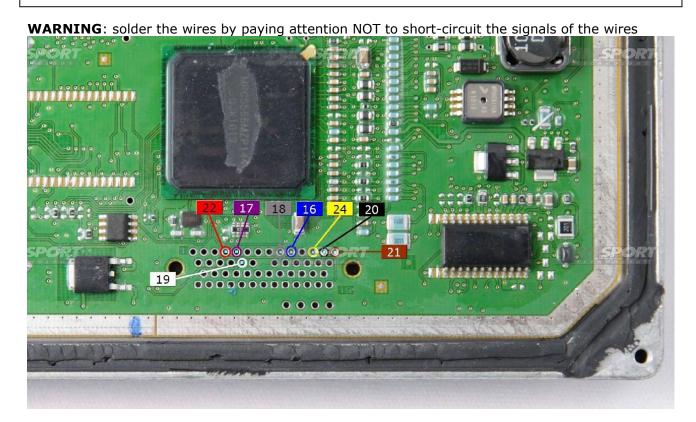



DIMA CONNECTION

JTAG communication pads are placed under the microprocessor.

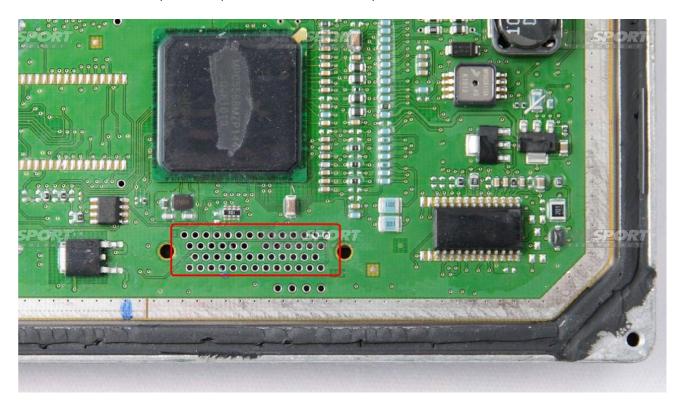

Use the DIMA adapter F34DM013

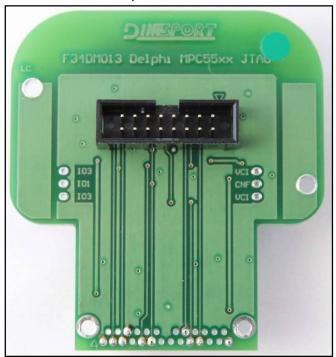

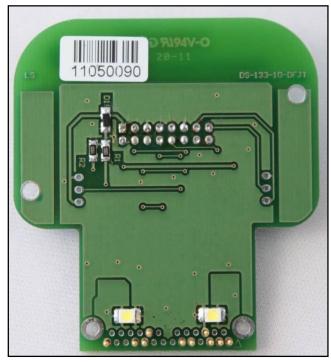

Place the F34DM013 adapter as shown in the following picture.

