
Trasdata PLUG IN 387-388-458-459-520-524-928-931-981-996-1034-1104-1689



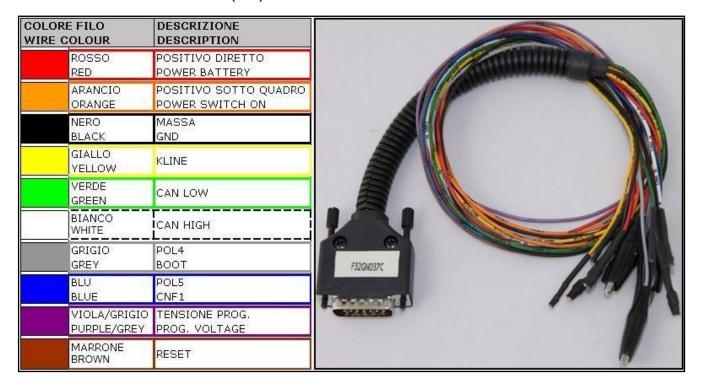

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.




ECU CONNECTOR



WARNING:

the ECU must be completely opened on both sides, on the lower side of the ECU it is necessary to make the 7 bridges (LINK), this is a mandatory operation to power the microprocessor and the reading pads. After opening the ECU and detaching the covers for the first time close it and set it back into the vehicle, then check the car runs ok. After checking the correct starting of the car it is possible to make the bridges, if you want the bridges can be left soldered as they are even after the modification.

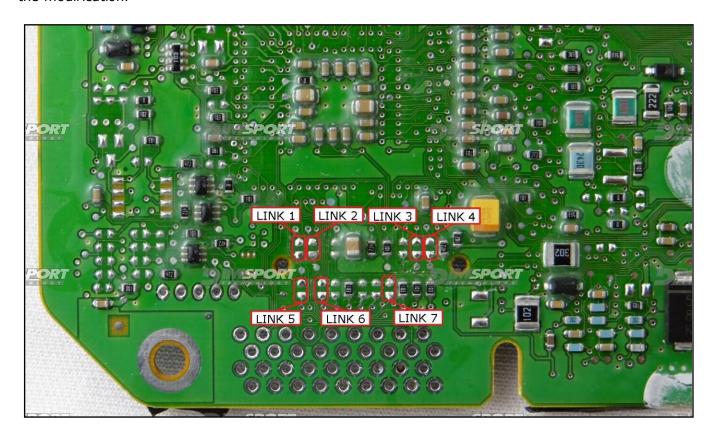


DIRECT CONNECTION – ECU READING:

For the READING procedure use the FLAT cable F34NTF53

	1 25 2 26	
Pin	Colore Colour	
200	Non usato	
11	Not used	
1.2	Non usato	
###	Not used	-
13	Non usato Not used	
	Not useu Non usato	
14	Not used	
15	Non usato	
13	Not used	
16	Non usato	
	Not used Viola	+
17	Violet	
10	Grigio	
18	Grey	
19	Bianco	
19	White	
20	Nero	
	Black	
21	Marrone	
	Brown	
22	Rosso	
	Red Arancio	
23	Orange	
24	Giallo	
24	Yellow	
25	Verde Green	Maria Maria
127.4%	Non usato	
26	Not used	

Connect the wires 17,18,19,20,21,22,23,24,25 avoiding any short circuit among the pads

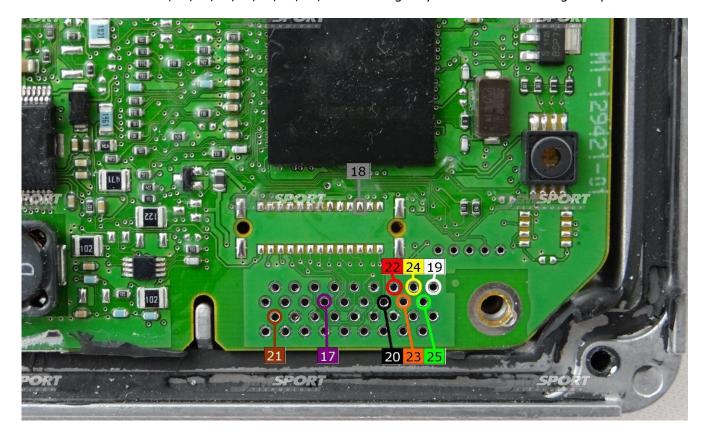

DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51

1 3 9 2 4 10		
Pin	Colore	
10.1040	Colour	
1	Non usato	
	Not used	
2	Non usato	
	Not used	
3	Non usato	
100.0	Not used Non usato	
4	Not used	
	Verde	
5	Green	
	Blu	
6	Blue	
7	Viola	
	Violet	
8	Grigio	
	Grey	
9	Non usato	Company of the Compan
	Not used	
10	Non usato	
5	Not used	

Connect the wires 5,6,7,8 avoiding any short circuit among the pads

