
plugin 055


Lay-by pins are located in the lower part of the ECU, In order to get access to them it is necessary to cut a part of the plastic cover.

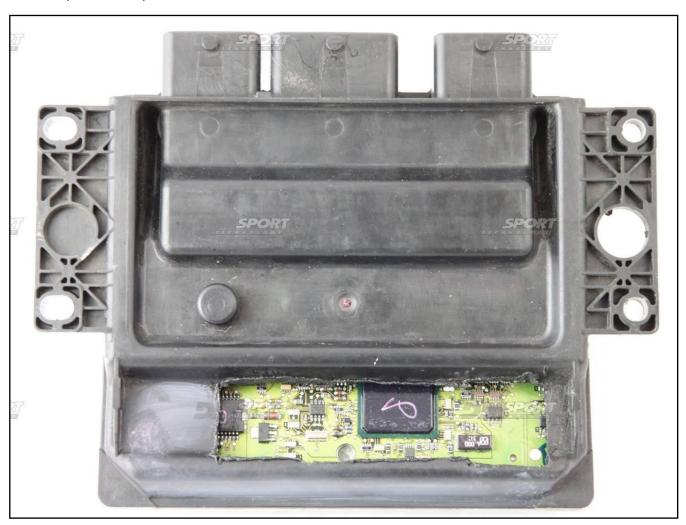

DIRECT CONNECTION


In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	F32GN037C
BLU BLUE	POL5 CNF1	December 1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	- WAND
MARRONE BROWN	RESET	

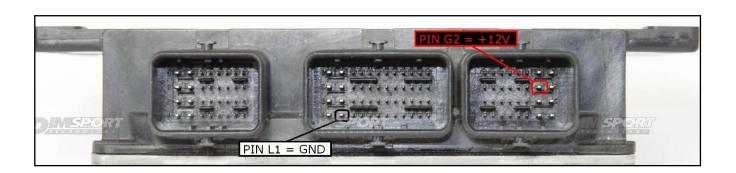

DIRECT CONNECTION FREE WIRING BDM

Connect the F34NTF051 wiring as shown in the following pictures:

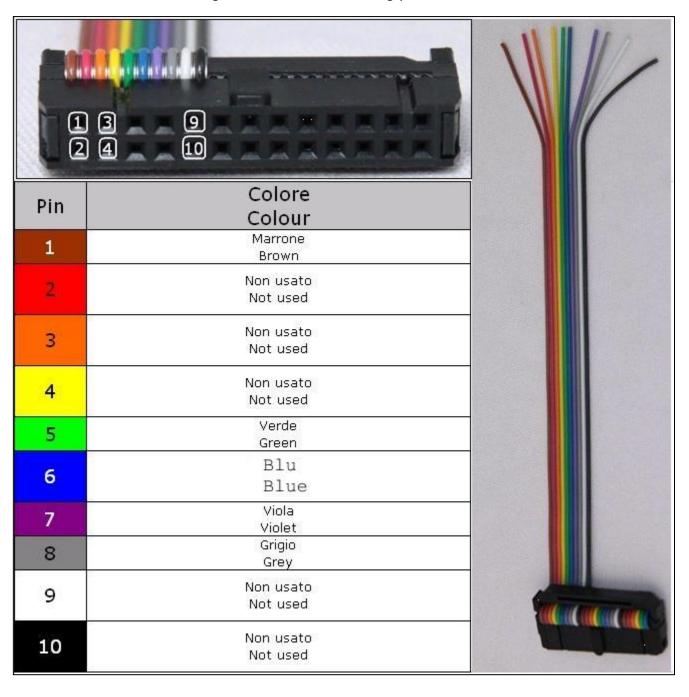

WARNING: connect the wirings without creating any short circuits among the signals

