

plugin ${\bf 258}$ The lay-by pins are placed in the lower part of the ECU. Micro SH7059

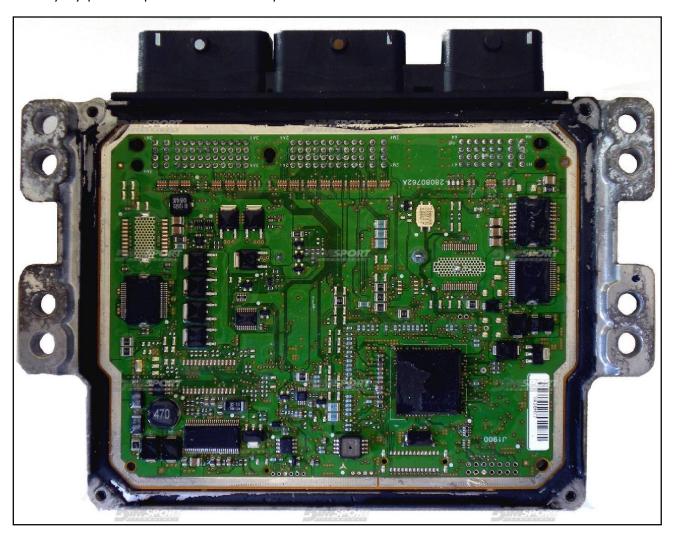

DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON.

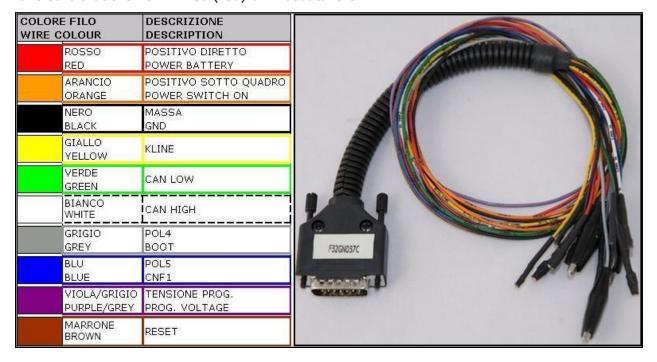

ECU CONNECTOR



WARNING:

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION – ECU READING:

For the READING procedure use the FLAT cable F34NTF53

	1 25 2 26	
Pin	Colore	
	Colour	
11	Non usato Not used	
1808 V	Not used Non usato	
12	Not used	
13	Non usato	
13	Not used	
14	Non usato Not used	
4.5	Non usato	
15	Not used	
16	Blu	
2.000	Blue Viola	
17	Violet	
18	Grigio	
18	Grey	
19	Bianco White	
19 (1965)	Nero	
20	Black	
21	Marrone Brown	
22	Rosso	
900	Red Arancio	
23	Orange	
24	Giallo	
	Yellow Verde	
25	Green	
26	Non usato Not used	-



DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51

