DENSO M32R196 32920-08J11 SUZUKI


plugin 528-853



DENSO M32R196 32920-08J11 SUZUKI

DIRECT CONNECTION

In order to connect to the ECU use the F34NTA13 wiring Make sure that the POWER led (red) on Trasdata is ON.

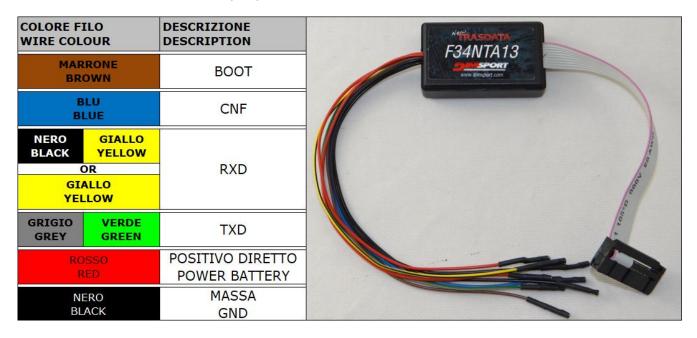

ECU CONNECTOR

