
## plugin 886

**WARNING:** for a correct identification of the ECU it is necessary to open the ECU and always check that the ECU numbers printed on the motherboard are the same as the numbers declared on the manual. Do not trust the numbers on the ECU cover.

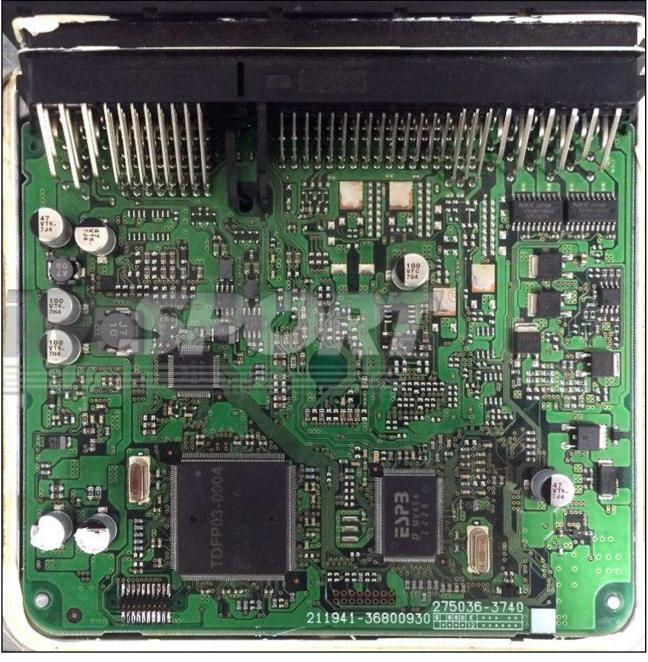




#### **DIRECT CONNECTION**

For the connection use the cable F32GN037C connected to the ECU.


Make sure that the POWER led (red) on Trasdata is ON.

These connections are required for all the connection approaches: loose wires, soldering adapter, DIMA adapter.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
	ROSSO RED	POSITIVO DIRETTO POWER BATTERY
	ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
	NERO BLACK	MASSA GND
18	GIALLO YELLOW	KLINE
	VERDE GREEN	CAN LOW
1 1 1	BIANCO WHITE	CAN HIGH
	GRIGIO GREY	POL4 BOOT
	BLU BLUE	POL5 CNF1
3	VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
	MARRONE BROWN	RESET

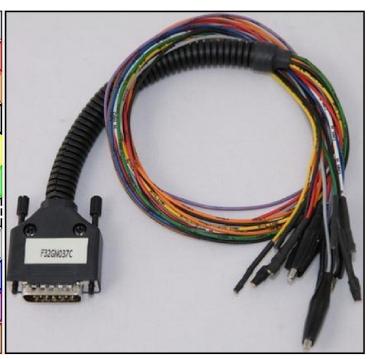

#### **ECU CONNECTOR**

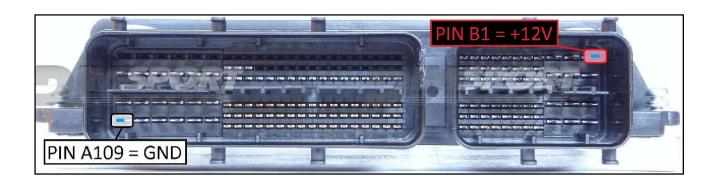


## **LOOSE WIRES CONNECTION:**

For the READING and WRITING procedure use the FLAT cable F34NTF53


	1 25 2 26	
Pin	Colore	
, r	Colour	
11	Non usato	
20000 A	Not used	<del>.</del>
1,2	Non usato Not used	
PROPERTY.	Not used Non usato	
13	Not used	
14	Non usato	
14	Not used	
15	Verde	
	Green Blu	
16	Blue	
47	Viola	
17	Violet	va d
18	Grigio	
10	Grey	
19	Bianco White	
9435	Nero	**
20	Black	
21	Marrone Brown	
2.2	Rosso	
44	Red	
23	Arancio Orange	
25 03	Giallo	
24	Yellow	
25	Verde	
5000	Green Non usato	
26	Not used	

**WARNING**: for a correct reading and writing operation it is necessary to perform a LINK between the pads displayed in the picture here below. Remove the LINK before placing back the ECU into the car.

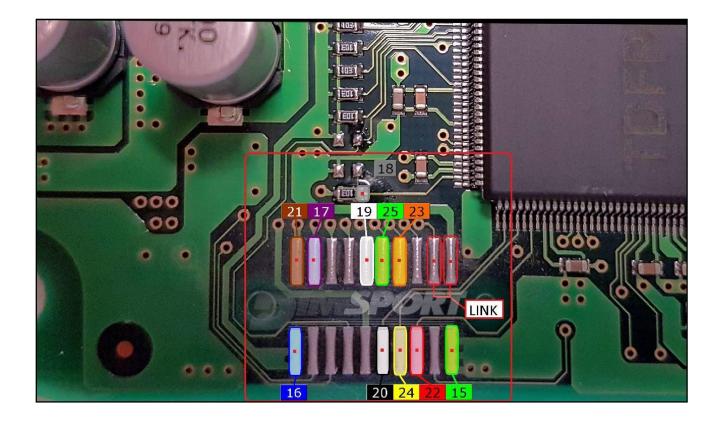


# F34NTA16 Soldering adapter connection or F34DM023 DIMA adapter connection.

In both cases, for a correct connection, it is necessary to identify the pin 1 for the reading \$ writing procedures and the pin 18 to enable the Microprocessor communication.

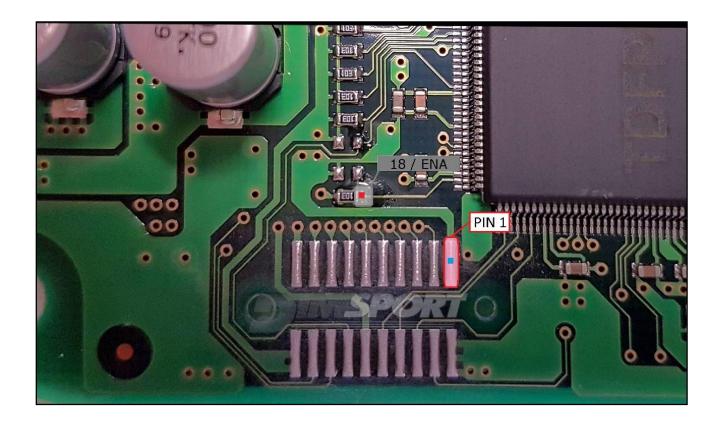


## F34NTA16 Soldering adapter connection

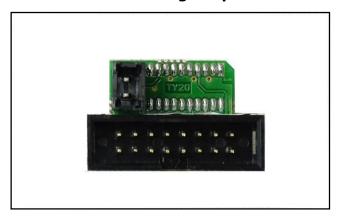




By using the grey wire supplied with the adapter connect the pad 18 (see pg.5) to the specific connector on the adapter itself.

The following picture of the F34NTA16 adapter connection is merely indicative.

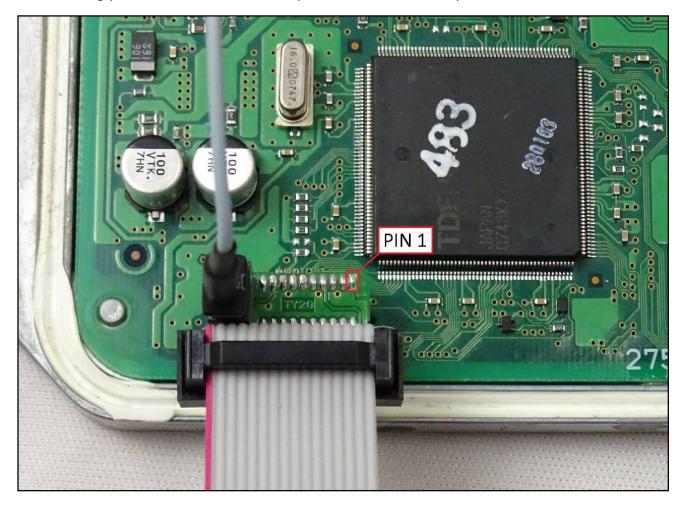

## F34DM023 DIMA adapter connection

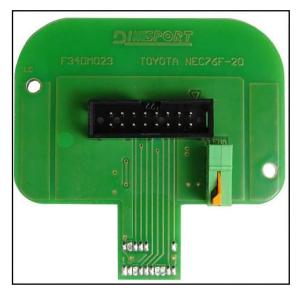



By using a wire connect the pad 18 (see pg.5) to the specific orange clamp ENA present on the  $F34DM023\ DIMA\ adapter$ .

The following picture of the F34DM023 DIMA adapter connection is merely indicative.

