PLUGIN 620




DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C. Make sure that the POWER led (red) on Trasdata is ON USE this connection for the ECU READING ONLY

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO GREY	POL4 BOOT	F320N057C
BLU BLUE	POL5 CNF1	Parameters / Aller
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	- WHATHER
MARRONE BROWN	RESET	

ECU CONNECTOR

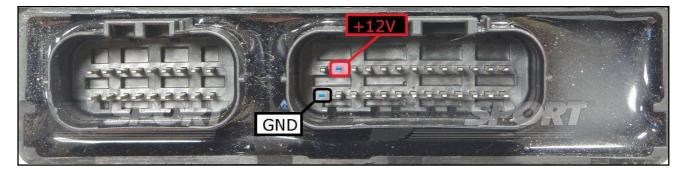

WARNING :


on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.


DIRECT CONNECTION – ECU READING:

For the READING procedure use the FLAT cable F34NTF53

Pin	Colore Colour			
11	Non usato Not used			
Masani Musica	Not used			
12	Not used			
13	Non usato Not used			
	Not used Non usato			
14	Not used			
15	Non usato Not used			
16	Blu Blue			
17	Viola			
	Violet			
18	Grigio Grey			
19	Bianco			
13	White			
20	Nero Black			
21	Marrone Brown			
22	Rosso			
8/28/	Red Arancio			
23	Orange			
24	Giallo Yellow			
	Verde			
25	Green	T-406		
26	Non usato Not used			

To get access to the communication pads For the reading procedure you must remove part of the silicon that covers the ECU board. After properly removing the silicon and before connecting the wirings please check that the vehicle starts fine and that there are no fault codes or warning lights on the dash<u>board</u>.

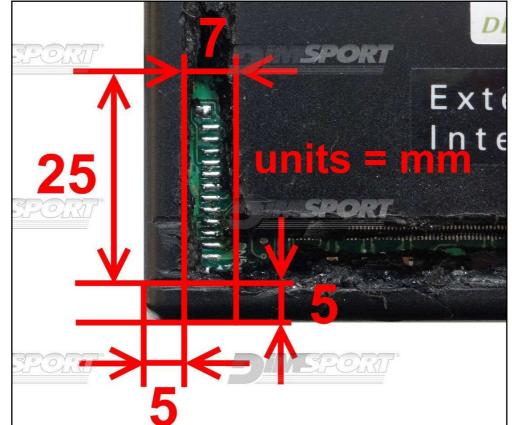

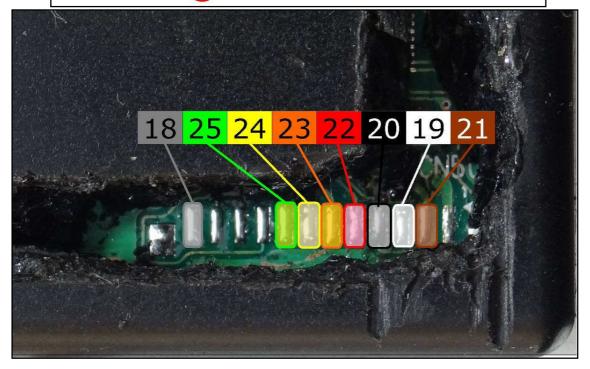

DIRECT CONNECTION – ECU WRITING:

For the WRITING procedure use the cable F32NTA13 directly connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON

COLORE F WIRE COL		DESCRIZIONE DESCRIPTION	F34NTA13
	RONE OWN	BOOT	
	LU LUE	CNF	
NERO BLACK	GIALLO YELLOW	RXD	
GRIGIO GREY	VERDE GREEN	TXD	
	ISSO ED	POSITIVO DIRETTO POWER BATTERY	
	ERO ACK	MASSA GND	

