
plugin 1660

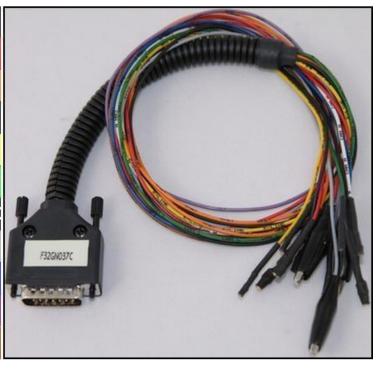


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON USE this connection for the ECU READING ONLY

| COLORE FILO | DESCRIZIONE | |
|------------------|-----------------------|--|
| WIRE COLOUR | DESCRIPTION | |
| ROSSO | POSITIVO DIRETTO | |
| RED | POWER BATTERY | |
| ARANCIO | POSITIVO SOTTO QUADRO | |
| ORANGE | POWER SWITCH ON | |
| NERO | MASSA | |
| BLACK | GND | |
| GIALLO YELLOW | KLINE | |
| VERDE GREEN | CAN LOW | |
| BIANCO WHITE | CAN HIGH | |
| GRIGIO | POL4 | |
| GREY | BOOT | |
| BLU | POL5 | |
| BLUE | CNF1 | |
| VIOLA/GRIGIO | TENSIONE PROG. | |
| PURPLE/GREY | PROG. VOLTAGE | |
| MARRONE BROWN | RESET | |



ECU CONNECTOR

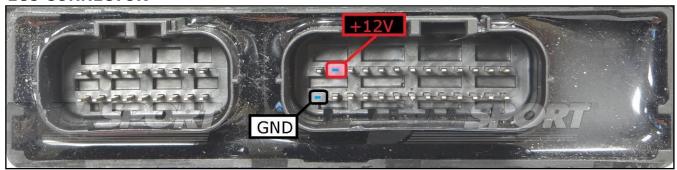

WARNING:


on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.


DIRECT CONNECTION - ECU READING:

For the READING procedure use the FLAT cable F34NTF53

| | 11 25 12 26 | |
|----------|-----------------------|---|
| Pin | Colore | |
| J | Colour | |
| 11 | Non usato | |
| 255 AC 4 | Not used Non usato | |
| 12 | Not used | |
| 12 | Non usato | |
| 13 | Not used | |
| 14 | Non usato | |
| | Not used Non usato | |
| 15 | Not used | |
| 16 | Non usato | |
| 10 | Not used | |
| 17 | Non usato Not used | |
| | Grigio | |
| 18 | Grey | |
| 19 | Bianco | |
| 19 | White | |
| 20 | Nero | |
| 400 | Black | |
| 21 | Marrone | |
| | Brown | |
| 22 | Rosso Red | |
| 976 | Arancio | |
| 23 | Orange | |
| 24 | Giallo Vollou | |
| | Yellow Verde | |
| 25 | Green | |
| 26 | Non usato | - |
| | Not used | |

To get access to the communication pads For the reading procedure you must remove part of the silicon that covers the ECU board. After properly removing the silicon and before connecting the wirings please check that the vehicle starts fine and that there are no fault codes or warning lights on the dashboard.

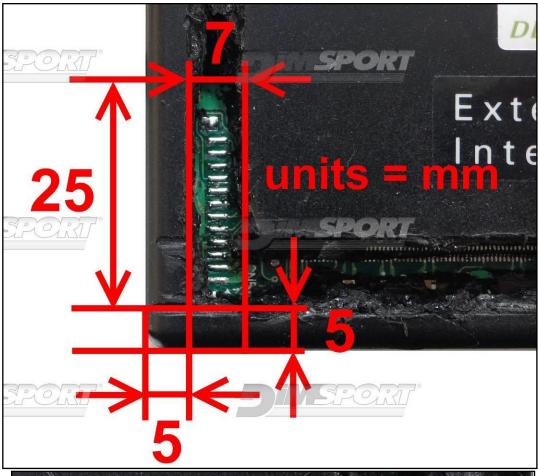

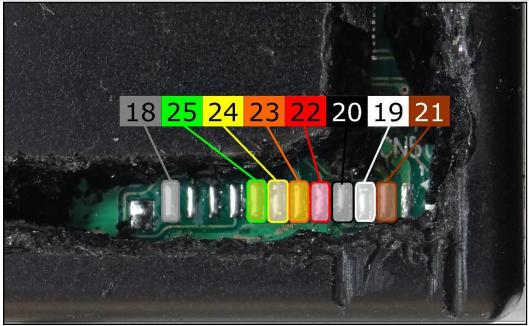

DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the cable F34NTA13 directly connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON

| COLORE F | | DESCRIZIONE DESCRIPTION | F34NTA13 |
|------------------|--|--------------------------------|--------------------------|
| MARRONE BROWN | | воот | SPORT www.dimepot.com |
| | BLU LUE | CNF | |
| GI | GIALLO YELLOW OR ALLO LLOW | RXD | |
| GRIGIO GREY | VERDE GREEN | TXD | |
| ROSSO RED | | POSITIVO DIRETTO POWER BATTERY | |
| | ERO _ACK | MASSA GND | |

