
plugin 1649

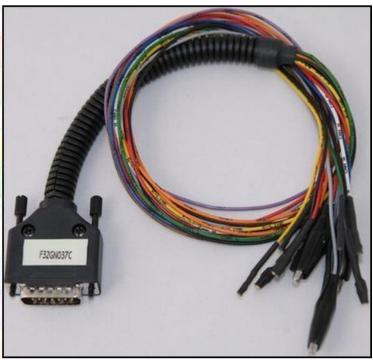


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C/D. Make sure that the POWER led (red) on Trasdata is ON USE this connection for the ECU READING ONLY

COLORE FILO	DESCRIZIONE	
WIRE COLOUR	DESCRIPTION	
ROSSO	POSITIVO DIRETTO	
RED	POWER BATTERY	
ARANCIO	POSITIVO SOTTO QUADRO	
ORANGE	POWER SWITCH ON	
NERO	MASSA	
BLACK	GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	ICAN HIGH	
GRIGIO	POL4	
GREY	BOOT	
BLU	POL5	
BLUE	CNF1	
	TENSIONE PROG. PROG. VOLTAGE	
MARRONE BROWN	RESET	



ECU CONNECTOR

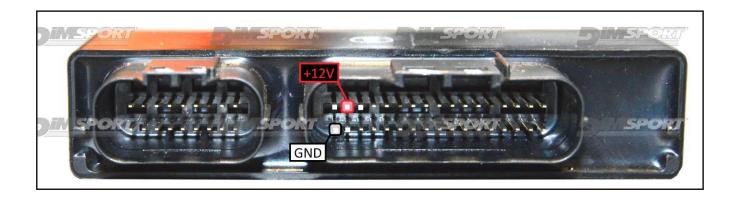

WARNING:


on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.


DIRECT CONNECTION - ECU READING:

For the READING procedure use the FLAT cable F34NTF53

	11 25 12 26	
Pin	Colore Colour	
11	Non usato Not used	
12	Non usato	
**	Not used	
13	Non usato Not used	
14	Non usato	
14	Not used	
15	Non usato Not used	
	Not used Non usato	
16	Not used	
17	Non usato	
(100)	Not used Grigio	
18	Grey	
19	Bianco	
19	White	
20	Nero	
	Black	
21	Marrone	
100 per	Brown	
2.2	Rosso Red	
	Arancio	
23	Orange	
24	Giallo Yellow	
OMESS.	Verde	
25	Green	
26	Non usato Not used	-

To get access to the communication pads For the reading procedure you must remove part of the silicon that covers the ECU board. After properly removing the silicon and before connecting the wirings please check that the vehicle starts fine and that there are no fault codes or warning lights on the dashboard.

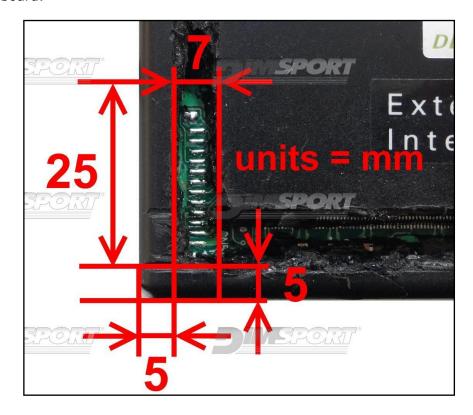

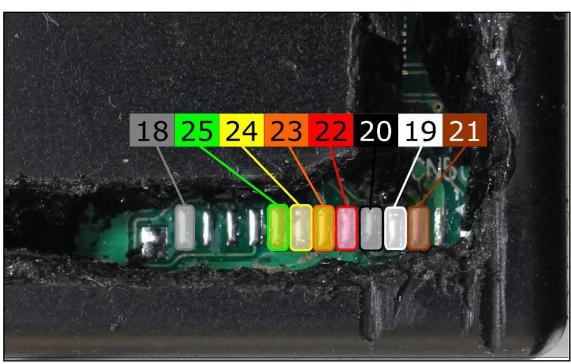

DIRECT CONNECTION - ECU WRITING:

For the WRITING procedure use the cable F34NTA13 directly connected to the ECU. Make sure that the POWER led (red) on Trasdata is ON

COLORE F		DESCRIZIONE DESCRIPTION
MARRONE BROWN		воот
	BLU LUE	CNF
GI	GIALLO YELLOW OR ALLO LLOW	RXD
GRIGIO GREY	VERDE GREEN	TXD
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	OSSO RED	POSITIVO DIRETTO POWER BATTERY
	IERO LACK	MASSA GND

