
# plugin 395

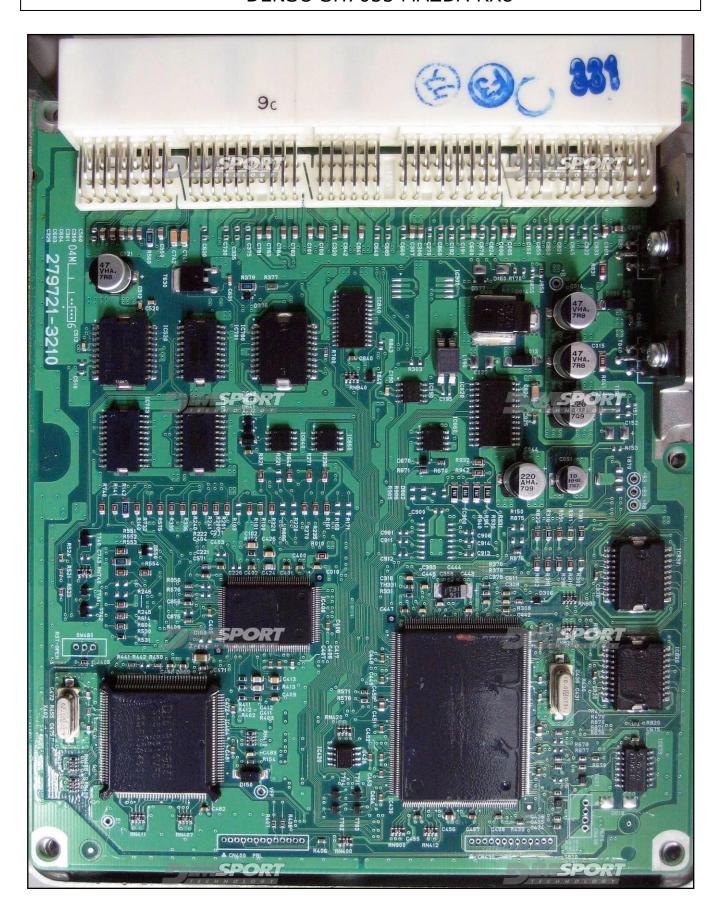





#### **DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C/D Make sure that the POWER led (red) on Trasdata is ON.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION	
	ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
	ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
	NERO BLACK	MASSA GND	
	GIALLO YELLOW	KLINE	
	VERDE GREEN	CAN LOW	
	BIANCO WHITE	ICAN HIGH	
	GRIGIO GREY	POL4 BOOT	
	BLU BLUE	POL5 CNF1	
		TENSIONE PROG. PROG. VOLTAGE	
	MARRONE BROWN	RESET	

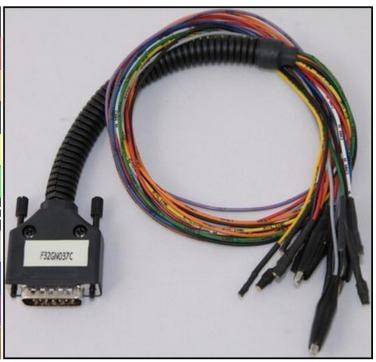

#### **ECU CONNECTOR**

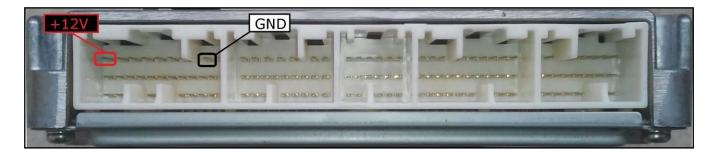

#### **WARNING:**

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure

#### **DIRECT CONNECTION - ECU READING:**

For the READING procedure use the FLAT cable F34NTF53

	11 25 12 26	
Pin	Colore Colour	
11	Non usato Not used	
1.2	Non usato Not used	
13	Non usato Not used	
14	Non usato Not used	
15	Non usato Not used	
16	Blu Blue	
17	Viola Violet	
18	Grigio Grey	
19	Bianco White	
20	Nero Black	
21	Marrone Brown	
22	Rosso Red	
23	Arancio Orange	
24	Giallo Yellow	
25	Verde Green	
26	Non usato Not used	

For a correct soldering procedure clean very well the soldering lay-by pins from the plastic film. We suggest you to use fine grit glass-paper smoothing by gentle pressure on the connection lay by pins.



#### **DIRECT CONNECTION - ECU WRITING:**

For the WRITING procedure use the FLAT cable F34NTF51


1 3 9 2 4 10		
Pin	Colore Colour	
W. C.	The state of the s	
1	Marrone	
	Brown	
2	Non usato	
	Not used Non usato	
3	Not used	
	Giallo	
4	Yellow	
	Verde	
5	Green	
6	Blu	
O.	Blue	
7	Viola	
	Violet	
8	Grigio	
	Grey	
9	Bianco	
	White Nero	
10	Nero Black	


For a correct soldering procedure clean very well the soldering lay-by pins from the plastic film. We suggest you to use fine grit glass-paper smoothing by gentle pressure on the connection lay by pins.




#### **ECU READING - DIMA CONNECTION**

Power the ECU with the wiring F32GN037C. Use the DIMA adapter F34DM016.

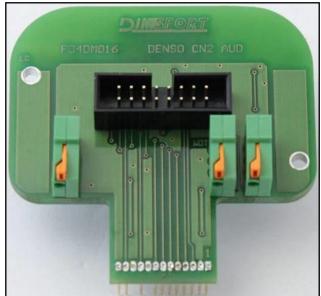

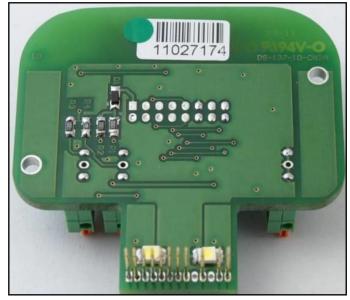

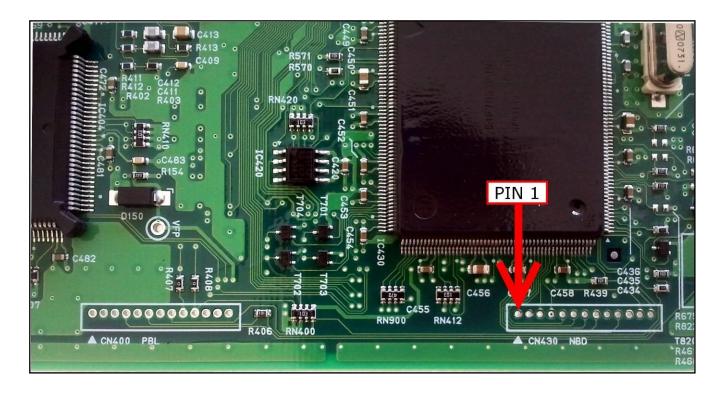

#### **ECU WRITING - DIMA CONNECTION**

Power the ECU with the wiring F32GN037C. Use the DIMA adapter F34DM017.



